

Hotmoon Cocoon 2 (Model HMNL06)

Hotmoon Cocoon 2 Sound Machine User Manual

Model: Cocoon 2 (HMNL06)

1. INTRODUCTION

The Hotmoon Cocoon 2 Sound Machine is designed to enhance your sleep, relaxation, and focus with a wide array of soothing sounds and ambient lighting. This device features dual-speakers for rich audio, 40 distinct sounds, 8 night light colors, and flexible timer options. Please read this manual thoroughly to ensure proper use and maintenance of your device.

2. SAFETY INFORMATION

WARNING: This product emits sound. Prolonged exposure to high sound levels can cause hearing damage. To reduce risk, avoid prolonged use at high volume levels. Do not use this product as a toy. This product is intended for use by adults and should not be used by children. To prevent risk of electric shock, do not operate this product if the power cord is damaged. Unplug the product from the power source before cleaning.

3. PACKAGE CONTENTS

- Hotmoon Cocoon 2 Sound Machine
- 4.9ft (1.5m) USB Type-C Cable

Note: A power adapter is not included. Please use a compatible USB power adapter (e.g., a standard phone charger) to power the device.

Plug In Only, Not Rechargeable.

Package Includes

- Cocoon 2 Sound Machine
- 4.9ft Type-C Cable

Note: No adapter included, you need to prepare your own.



Image: The Hotmoon Cocoon 2 Sound Machine and its included 4.9ft USB Type-C cable. A power adapter is required and sold separately.

4. PRODUCT FEATURES

- **40 Soothing Sounds:** Includes 10 fan sounds, 10 nature tracks, 10 lullabies, and 10 ambient noises (including White, Pink, Brown, and Green noise).
- **Upgraded Dual-Speaker Design:** Delivers enhanced audio with richer bass, wider frequency response, and lower distortion.
- **8 Calming Night Lights:** Offers a selection of 8 soft, eye-friendly colors.
- **4 Timer Options:** Choose from 45 minutes, 90 minutes, 8 hours, or continuous play.
- **Intuitive Controls:** Easy-to-use buttons with one-touch operation.
- **Memory Function:** Remembers your last sound, volume, and light settings.
- **Plug-in Use Only:** Requires continuous power via the USB-C cable (no internal battery).

Hotmoon Upgraded Cocoon 2

Set anywhere, Dream anywhere.

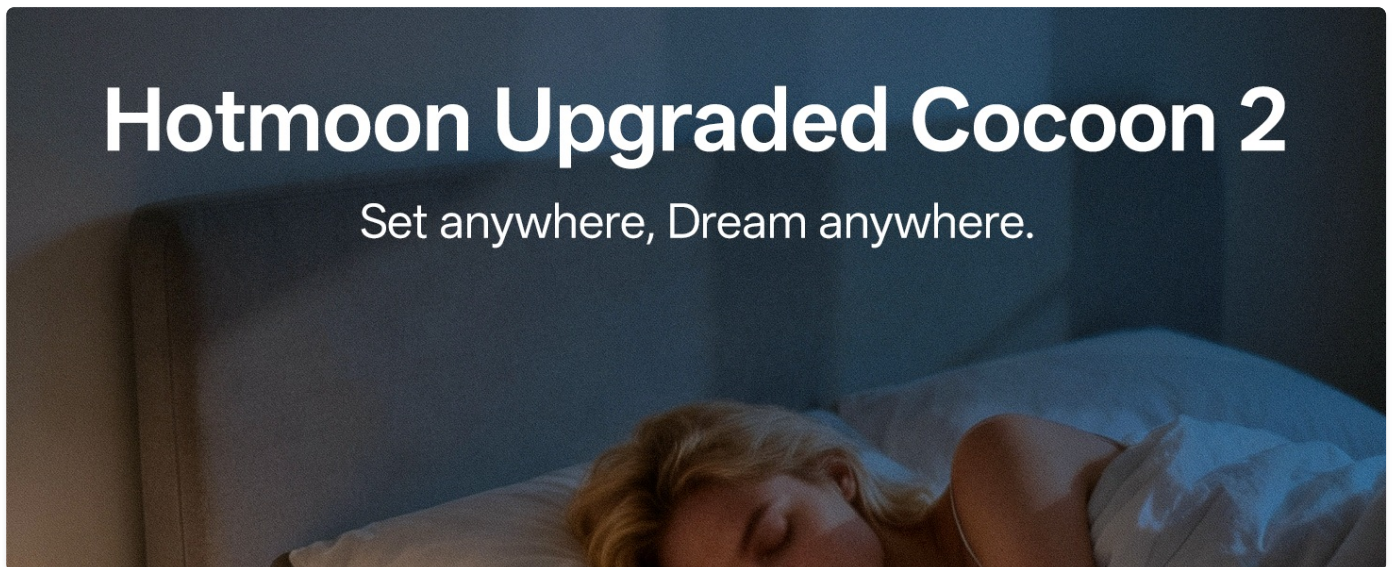


Image: Overview of the 40 soothing sound categories available on the Hotmoon Cocoon 2.

5. SETUP INSTRUCTIONS

1. **Connect Power:** Plug the provided USB Type-C cable into the sound machine. Connect the other end of the USB cable to a compatible USB power adapter (not included) and then plug the adapter into a wall outlet.
2. **Power On:** Press the 'Power' button () located on the control panel to turn on the sound machine.

3. **Initial Sound:** The device will start playing the last used sound or a default sound.

Upgraded Dual Driver to Deliver Higher Audio Performance



Image: Top view of the Hotmoon Cocoon 2 control panel, showing the intuitive touch buttons for various functions.

6. OPERATING INSTRUCTIONS

6.1. Sound Selection

The Cocoon 2 offers 40 unique sounds categorized into four groups: Noise, Fan, Nature, and Baby Melodies. Each category has 10 distinct sounds.

- Press the corresponding category button (e.g., for Baby Melodies, for Fan, for Nature, for Noise) to cycle through the 10 sounds within that category.
- The device will remember the last selected sound when powered off and on.

6.2. Volume Adjustment

- Press the 'Volume Up' () button to increase the sound volume.

- Press the 'Volume Down' () button to decrease the sound volume.
- There are 32 volume levels available.

6.3. Night Light Control

The device features 8 calming night light colors.

- Press the 'Light' () button to turn on the night light and cycle through the 8 available colors.
- Press and hold the 'Light' button for 2-3 seconds to turn off the night light. Pressing it again will turn it back on to the last selected color.
- The night light can be used independently or in conjunction with sounds.



Image: The Hotmoon Cocoon 2 showcasing its 8 relaxing night light colors.

6.4. Timer Function

Set a timer for automatic shut-off or allow continuous play.

- Press the 'Timer' () button to cycle through the available timer options: 45 minutes, 90 minutes, 8 hours, or continuous play (indicated by 'ON').
- The selected timer duration will be indicated by an illuminated LED above the timer button.



Image: A person relaxing while the Hotmoon Cocoon 2 displays its 4 timer settings: 45 min, 90 min, 8 hours, and continuous play.

7. SOUND LIST

The Hotmoon Cocoon 2 offers a diverse range of 40 sounds across four categories:

Noise Sounds	Fan Sounds	Nature Sounds	Baby Melodies
White Noise	Box Fan	Heavy Rain	Rock-A-Bye Baby
Green Noise	AC Fan	Rainstorm	Brahms
Brown Noise	Loud Fan	Thunderstorm	Schubert
Pink Noise	High Mellow Fan	Rain in Garden	The Blue Danube
Soothing Pink Noise	Large Fan	Morning Seashore	Hush to Sleep
Airplane Cabin	Low Mellow Fan	Sunset Waves	Dreaminess
Air Conditioner	Bladeless Fan	Creek	Twinkle Shiny Lights
Clothes Dryer	Exhaust Fan	Fireplace	Deep Sleep
Vacuum Cleaner	AC Motor Fan	Cricket	Heartbeat
Crowd	Misting Fan	Birds	Shushing

8. MAINTENANCE

To ensure the longevity and optimal performance of your Hotmoon Cocoon 2 Sound Machine, follow these simple maintenance guidelines:

- **Cleaning:** Always unplug the device from the power source before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Moisture:** Keep the device away from water or high humidity environments to prevent damage.

9. TROUBLESHOOTING

If you encounter any issues with your Hotmoon Cocoon 2 Sound Machine, please refer to the following common solutions:

- **Device not turning on:** Ensure the USB-C cable is securely connected to both the device and a working USB power adapter, and that the adapter is plugged into a live power outlet.
- **No sound:** Check the volume level using the 'Volume Up' () button. Ensure a sound category is selected.
- **Night light not working:** Press the 'Light' () button to cycle through colors or press and hold to turn it on if it was previously off.
- **Sound quality issues:** Ensure the device is placed on a stable, flat surface. Avoid placing it near other electronic devices that might cause interference.

For further assistance, please contact Hotmoon customer support.

10. SPECIFICATIONS

Feature	Detail
Product Dimensions	5 x 4.92 x 4.57 inches
Item Weight	13.76 ounces (0.39 kg)
Model Number	HMNL06
Power Source	Corded Electric (USB Type-C)
Number of Sounds	40
Night Light Colors	8
Timer Options	45 min, 90 min, 8 hours, Continuous
Material Type	Plastic

11. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official overview of the Hotmoon Cocoon 2 Sound Machine, demonstrating its features and design.

12. WARRANTY AND SUPPORT

Hotmoon products are manufactured with quality and reliability in mind. For information regarding warranty coverage, product registration, or technical support, please visit the official Hotmoon website or contact their customer service department directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question