

[Manuals.plus](#) /

› [Oclean](#) /

› Oclean X Lite P1K1 Electric Toothbrush User Manual

Oclean P1K1

Oclean X Lite P1K1 Electric Toothbrush User Manual

Model: P1K1

INTRODUCTION

Thank you for choosing the Oclean X Lite Electric Toothbrush. This manual provides detailed instructions for the safe and effective use of your new toothbrush. Please read it thoroughly before first use and keep it for future reference. The Oclean X Lite is designed to provide powerful yet gentle cleaning with its sonic vibrations, smart screen display, and multiple brushing modes, ensuring optimal oral hygiene.

SAFETY INFORMATION

- Keep this appliance out of reach of children.
- Do not use this product for any purpose other than oral hygiene.
- Consult a dentist before use if you have severe periodontal disease or oral surgery.
- Replace the toothbrush head every 3 months, or sooner if the bristles are frayed, to maintain optimal cleaning performance and hygiene.
- Do not immerse the charging base in water or any other liquid.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

PACKAGE CONTENTS

Please check the package to ensure all items are present:

- Oclean X Lite Electric Toothbrush Handle
- Replacement Brush Head
- USB Type-C Charging Cable
- User Manual

パッケージ内容

電動歯ブラシ本体*1 替えブラシ*1 USB Type-cケーブル*1 取扱説明書*1



Image: The Oclean X Lite Electric Toothbrush package contents, including the toothbrush handle, a brush head, a USB-C cable, and the user manual.

SETUP

1. Attaching the Brush Head

Align the brush head with the metal shaft on the toothbrush handle and push it down firmly until it clicks into place. Ensure it is securely attached before use.

2. Initial Charging

Before first use, fully charge the toothbrush. Connect the USB Type-C cable to the charging port at the bottom of the handle and plug the other end into a compatible USB power adapter (not included). The screen will indicate charging status. A full charge typically takes approximately 3 hours.

3時間急速充電で 最大40日間使用可能

旅行でも出張でも安心使用します。

最大
40 日間
使用可能

3 時間
急速充電で



Image: The Ocliclean X Lite Electric Toothbrush connected to a USB-C charging cable, illustrating its fast charging capability and long battery life of up to 40 days.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the power button on the handle to turn the toothbrush on or off.

2. Selecting a Brushing Mode

While the toothbrush is on, press the power button repeatedly to cycle through the available brushing modes. The selected mode will be displayed on the screen.

3. Brushing Technique

Apply a small amount of toothpaste to the brush head. Place the bristles at a 45-degree angle to your gum line. Move the brush

slowly across your teeth, allowing the sonic vibrations to clean each tooth surface. Do not scrub vigorously. The built-in timer will guide you through the recommended brushing duration.

36,000 回/分

高速音波振動

歯の表面や歯間の細かい汚れやプラークを効率よく除去し、
歯茎にもやさしいです。



Image: A close-up of the Oclean X Lite brush head demonstrating its high-frequency sonic vibrations (36,000 times per minute) for effective plaque removal.

CLEANING MODES

The Oclean X Lite offers 5 distinct cleaning modes to cater to various oral care needs:

- **Daily Clean:** Standard mode for everyday plaque removal.
- **Deep Clean:** Provides a more intense cleaning for thorough plaque removal.
- **Sensitive:** Gentle cleaning for sensitive teeth and gums.
- **Whitening:** Designed to help remove surface stains for brighter teeth.
- **Massage:** Gently stimulates and massages gums.

好みのモードを設定 5 種類のモードがあって、
歯茎が気になる方、知覚過敏が気になる方、コーヒーをよく飲む方など、自分に合ったモードが選択できます



クリーンモード

強さ: ★★★★★

時間: 2分30秒



モード

強さ: ★★★★★

時間: 2分30秒



ホワイトモード

強さ: ★★★★★★

時間: 2分30秒



マッサージモード

強さ: ★★★★★

時間: 2分



ガムケアモード

強さ: ★★★★★

時間: 2分



Image: The Oclic X Lite toothbrush screen displaying the five available cleaning modes: Daily Clean, Deep Clean, Sensitive, Whitening, and Massage, along with their respective intensity and duration indicators.

BRUSHING GUIDANCE

Smart Display for Brushing Zones

The Oclic X Lite features a smart display screen that provides real-time feedback on your brushing. It visually indicates areas of your mouth that have been thoroughly cleaned and those that require more attention, helping you achieve comprehensive coverage.

AIで歯磨きが見える！ 磨き残しゼロを簡単実現！

ワンタッチボタン

白色の部分
完全にきれいに磨れたエリア

赤色の部分
磨き残しエリア

再ブラッシング



Image: A close-up of the Oclean X Lite screen displaying a tooth diagram. White areas indicate thoroughly cleaned zones, while red areas highlight missed brushing zones, providing visual feedback for improved brushing.

Supplementary Brushing Guidance

After your brushing session, the Oclean X Lite can automatically set a supplementary brushing guide. With a single click, the toothbrush will highlight missed areas on the screen, allowing you to target these zones for additional cleaning. This feature can lead to up to 38% more plaque removal for a deeper clean.

ワンクリックで再 ブラッシングガイドンス

ステップ1

ステップ1：ブラッシング後にラ
ージスクリーン上で、磨き足りない部分
や完全に汚れが落ちていないエリ
アを表示します



ステップ2

ステップ2:ワンクリックで
再ブラッシングガイドンス



ステップ3

ステップ3：徹底的に口腔ケア



Image: A three-step visual guide demonstrating the supplementary brushing feature. It shows the screen identifying missed areas, the user re-brushing those areas, and the resulting thorough oral care.

BATTERY AND CHARGING

The Oclean X Lite is equipped with a long-lasting battery, providing up to 40 days of usage on a single charge. It features an efficient USB-C charging system for convenience, making it ideal for travel and daily use. A full charge takes approximately 3 hours.

MAINTENANCE

Cleaning the Toothbrush

- After each use, rinse the brush head thoroughly under running water.
- Wipe the toothbrush handle with a damp cloth to remove any toothpaste residue.
- Do not use abrasive cleaners or harsh chemicals on the toothbrush.

Replacing the Brush Head

For optimal hygiene and cleaning effectiveness, replace the brush head every 3 months, or sooner if the bristles appear worn or frayed. Oclean offers various brush head types, including professional clean brush heads with DuPont bristles for effective plaque removal, W-shaped brush heads for optimal tooth surface fit, and tongue cleaners for fresh breath.



Image: A visual representation of different Oclean brush head types, including a professional clean brush head, a W-shaped brush head, and a tongue cleaner, highlighting their specific features.

TROUBLESHOOTING

- **Toothbrush not turning on:** Ensure the battery is charged. If fully charged and still not turning on, contact customer support.
- **Toothbrush not charging:** Check if the USB-C cable is securely connected to both the toothbrush and the power source. Try a different USB power adapter.
- **Weak vibration:** Ensure the brush head is securely attached. If the issue persists, the battery might be low, or the brush head may need replacement.
- **Screen not responding:** Try restarting the toothbrush by holding the power button for a few seconds. If the problem continues, contact customer support.

SPECIFICATIONS

Model Number	P1K1
Brand	Oclean
Power Source	Battery Powered (1 12V battery required)
Special Features	Brushing Timer, Pressure Sensor, Screen Display
Age Range	Adult
Item Firmness	Medium

Manufacturer	Shenzhen Yunding Information Technology Co., Ltd.
Package Dimensions	8.82 x 3.9 x 1.26 inches
Item Weight	7.05 ounces

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Oclean website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question