

[Manuals.plus](#) /

› [Qaba](#) /

› Qaba Outdoor Freestanding Wave Slide Instruction Manual (Model 344-090V00GN)

Qaba 344-090V00GN

Qaba Outdoor Freestanding Wave Slide Instruction Manual

Model: 344-090V00GN

1. INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your Qaba Outdoor Freestanding Wave Slide. Please read all instructions carefully before assembly and use. Retain this manual for future reference.

The Qaba Outdoor Freestanding Wave Slide is designed for children aged 3-8 years, offering a fun and engaging outdoor play experience. It features a wavy design for an exciting ride and can be connected to a hose for water play.



Image 1.1: The Qaba Outdoor Freestanding Wave Slide in an outdoor setting.

2. SAFETY INFORMATION

WARNING: Adult supervision is required at all times when children are using the slide.

- **Age and Weight Limits:** This slide is suitable for children aged 3 to 8 years. The maximum weight capacity is 99 lbs (45 kg). Do not exceed this limit.
- **Secure Play:** The slide features a smooth surface to minimize injury risk. Handrails are provided at the top of the slide for added security during climbing.
- **Anti-Slip Design:** The start of the slide includes a raised anti-slip texture to prevent unexpected slips.
- **Stable Structure:** The slide is constructed with a metal frame and polypropylene (PP) for stability. Ensure all connections are tightened securely during assembly.
- **Placement:** Place the slide on a level, soft surface such as grass, sand, or wood chips. Ensure there is adequate clear

space around the slide to prevent collisions. Do not place on concrete or hard surfaces without appropriate safety matting.

- **Water Feature:** When using the sprinkler feature, ensure the hose connection is secure and water pressure is appropriate. Supervise children closely during water play to prevent slipping.
- **Inspection:** Regularly inspect the slide for any loose parts, damage, or wear and tear before each use. Do not allow children to use a damaged slide.



Image 2.1: Detail of safety features including handrails and anti-slip texture.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts are present and undamaged. Refer to the parts list (not provided in this document, typically found in the included paper manual) and the image below.



Image 3.1: The product is shipped in one package.

Typically, the package includes:

- Slide body (wavy green section)
- Metal support frame components
- Stairs/steps
- Handrails
- Assembly hardware (screws, bolts, nuts, washers, tools if included)
- Instruction manual (this document is a digital version)

4. ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults. Follow the step-by-step instructions provided in the physical manual included with your product. The general steps are outlined below:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify all parts against the parts list.
2. **Assemble the Frame:** Connect the metal frame components according to the diagrams. Ensure all connections are finger-tightened initially.
3. **Attach the Slide Body:** Secure the green slide body to the assembled frame.
4. **Install Handrails and Steps:** Attach the handrails to the top of the slide and secure the steps to the ladder section of the frame.
5. **Final Tightening:** Once all components are in place, systematically tighten all screws, bolts, and nuts using the provided tools. Do not overtighten.
6. **Stability Check:** Before first use, gently shake the assembled slide to ensure it is stable and all connections are secure.

Assembly Tip:

In some cases, bolt holes may not align perfectly. If this occurs, carefully check the orientation of the parts. If a minor misalignment persists, a small amount of force or a drill bit slightly larger than the bolt may be needed to widen the hole for proper fit. Exercise caution to avoid damaging the product.

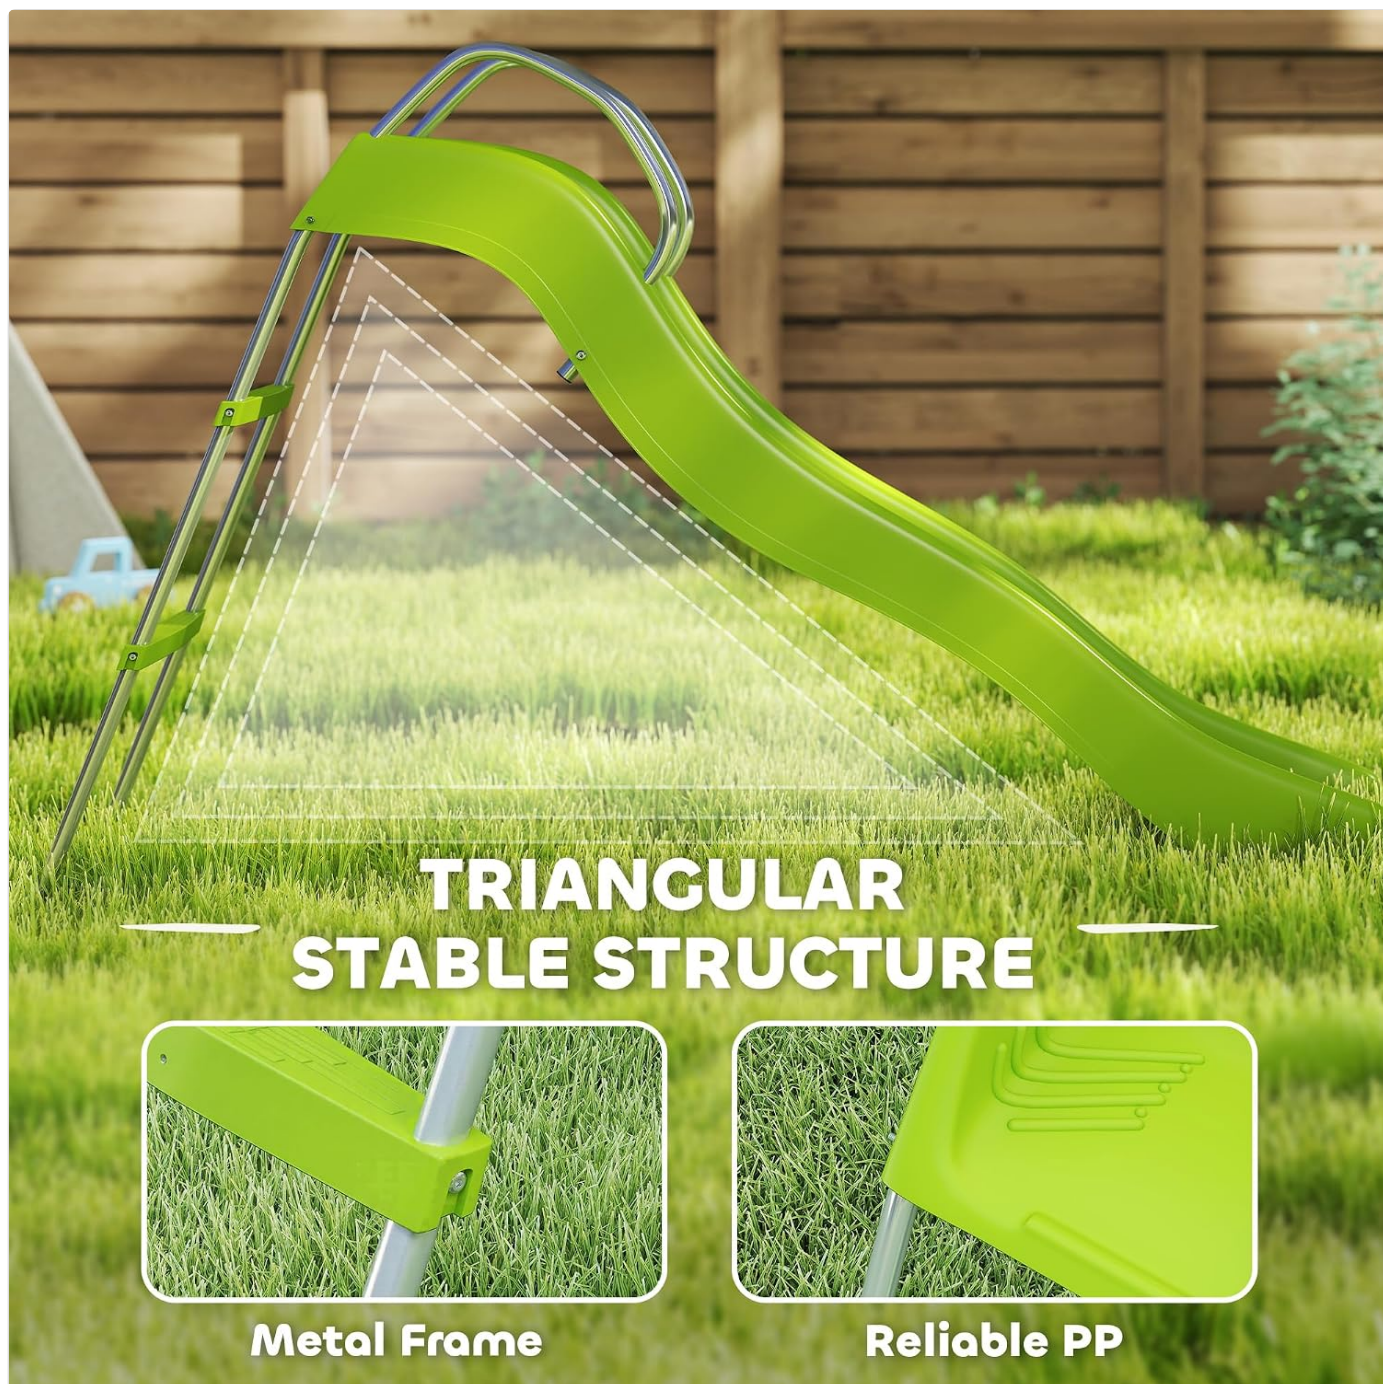


Image 4.1: The triangular stable structure of the slide, highlighting the metal frame and polypropylene components.

5. OPERATING INSTRUCTIONS

The Qaba Outdoor Freestanding Wave Slide is designed for simple and safe operation.

1. **Climbing:** Children should climb the two easy-to-climb stairs one at a time, holding onto the handrails for support.
2. **Sliding:** Children should sit at the top of the slide, facing forward, and push off gently. The 68.9-inch wavy design provides an undulating ride that naturally slows speed for added safety.
3. **Sprinkler Feature:** To activate the water park function, locate the built-in sprinkler hole on the slide. Attach a standard garden hose (not included) to this hole. Turn on the water at a moderate pressure. Ensure the hose connection is secure to prevent leaks.



Image 5.1: The wavy design of the slide, which helps to regulate speed.

6. MAINTENANCE

Regular maintenance will extend the life of your Qaba slide and ensure continued safe use.

- **Cleaning:** Clean the slide regularly with mild soap and water. Rinse thoroughly and allow to air dry. Avoid abrasive cleaners or harsh chemicals that could damage the plastic or metal finish.
- **Frame Protection:** The metal frame is coated with a waterproof powder finish for durability and weather resistance. However, prolonged exposure to moisture, especially if left on concrete, can lead to rust. If rust appears, clean it promptly and consider applying a rust-inhibiting paint.
- **Hardware Check:** Periodically check all nuts, bolts, and screws to ensure they remain tight. Retighten as necessary.
- **Storage:** During periods of non-use or inclement weather, consider storing the slide indoors or covering it to protect it from the elements.

7. TROUBLESHOOTING

Below are common issues and their potential solutions:

Problem	Possible Cause	Solution
Bolt holes do not align during assembly.	Parts are incorrectly oriented or minor manufacturing tolerance.	Double-check part orientation. Apply gentle pressure to align. If necessary, slightly widen the hole with a drill bit (use caution).
Rust appears on metal frame.	Prolonged exposure to moisture, especially on concrete surfaces.	Clean rust immediately. Consider applying rust-inhibiting paint. Store indoors or cover during wet weather. Avoid placing directly on concrete for extended periods.
Slide feels too steep or fast.	Perception of speed may vary; design is intended to slow speed.	Ensure proper supervision. Advise children to slide feet first. Consider placing a soft landing mat at the bottom of the slide.

8. SPECIFICATIONS

Feature	Detail
Overall Dimensions	72" L x 37.4" W x 42.9" H
Slide Length	68.9" (wavy section)
Slide Height	35.4" (top of slide)
Maximum Load Capacity	99 lbs (45 kg)
Recommended Age	3-8 years old
Material	Metal frame, Polypropylene (PP) slide
Color	Green
Model Number	344-090V00GN
UPC	196393232705

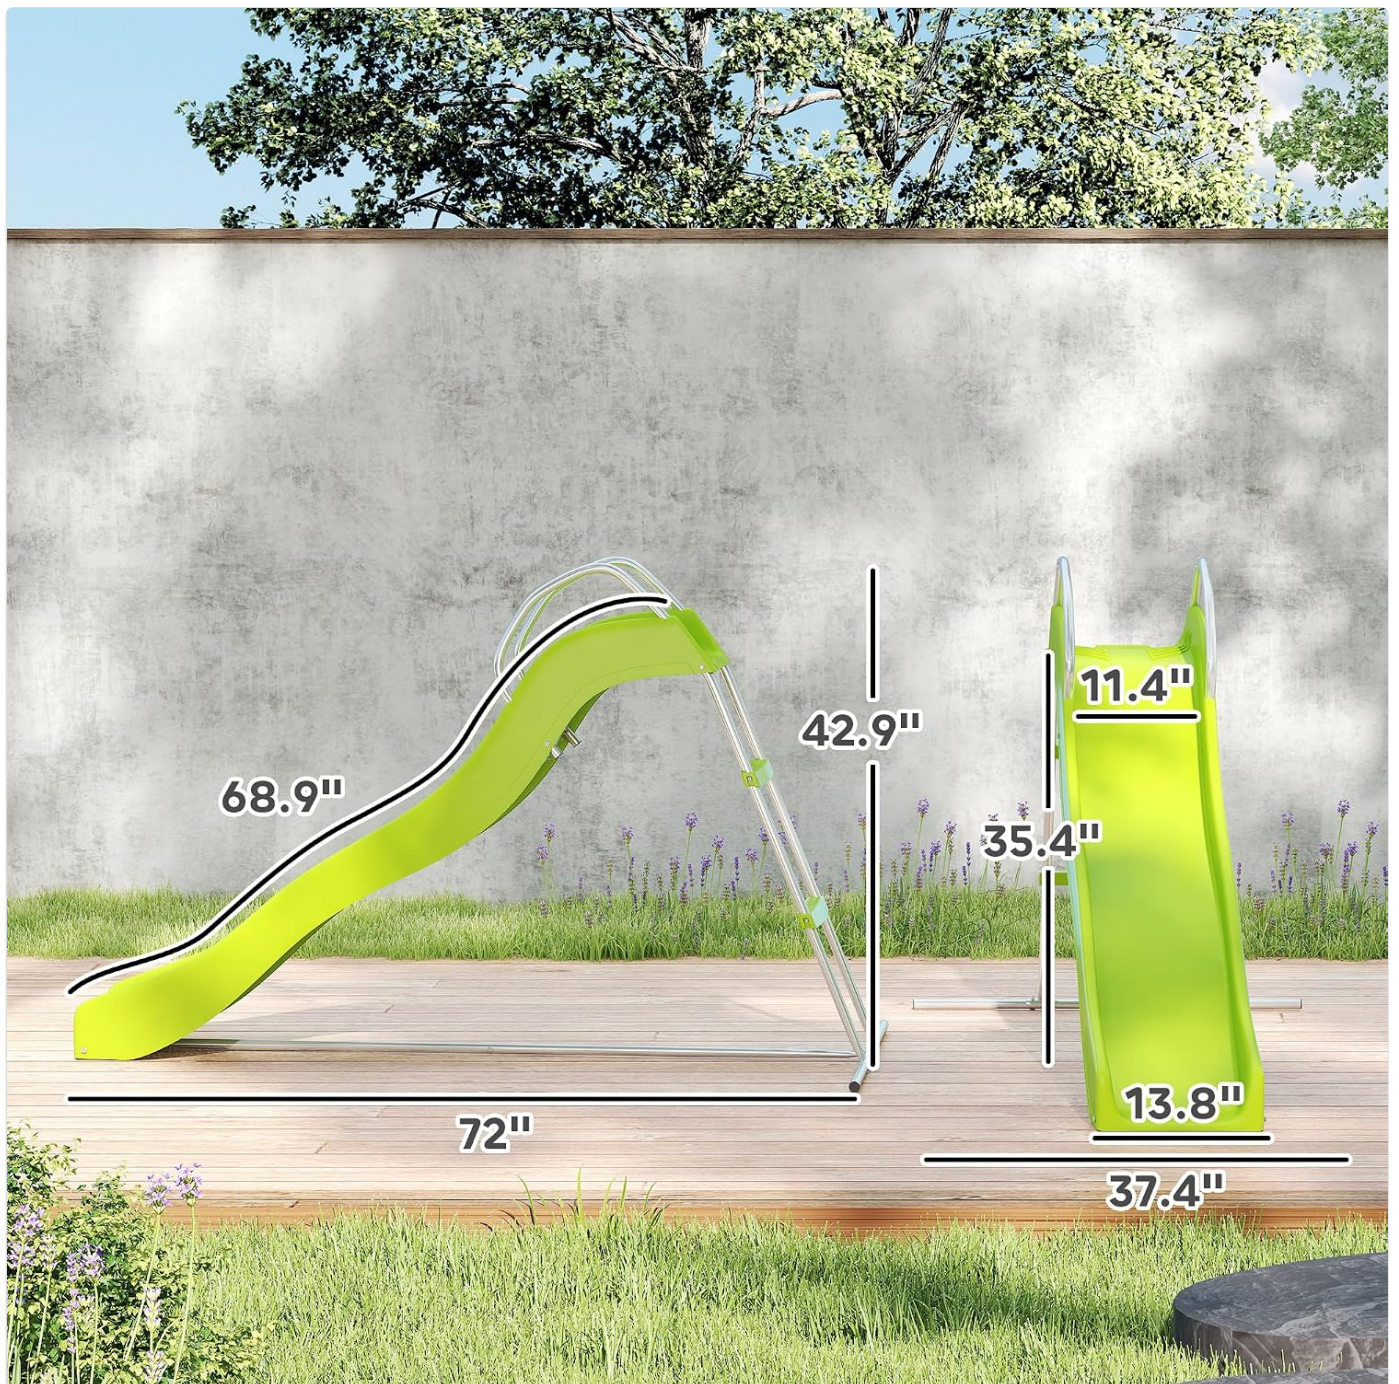


Image 8.1: Detailed dimensions of the Qaba Outdoor Freestanding Wave Slide.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact the manufacturer or seller directly. Refer to your purchase documentation for specific contact details.

Manufacturer: Aosom LLC

Brand: Qaba

You can often find support information on the brand's official website or through the retailer where the product was purchased.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DY15C1CK>

More documents and user manuals: <https://manuals.plus/>