

[Manuals.plus](#) /

› [TrailBlaze](#) /

› TrailBlaze 49.6" L Shaped Computer Desk User Manual

TrailBlaze TB-D491

TrailBlaze 49.6" L Shaped Computer Desk

USER MANUAL

Model: TB-D491

1. INTRODUCTION

Thank you for choosing the TrailBlaze 49.6" L Shaped Computer Desk. This versatile desk is designed to optimize your workspace with its reversible L-shape configuration, integrated power outlets, ergonomic monitor stand, and ample storage solutions. Please read this manual carefully before assembly and use to ensure proper setup and longevity of your product.

2. SAFETY INFORMATION

- Always assemble the desk on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not overload the desk or shelves beyond their intended weight capacity.
- Keep liquids away from the integrated power outlets to prevent electrical hazards.
- Do not allow children to climb on or play with the desk.
- Dispose of packaging materials responsibly.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Desk Panels (Main desktop, side desktop, shelf panels)
- Metal Frame Components (Legs, support bars)
- Assembly Hardware (Screws, bolts, Allen wrench)
- Integrated Power Outlet Unit (with 4 AC outlets and 1 USB port)
- Ergonomic Monitor Stands (2 units)
- Storage Bag (Fabric)
- Instruction Manual


4. SETUP AND ASSEMBLY

This desk features a reversible design, allowing the shelving unit to be installed on either the left or right side to best suit your space. Follow the steps below for assembly.

4.1 Reversible Configuration

Reversible L Shaped Desk

Customise your workspace by mounting the file drawer side on the left or right

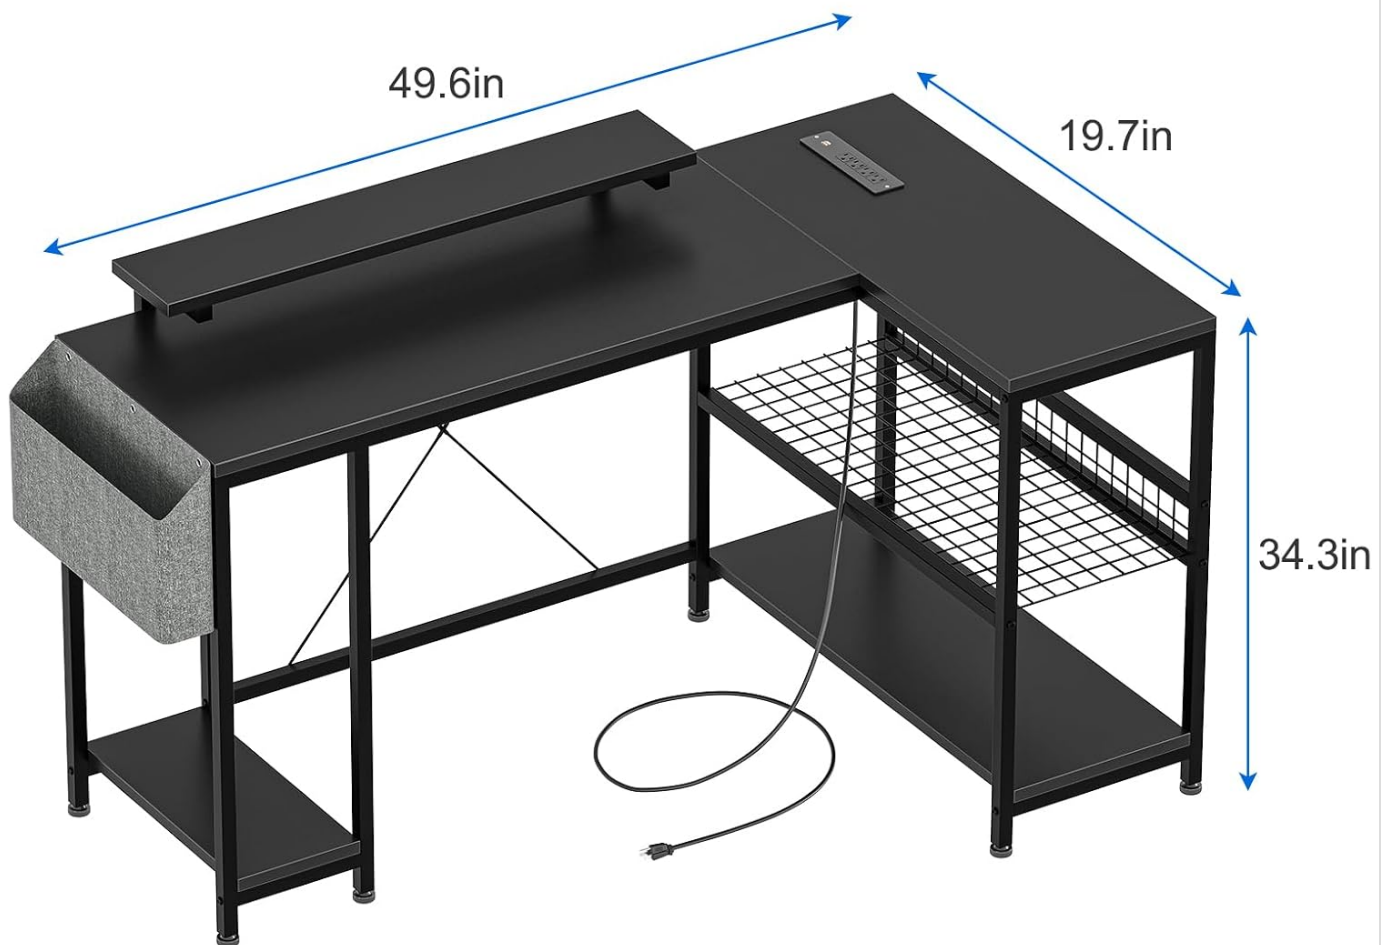

This image illustrates the two possible configurations for the L-shaped desk, with the shelving unit positioned on either the left or right side. The overall dimensions are 49.6 inches in length for the main desk section and 19.7 inches in depth, with a total height of 34.3 inches including the monitor stand.

Decide on your preferred orientation (left or right L-shape) before starting assembly, as this will determine how certain frame components and desk panels are attached.

4.2 Step-by-Step Assembly

1. **Unpack and Identify:** Carefully unpack all components and lay them out on a protected surface. Compare them with the package contents list to ensure everything is present.
2. **Assemble the Main Frame:** Attach the metal legs and support bars according to your chosen L-shape orientation. Ensure all connections are finger-tightened initially.
3. **Attach Desk Panels:** Secure the main desktop and side desktop panels to the assembled metal frame using the

provided screws.

4. **Install Shelving Unit:** Assemble the shelving unit frame and attach the wire mesh shelves. Secure this unit to the main desk frame on your chosen side (left or right).
5. **Install Power Outlet Unit:** Integrate the power outlet unit into the designated slot on the desktop. Ensure it is flush and securely fastened.



This image highlights the built-in power strip, featuring four standard AC outlets (125V 12A) and one USB charging port (5V-2A), along with its 6.6-foot power cord. This unit is designed to be flush-mounted into the desk surface for convenient access.

6. **Attach Monitor Stands:** Place the two removable monitor stands on the desktop as desired. These stands are designed to elevate your monitors for ergonomic viewing.



This image displays the gray fabric storage bag, which can be attached to the side of the desk for organizing documents or small items. It also shows the two removable monitor stands positioned on the desktop, providing elevated surfaces for displays.

7. **Attach Storage Bag:** Hook or attach the fabric storage bag to the side of the desk frame.
8. **Final Tightening:** Once all components are in place and aligned, fully tighten all screws and bolts using the provided Allen wrench. Do not overtighten.

5. OPERATING INSTRUCTIONS

5.1 Using the Integrated Power Outlets

The desk includes a built-in power strip with 4 AC outlets (125V 12A) and 1 USB charging port (5V-2A). Plug the desk's power cord into a standard wall outlet. You can then plug your devices directly into the desk's integrated outlets for convenient power access.

5.2 Utilizing the Ergonomic Monitor Stands



2 Removable Monitor Stands



This diagram demonstrates the ergonomic benefits of using a monitor stand. The 'correct' posture shows a user with their monitor elevated to eye level, promoting a straight back and neck. The 'incorrect' posture shows a user slouching with their monitor too low, leading to neck strain. The two removable monitor stands allow you to adjust your screen height for optimal viewing comfort and posture.

Place your monitors on the provided stands to elevate them to an ergonomic viewing height, reducing neck and eye strain. The stands are removable, allowing you to customize your setup.

5.3 Storage Solutions

- **Shelving Unit:** Use the two-tier shelving unit to store books, files, gaming consoles, or other office supplies. The wire mesh design allows for ventilation.
- **Fabric Storage Bag:** Attach the fabric bag to the side of the desk for easy access to documents, magazines, or smaller personal items.
- **CPU Stand:** The open space beneath the main desk section can accommodate a CPU tower, keeping it off the floor and well-ventilated.

6. MAINTENANCE

- **Cleaning:** Wipe down the desk surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Spills:** Immediately wipe up any spills to prevent water damage to the MDF board.
- **Fasteners:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Electrical Components:** Ensure the power cord and outlets are free from damage. Do not attempt to repair electrical components yourself.

7. TROUBLESHOOTING

- **Desk is Wobbly:** Ensure all assembly screws and bolts are fully tightened. Check that the desk is on a level surface. Adjust leveling feet if present.
- **Power Outlets Not Working:** Verify that the desk's main power cord is securely plugged into a functioning wall outlet. Check if the wall outlet itself is receiving power (e.g., by plugging in another device).
- **Missing Parts:** If you find any parts missing during assembly, refer to the 'Package Contents' section and contact customer support with your purchase details.

8. SPECIFICATIONS

Brand	TrailBlaze
Model Number	TB-D491
Model Name	L Shaped Computer Desk
Product Dimensions	44.88"D x 22.24"W x 4.53"H (Packaged) / 49.6"L x 19.7"D x 34.3"H (Assembled, approximate)
Color	Black
Base Material	Metal
Top Material Type	Metal (MDF board with varnished finish)
Finish Type	Varnished
Special Feature	Built-In USB Outlet, 4 AC Outlets, Reversible Design, Ergonomic Monitor Stands, Storage Shelves, Fabric Storage Bag
Item Weight	49.38 Pounds
Assembly Required	Yes
Shape	L-Shape
UPC	199108665720

9. WARRANTY INFORMATION

Specific warranty details for the TrailBlaze 49.6" L Shaped Computer Desk are not provided in this manual. Please refer to the product packaging, your purchase receipt, or the manufacturer's official website for comprehensive warranty terms and conditions. Keep your proof of purchase for any warranty claims.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact the retailer where you purchased the product or visit the official TrailBlaze website for support contact information. When contacting support, please have your model number (TB-D491) and purchase details readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DY1B4XWR>

More documents and user manuals: <https://manuals.plus/>