

FOLIAGE TN719



Instruction Manual

FOLIAGE TN719 STAINLESS STEEL TURNER WITH WOOD HANDLE

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the FOLIAGE TN719 Stainless Steel Turner with Wood Handle. This manual provides essential information for the proper setup, operation, and maintenance of your new kitchen tool. Designed for durability and comfort, this turner is ideal for various cooking and grilling tasks, offering reliable performance for both professional chefs and home cooks.

Please read this manual thoroughly before first use and retain it for future reference.

2. PRODUCT FEATURES

The FOLIAGE TN719 turner is crafted with quality materials and thoughtful design to enhance your cooking experience.

- **Durable Construction:** Made from high-quality stainless steel for long-lasting use and resistance to corrosion.
- **Ergonomic Wood Handle:** Features a comfortable wooden handle that provides a secure grip and remains cool to the touch during use.
- **Optimal Size:** The 6 x 3 inch blade is perfectly sized for flipping and turning a variety of foods, from pancakes to burgers.
- **Versatile Use:** Suitable for use with grills, griddles, and various cooking surfaces.



Figure 2.1: FOLIAGE TN719 Stainless Steel Turner with Wood Handle.

3. SETUP

Before using your FOLIAGE TN719 turner for the first time, please follow these steps:

1. **Unpack:** Carefully remove the turner from its packaging.
2. **Inspect:** Check the turner for any signs of damage or manufacturing defects. If any issues are found, please contact customer support.
3. **Initial Cleaning:** Wash the turner thoroughly with warm, soapy water. Rinse completely and dry immediately to prevent water spots, especially on the wooden handle.

4. OPERATING INSTRUCTIONS

The FOLIAGE TN719 turner is designed for ease of use in various cooking applications.

- **Flipping and Turning:** Use the thin, angled edge of the stainless steel blade to easily slide under food items such as pancakes, eggs, burgers, or fish.
- **Scraping:** The sturdy blade can also be used for light scraping on flat cooking surfaces, such as griddles, to remove food residue.
- **Serving:** The broad surface of the blade makes it suitable for serving portions of food.

Safety Precautions:

- Always use caution when handling hot cooking surfaces and food.
- While the wooden handle is designed to stay cool, prolonged exposure to direct heat may cause it to warm up. Use oven mitts if necessary.
- Do not leave the turner resting on hot cooking surfaces for extended periods.

5. MAINTENANCE

Proper care will extend the life and maintain the appearance of your FOLIAGE TN719 turner.

- **Cleaning:** Hand wash the turner with warm, soapy water immediately after each use. Avoid abrasive cleaners or scouring pads that could scratch the stainless steel or damage the wood.
- **Drying:** Dry the turner thoroughly with a soft cloth, paying special attention to the wooden handle. Do not soak the wooden handle, as this can lead to cracking or warping.

- **Wood Handle Care:** Periodically, you may apply a food-grade mineral oil to the wooden handle to prevent it from drying out and to maintain its luster.
- **Storage:** Store the turner in a dry place, away from excessive moisture or extreme temperatures.
- **Dishwasher Use:** It is recommended to hand wash this product. Dishwashers can be harsh on wooden handles and may cause damage over time.

6. TROUBLESHOOTING

If you encounter any issues with your FOLIAGE TN719 turner, consider the following:

- **Wooden Handle Appears Dry or Faded:** This is normal with natural wood. Apply a small amount of food-grade mineral oil and rub it in with a soft cloth. Allow it to soak in, then wipe off any excess.
- **Stainless Steel Shows Water Spots:** Ensure the turner is thoroughly dried immediately after washing. For existing spots, a stainless steel cleaner or a mixture of vinegar and water can be used, followed by thorough rinsing and drying.
- **Blade Feels Loose:** Check the rivets connecting the blade to the handle. If they appear loose or damaged, discontinue use and contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	TN719
Brand	FOLIAGE
Material	Stainless Steel Blade, Wood Handle
Blade Dimensions (Approx.)	6 inches (length) x 3 inches (width)
ASIN	B0DY1GQTC7
Manufacturer	FOLIAGE

8. WARRANTY AND SUPPORT

FOLIAGE stands behind the quality of its products. For warranty information, product support, or to report any issues, please contact our customer service department. Details on how to reach us can typically be found on our official website or through your purchase platform.

Please have your model number (TN719) and purchase information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DY1GQTC7>

More documents and user manuals: <https://manuals.plus/>