

Feihe SR-14DTD

Feihe 14 Inch TV with DVD Player Built-in User Manual

Model: SR-14DTD

Brand: Feihe

1. IMPORTANT SAFETY INFORMATION

Please read all safety and operating instructions carefully before using this product. Keep this manual for future reference.

- **Power Source:** Use only the specified power adapter or car charger adapter. Ensure the voltage matches the product requirements (12 Volts DC).
- **Ventilation:** Do not block any ventilation openings. Ensure adequate space around the TV for proper airflow.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on the TV.
- **Heat:** Keep the TV away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the TV from the power outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Disc Handling:** Handle DVD discs carefully. Do not use cracked, warped, or scratched discs.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Feihe 14 Inch TV with Built-in DVD Player
- Power Adapter
- Remote Control
- TV Stand
- User Manual (this document)



Image: The Feihe 14 Inch TV with DVD Player Built-in, showing its compact design and integrated DVD slot.

3. PRODUCT OVERVIEW AND FEATURES

The Feihe 14 Inch TV with DVD Player Built-in is a versatile and portable entertainment solution designed for various environments, including kitchens, bedrooms, RVs, and campers. It combines a high-definition LED display with a convenient integrated DVD player and multiple connectivity options.

Key Features:

- **Integrated DVD Player:** Enjoy your favorite DVDs directly without needing an external player. (Note: Does not support Blu-ray discs).
- **HD Picture and Sound:** Crisp and clear images with built-in dual speakers for enhanced audio.
- **Multiple Connectivity:** Equipped with USB, HDMI, AV, and VGA ports for connecting various devices.
- **Built-in ATSC Tuner:** Access free local HD channels.
- **Portable Design:** Compact size and dual power supply modes (AC adapter and 12V car charger adapter) make it ideal for on-the-go use.
- **Wide Viewing Angle:** Upgraded screen with 160° wide viewing angle for comfortable viewing from various positions.

**Upgraded screen with 160° wide viewing angle,
eliminating shadows from any position.**



Color Up



Brightness Up



HD Screen



14 inch



Enhanced Screen



Image: The Feihe TV screen displaying a sports event, illustrating the 160-degree wide viewing angle feature.

High Power Double Speaker

High Quality Dual Speakers for Clear, Natural Stereo and Virtual Surround Sound.



Image: Rear view of the Feihe TV, highlighting the high-power dual speakers and various input ports (AV, VGA, HDMI, USB).

4. SETUP GUIDE

4.1 Unpacking and Placement

1. Carefully remove the TV and all accessories from the packaging.
2. Attach the included TV stand to the bottom of the TV. Ensure it is securely fastened.
3. Place the TV on a stable, flat surface. Ensure there is adequate ventilation around the unit.

Small Television Dimensions

NOTE: PLEASE SEE DIMENSIONS BELOW TO ENSURE FITMENY.



Image: Diagram showing the dimensions of the Feihe 14 Inch TV: 13.4 inches wide, 12.2 inches high (with stand), and 9.05 inches high (screen only), with a depth of 1.8 inches.

4.2 Power Connection

The TV supports two power supply modes:

- **AC Power Adapter:** Connect the provided AC power adapter to the DC IN port on the TV and then plug it into a standard wall outlet.
- **12V Car Charger Adapter:** For portable use in RVs or cars, connect a 12V car charger adapter (not always included, check package contents) to the DC IN port and your vehicle's 12V power socket.



Image: The Feihe TV shown with two power supply options: a standard power adapter for home use and a car charger adapter for portable use in a vehicle.

4.3 Antenna Connection (for TV Mode)

To receive free local HD channels, connect an external antenna (not included) to the ANT IN port on the TV. For optimal reception, place the antenna in an open area.

FREE LOCAL HD CHANNELS

Built-In Digital ATSC Tuner



NOTE:Please find an open place to connect the antenna (reception signal and the number of channels are related to the distance of the signal base station)

Image: The Feihe TV connected to a small antenna, positioned near a window, illustrating its capability to receive free local HD channels via its built-in ATSC tuner.

4.4 Connecting External Devices

The TV offers various ports for connecting external devices:

- **HDMI:** Connect gaming consoles, streaming devices, or other HDMI-enabled devices.
- **USB:** Play media files (photos, music, videos) from a USB flash drive.
- **AV:** Connect older devices like VCRs or camcorders using RCA cables.
- **VGA:** Connect a computer or laptop to use the TV as a monitor.

Refer to the back panel of the TV for port locations.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

- **Power On/Off:** Press the **POWER** button on the remote control or the TV's control panel.
- **Volume Adjustment:** Use the **VOL+** and **VOL-** buttons on the remote or TV to adjust the volume.
- **Channel Selection:** Use the **CH+** and **CH-** buttons to change channels in TV mode.
- **Input Source:** Press the **SOURCE** button on the remote or TV to cycle through available input sources (TV, DVD, HDMI, USB, AV, VGA).

5.2 TV Mode (ATSC Tuner)

1. Ensure an antenna is connected (see Section 4.3).
2. Select "TV" as the input source.
3. Navigate to the "Channel Scan" or "Auto Scan" option in the TV menu to search for available local channels.
4. Once scanning is complete, you can use the CH+ and CH- buttons to browse channels.

5.3 DVD Player Operation

The integrated DVD player supports standard DVD and CD formats. It **does not support Blu-ray discs**.

1. Select "DVD" as the input source using the **SOURCE** button.
2. Gently insert a DVD or CD into the disc slot on the side of the TV, with the label facing up. The player will automatically load the disc.
3. Playback should begin automatically. If not, use the remote control's playback buttons (Play, Pause, Stop, Fast Forward, Rewind, Next/Previous Track).
4. To eject a disc, press the **EJECT** button on the remote or the TV's control panel.

14 Inch TV Built-in DVD Player



Image: The Feihe 14 Inch TV displaying content, with a blue arrow indicating the side-loading DVD slot and a note that Blu-ray discs are not supported.

5.4 USB Media Playback

1. Insert a USB flash drive into the USB port on the TV.
2. Select "USB" as the input source.
3. The TV will display a media browser. Navigate through your files (photos, music, videos) using the remote control's arrow keys and **OK** button.
4. Select a file to begin playback.

6. MAINTENANCE

6.1 Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry, lint-free cloth to wipe the screen and cabinet.

- For stubborn marks on the screen, lightly dampen the cloth with water or a screen-cleaning solution specifically designed for electronics. Do not spray liquid directly onto the screen.
- Avoid using abrasive cleaners, waxes, or solvents.

6.2 Cleaning the DVD Player

To maintain optimal performance of the DVD player, occasionally use a DVD lens cleaning disc (not included). Do not attempt to clean the lens manually.

6.3 Storage

If storing the TV for an extended period, unplug it from the power source and store it in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to keep the original packaging for safe storage and transport.

7. TROUBLESHOOTING

Before contacting customer support, please refer to the following common issues and their solutions:

Problem	Possible Cause / Solution
No power	Ensure the power adapter is securely connected to the TV and a working power outlet. If using a car adapter, check the vehicle's 12V socket for power. Press the POWER button on the TV or remote.
No picture, but sound is present	Check the input source. Ensure it matches the connected device (e.g., HDMI 1, AV, USB). Check the cable connections between the TV and the external device.
No sound, but picture is present	Increase the volume. Check if the TV is muted. Press the MUTE button on the remote. Check audio cable connections for external devices.
DVD disc not playing or ejecting	Ensure the disc is inserted correctly (label side up). Verify the disc is not scratched, dirty, or warped. Confirm it is a standard DVD or CD, not a Blu-ray disc. Select "DVD" as the input source.
Remote control not working	Check and replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor. Point the remote directly at the TV.
Cannot find local channels	Ensure an antenna is connected and positioned in an open area. Perform an "Auto Scan" for channels in the TV menu. Signal strength may vary by location. Try repositioning the antenna.

8. SPECIFICATIONS

Feature	Detail
Screen Size	14 Inches

Feature	Detail
Display Technology	LED
Resolution	1080p
Refresh Rate	60 Hz
Aspect Ratio	16:9
Viewing Angle	160° Wide Viewing Angle
Built-in DVD Player	Yes (Does not play Blu-ray discs)
Tuner Type	Built-in Digital ATSC Tuner
Connectivity	HDMI, USB, AV, VGA
Power Input	12 Volts (DC)
Product Dimensions (D x W x H)	1.8" x 13.4" x 12.2"
Item Weight	5.81 pounds
Special Features	Portable, Region Free

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information or technical assistance, please contact Feihe customer support. Details can typically be found on the product packaging or the official Feihe website.

When contacting support, please have your product model number (SR-14DTD) and purchase information ready.

© 2025 Feihe. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question