

[Manuals.plus](#) /

› [Bomann](#) /

› Bomann KG7361 320L Black Refrigerator Freezer Instruction Manual

Bomann KG7361

Bomann KG7361 320L Black Refrigerator Freezer Instruction Manual

Model: KG7361

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Bomann KG7361 320L Black Refrigerator Freezer. Please read these instructions carefully before use and retain them for future reference.

SAFETY INFORMATION

- Read all instructions before using the appliance.
- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Keep ventilation openings clear of obstruction.
- This appliance is intended for household use only.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage. Report any damage to your retailer immediately.

Placement

- Place the appliance on a firm, level surface.
- Ensure adequate ventilation around the unit. Maintain a minimum distance of 10 cm from walls and other appliances.
- Avoid direct sunlight and heat sources.
- Do not install in areas where the temperature may drop below 10°C or rise above 38°C.

Electrical Connection

Connect the appliance to a properly grounded electrical outlet. Ensure the voltage and frequency match the ratings on the appliance's data plate.

Initial Cleaning

Before first use, clean the interior and exterior of the appliance with a damp cloth and mild detergent. Dry thoroughly.



Image: Front view of the Bomann KG7361 320L Black Refrigerator Freezer with its four-door design and integrated display panel.

Temperature Control

The Bomann KG7361 features separate temperature controls for the refrigerator and freezer compartments, accessible via the LED display with touch control on the front door.

- To adjust the refrigerator temperature, press the 'Fridge' button and select your desired temperature between 2°C and 8°C.
- To adjust the freezer temperature, press the 'Freezer' button and select your desired temperature, typically around -18°C to -22°C for optimal freezing.



**TEMPERATUR-BEREICH:
≥ -22 °C**

**1A Gefrierleistung für
langanhaltende Frische,
Nährstoffe & Geschmack**

**4-Sterne-
Kennzeichnung**
★ ★★

Image: Close-up of the LED display and touch control panel on the refrigerator door, showing temperature settings and various function icons.

No-Frost Technology

This appliance is equipped with Total No-Frost technology, which prevents ice build-up in both the refrigerator and freezer compartments. This eliminates the need for manual defrosting.



Image: Illustration demonstrating the Total No-Frost feature, showing no ice formation and no defrosting required, with a view of the freezer drawers.

MultiAirflow System

The integrated MultiAirflow System ensures even cooling throughout the refrigerator and freezer sections, maintaining consistent temperatures for optimal food preservation.



Image: Diagram illustrating the MultiAirflow System, showing air circulation paths within the refrigerator compartment for uniform cooling.

Door Open Alarm

An audible alarm function activates if the refrigerator door is left open for an extended period, helping to conserve energy and maintain internal temperatures.

Energy Saving Mode

Activate the energy-saving mode to optimize power consumption. Refer to the display panel for activation instructions.

STORAGE AND ORGANIZATION

Refrigeration Compartment

The refrigerator compartment offers 191 liters of storage capacity, featuring 4 glass shelves and 6 door shelves (including 2 with bottle holders) for organized storage of fresh food items.



Image: Interior view of the refrigerator compartment, showcasing the glass shelves, door shelves, and a bottom drawer for fruits and vegetables.

Freezer Compartment

The freezer compartment provides 129 liters of storage, equipped with drawers for efficient organization of frozen goods. It features 4-star freezing performance for long-lasting freshness.



Image: Interior view of the freezer drawers, showing ample space for various frozen food items.

BOMANN®

320 Liter XXL Platz

Ideal für große Einkäufe
und Familien



Image: Visual representation of the refrigerator (191 liters) and freezer (129 liters) capacities, highlighting the total 320 liters of storage.

MAINTENANCE AND CLEANING

General Cleaning

Regularly clean the interior and exterior surfaces of your appliance.

- Disconnect the appliance from the power supply before cleaning.
- Use a soft cloth and a mild, non-abrasive detergent.
- Avoid using harsh chemicals, abrasive cleaners, or sharp objects.
- Clean door seals regularly to ensure a tight seal.
- Dry all surfaces thoroughly after cleaning.

Defrosting

Due to the Total No-Frost system, manual defrosting of the freezer compartment is not required.

Power Outage

In case of a power outage, keep the doors closed to maintain the internal temperature for as long as possible.

TROUBLESHOOTING

Before contacting customer service, review the following common issues and their potential solutions:

- **Appliance not cooling:** Check if the power cord is securely plugged in. Ensure the temperature settings are correct. Verify that the door is fully closed.
- **Unusual noises:** Minor operating noises are normal. Ensure the appliance is level and not touching any walls or furniture.
- **Water on the floor:** Check if the drain hole is blocked (if applicable, though No-Frost reduces this). Ensure the appliance is level.
- **Door alarm sounding:** Close the door completely. Check for obstructions preventing the door from closing.

If the problem persists after checking these points, please contact Bomann customer support.

SPECIFICATIONS

Feature	Value
Brand	Bomann
Model Number	KG7361 (773611)
Dimensions (L x W x H)	68.5 x 63.5 x 186 cm
Weight	71 kg
Total Capacity	320 Liters
Refrigerator Capacity	191 Liters
Freezer Capacity	129 Liters
Installation Type	Freestanding
Configuration	French Door
Color	Black
Voltage	230 Volts
Defrost System	No-Frost
Special Features	Door open alarm, Energy saving mode, Separate temperature control, LED interior lighting, LED display with touch control
Number of Shelves (Refrigerator)	4 (Glass)
Number of Drawers (Freezer)	3
Door Finish	Stainless Steel

Das Modell wurde auf dem Unionsmarkt in Verkehr gebracht, und zwar ab dem 01/02/2025.



EPREL-Eintragungsnummer 2188554

<https://eprel.ec.europa.eu/q/2188554>

Lieferant: C. Bomann GmbH (Hersteller)

Website:

Kundenbetreuung:

Name: Zentrale Bomann

Website: www.bomann.de


E-Mail-Adresse: info@bomann.de

Telefonnummer: +49 2152 8998-0

Anschrift:


Heinrich-Horten-Straße 17
47906 Kempen
Deutschland

Image: Visual representation of the refrigerator freezer's dimensions, weight, noise level, and total capacity, along with the energy label.

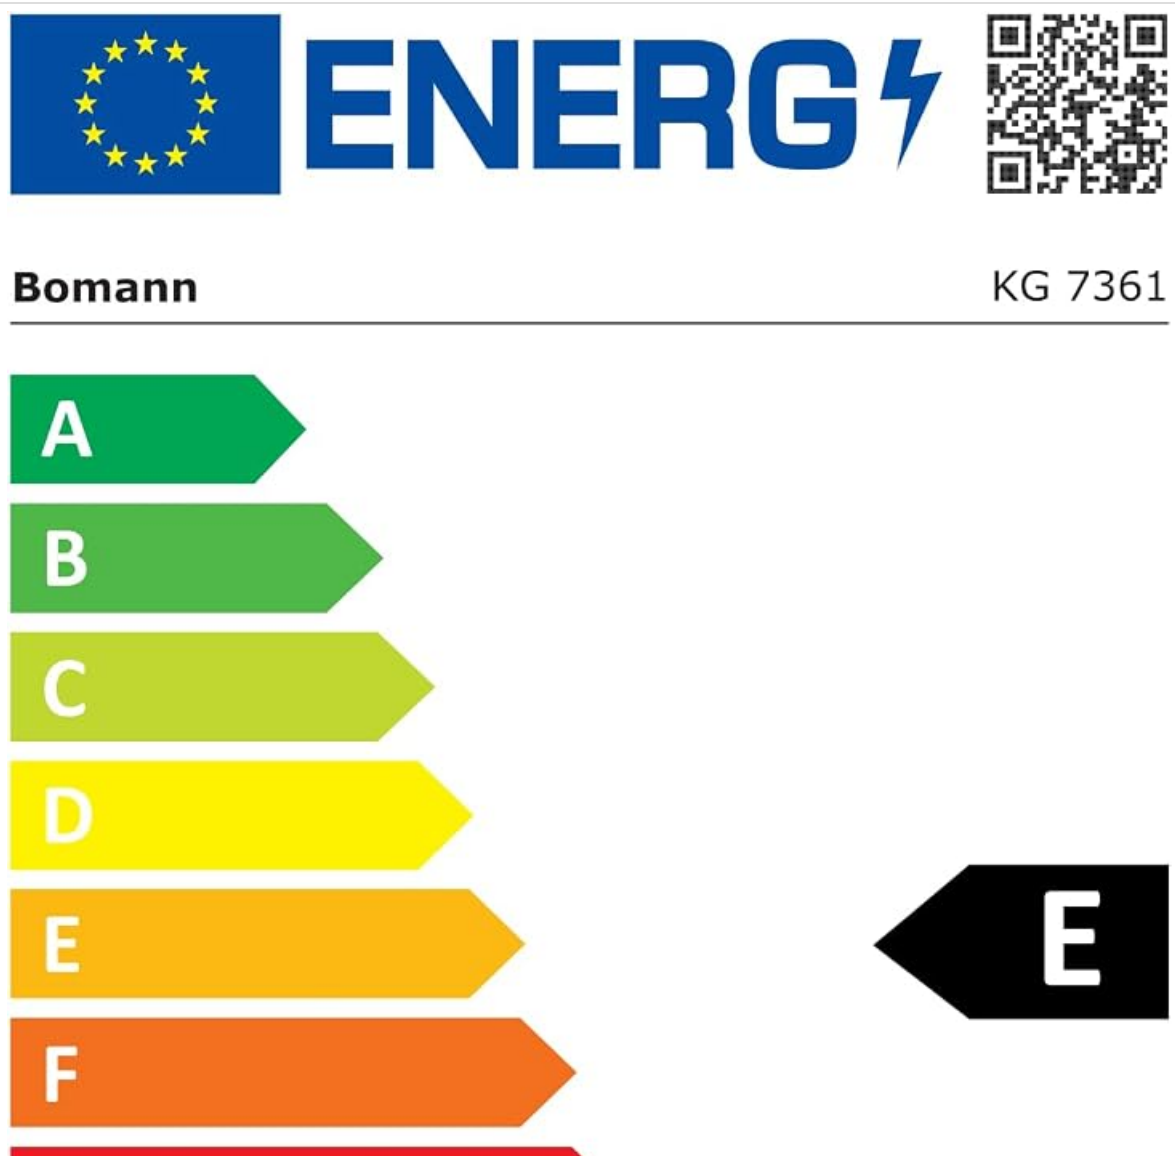

G

250 kWh/annum

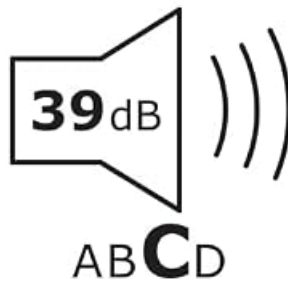**129 L****191 L**

2019/2016

Image: The EU energy label for the Bomann KG7361, showing energy efficiency class E, annual energy consumption, noise level, and capacities.

WARRANTY AND SUPPORT

Bomann appliances come with a standard manufacturer's warranty. Please refer to your purchase documentation for specific warranty terms and conditions.

For technical assistance, spare parts, or warranty claims, please contact Bomann customer support.

- **Spare Parts Availability:** 2 Years
- **Manufacturer Website:** www.bomann.de

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DY1PMWNB>

More documents and user manuals: <https://manuals.plus/>