

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [NIXON](#) /
- › [NIXON 51-30 Chrono A1389-5358-00 Watch Instruction Manual](#)

NIXON A1389-5358-00

NIXON 51-30 Chrono A1389-5358-00 Watch

INSTRUCTION MANUAL

1. OVERVIEW

This manual provides essential instructions for the setup, operation, maintenance, and troubleshooting of your NIXON 51-30 Chrono A1389-5358-00 analog watch. This timepiece features a robust 51mm stainless steel case, a 25mm stainless steel band, Japanese Quartz movement, and a water resistance rating of 300 meters (30 ATM).



Front view of the NIXON 51-30 Chrono A1389-5358-00 watch, showcasing its gold and black dial with chronograph sub-dials.

2. SETUP

2.1 Unboxing and Initial Inspection

Carefully remove the watch from its packaging. Inspect the watch for any visible damage. Ensure all protective films are removed before use.

2.2 Setting the Time

1. Unscrew the crown (located at the 9 o'clock position) counter-clockwise until it pops out to position 1.
2. Pull the crown out further to position 2. The second hand will stop.
3. Turn the crown to set the hour and minute hands to the desired time.
4. Push the crown back to position 1 and screw it clockwise firmly against the case to ensure water resistance.

2.3 Setting the Date

1. Unscrew the crown counter-clockwise until it pops out to position 1.
2. Turn the crown clockwise to adjust the date. Avoid setting the date between 9 PM and 3 AM, as this may damage the movement.
3. Once the date is set, push the crown back to position 1 and screw it clockwise firmly against the case.



Detailed view of the crown and chronograph pushers on the NIXON 51-30 Chrono, located on the left side of the watch case.

2.4 Bracelet Adjustment

The stainless steel bracelet may require adjustment for a comfortable fit. It is recommended to have this procedure performed by a professional jeweler or watchmaker to avoid damaging the links or pins.

3. OPERATING THE WATCH

3.1 Timekeeping

Once set, your NIXON 51-30 Chrono watch will accurately display the time using its Japanese Quartz movement. The large hour and minute hands indicate the current time, while the small sub-dial at the 6 o'clock position typically functions as the running seconds hand for continuous timekeeping.

3.2 Chronograph Function

The chronograph function allows for precise timing of events. The watch features two pushers on the left side of the case, above and below the crown.

1. **Start/Stop:** Press the upper pusher to start the chronograph. Press it again to stop.
2. **Reset:** While the chronograph is stopped, press the lower pusher to reset all chronograph hands to their zero positions.

The sub-dials on the watch face measure elapsed time:

- The sub-dial at the 12 o'clock position measures chronograph minutes.
- The sub-dial at the 6 o'clock position measures chronograph hours (or running seconds, depending on the specific movement configuration).
- The large central second hand functions as the chronograph second hand.



Close-up view of the chronograph sub-dials on the NIXON 51-30 Chrono, illustrating their positions and markings.

3.3 Water Resistance

Your NIXON 51-30 Chrono watch is water resistant to 300 meters (30 ATM). This makes it suitable for professional marine activity and serious surface water sports, but not for saturation diving. **Always ensure the crown is fully screwed in and the pushers are not operated while the watch is submerged or wet to maintain water resistance.**

4. MAINTENANCE

4.1 Cleaning

To clean your watch, wipe the case and bracelet with a soft, damp cloth. For stainless steel, a mild soap solution can be used, followed by rinsing with clean water and drying thoroughly. Avoid using harsh chemicals or abrasive materials.

4.2 Battery Replacement

The watch is powered by a nonstandard battery. When the battery runs low, the watch may stop or the second hand may skip. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

4.3 Water Resistance Seal Check

It is recommended to have the water resistance seals checked periodically, especially if the watch is frequently exposed to water or extreme temperature changes. This helps ensure the watch maintains its specified water resistance.

4.4 Storage

When not in use, store your watch in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. The original watch box is ideal for storage.

5. TROUBLESHOOTING

- **Watch Not Running:** Check if the crown is fully pushed in and screwed down. If the watch still does not run, the battery may need replacement.
- **Incorrect Time/Date:** Refer to Section 2.2 and 2.3 to reset the time and date.
- **Chronograph Hands Misaligned:** If the chronograph hands do not reset to zero, consult a professional watchmaker for adjustment.
- **Water Intrusion:** If moisture appears inside the watch crystal, immediately take the watch to a qualified service center. Do not attempt to open the watch yourself, as this will void the warranty and compromise water resistance.

6. SPECIFICATIONS

| Feature | Specification |
|------------------------|----------------------------------|
| Model Name | 51-30 Chrono |
| Model Number | A1389-5358-00 |
| Movement Type | Japanese Quartz |
| Case Diameter | 51 Millimeters |
| Case Material | Stainless Steel |
| Band Material | Stainless Steel |
| Band Width | 25 Millimeters |
| Crystal | Mineral Glass |
| Water Resistance Depth | 300 Meters (30 ATM) |
| Clasp Type | Double Locking Foldover Clasp |
| Battery Type | 1 Nonstandard Battery (included) |
| Item Weight | 0.45 Kilograms |



Rear view of the NIXON 51-30 Chrono watch, showing the engraved case back with model details.

7. WARRANTY INFORMATION

Your NIXON 51-30 Chrono watch comes with a Limited Warranty. For complete details regarding warranty coverage, terms, and conditions, please refer to the official NIXON website or the warranty card included with your purchase. Keep your proof of purchase for warranty claims.

8. SUPPORT

For further assistance, detailed product information, or to locate an authorized service center, please visit the official NIXON website. You can also contact NIXON customer service directly through the contact information provided on their website.

NIXON Official Website: www.nixon.com

