

[Manuals.plus](#) /

› [SoarFlash](#) /

› SoarFlash 56.7-inch Loveseat Sofa Instruction Manual (Model: B0DY4DQ26D)

SoarFlash B0DY4DQ26D

SoarFlash 56.7-inch Loveseat Sofa Instruction Manual

Model: B0DY4DQ26D

1. INTRODUCTION

Thank you for choosing the SoarFlash 56.7-inch Loveseat Sofa. This manual provides essential information for the safe assembly, operation, and maintenance of your new sofa. Please read these instructions carefully before use and retain them for future reference.

This compact loveseat is designed for comfort and functionality, featuring cotton and linen fabrics, high-density foam, and sturdy solid wood legs. It is suitable for various living spaces, including living rooms, bedrooms, and small apartments.



Image 1.1: The SoarFlash 56.7-inch Loveseat Sofa in a modern living room environment.

2. SAFETY INFORMATION

To ensure safe use of your SoarFlash Loveseat Sofa, please observe the following guidelines:

- Do not exceed the maximum weight capacity of 700 pounds.
- Ensure all bolts and screws are securely tightened before and during use. Periodically check and re-tighten as necessary.
- Keep children and pets away from the assembly area to prevent injury.
- Avoid standing or jumping on the sofa.
- Do not place hot items directly on the fabric or wooden parts.
- Use the sofa on a level surface to prevent tipping.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or

damaged, please contact customer support.

- Sofa backrest
- Sofa seat base
- Armrests (2)
- Sofa legs (4)
- Cushions/Pillows (2)
- Hardware pack (bolts, washers, Allen wrench)
- Instruction manual



Image 3.1: An overview of the SoarFlash Loveseat Sofa components, including the main frame, cushions, and legs.

4. SETUP AND ASSEMBLY

Assembly of your SoarFlash Loveseat Sofa is designed to be straightforward and typically takes approximately 20 minutes. No special tools are required beyond what is provided.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Attach Armrests:** Align the armrests with the sides of the seat base and secure them using the provided bolts and Allen wrench. Ensure they are firmly attached.
3. **Attach Backrest:** Connect the backrest to the seat base and armrests, securing it with the remaining bolts.
4. **Install Legs:** Carefully turn the sofa over. Attach the four solid wood legs to the designated points on the bottom of the sofa frame. Tighten them securely.
5. **Place Cushions:** Position the seat and back cushions onto the sofa.
6. **Final Check:** Ensure all connections are tight and the sofa is stable before use.

USB Charging Port

Charge your cell phone while you're resting.



Image 4.1: The integrated USB charging port, located on the side of the armrest, for convenient device charging.

5. OPERATING INSTRUCTIONS

Your SoarFlash Loveseat Sofa is designed for comfortable seating and includes a convenient feature for modern living.

- **Seating:** The sofa provides ample space for two individuals. The high-density foam and spring padding offer comfort for extended periods.
- **USB Charging Port:** A USB charging port is integrated into one of the armrests. To use, simply connect your

device's USB cable to the port. Ensure the sofa is connected to a power source if the charging port requires external power (check specific model details if applicable).

6. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your SoarFlash Loveseat Sofa.

- **Cleaning Fabric:** The sofa features cotton and linen fabrics. For minor spills, blot immediately with a clean, dry cloth. For general cleaning, use a mild fabric cleaner suitable for cotton/linen, testing on an inconspicuous area first. The removable cover allows for easier cleaning.
- **Water Resistance:** The fabric has a tarpaulin design, offering some resistance to spills. However, it is not fully waterproof; wipe up liquids promptly.
- **Wood Care:** Wipe wooden legs with a soft, damp cloth. Avoid harsh chemicals.
- **Regular Maintenance:** Vacuum the sofa regularly to remove dust and debris. Fluff cushions periodically to maintain their shape.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure to prevent fading of the fabric.



Tarpaulin design



Sturdy solid wood legs

Image 6.1: Detail showing the fabric's water-resistant properties and the sturdy solid wood legs.

7. TROUBLESHOOTING

If you encounter issues with your SoarFlash Loveseat Sofa, refer to the following common solutions:

- **Wobbly Sofa:** Ensure all legs are securely tightened. Check that the sofa is placed on a flat, even surface. If a middle support leg is present, ensure it is properly installed and not bent.
- **USB Port Not Working:** Verify that the sofa's power connection (if applicable) is securely plugged into a working outlet. Try a different USB cable or device to rule out cable/device issues.
- **Squeaking Noises:** Check all bolts and screws for tightness. Re-tighten any loose connections.
- **Cushion Sagging:** Fluff and rotate cushions regularly to maintain their shape and even out wear.

8. SPECIFICATIONS

Feature	Detail
Brand	SoarFlash
Model	B0DY4DQ26D
Product Dimensions (D x W x H)	31.9" x 56.7" x 35.03"
Seat Depth	21.6"
Weight Capacity	700 Pounds
Seating Capacity	2
Material	Cotton and Linen Fabric, High-Density Foam, Spring Padding, Solid Wood Legs
Special Features	Removable Cover, USB Charging Port
Color	Light Green

Weight capacity **500lbs**

Designed for apartment and other small spaces

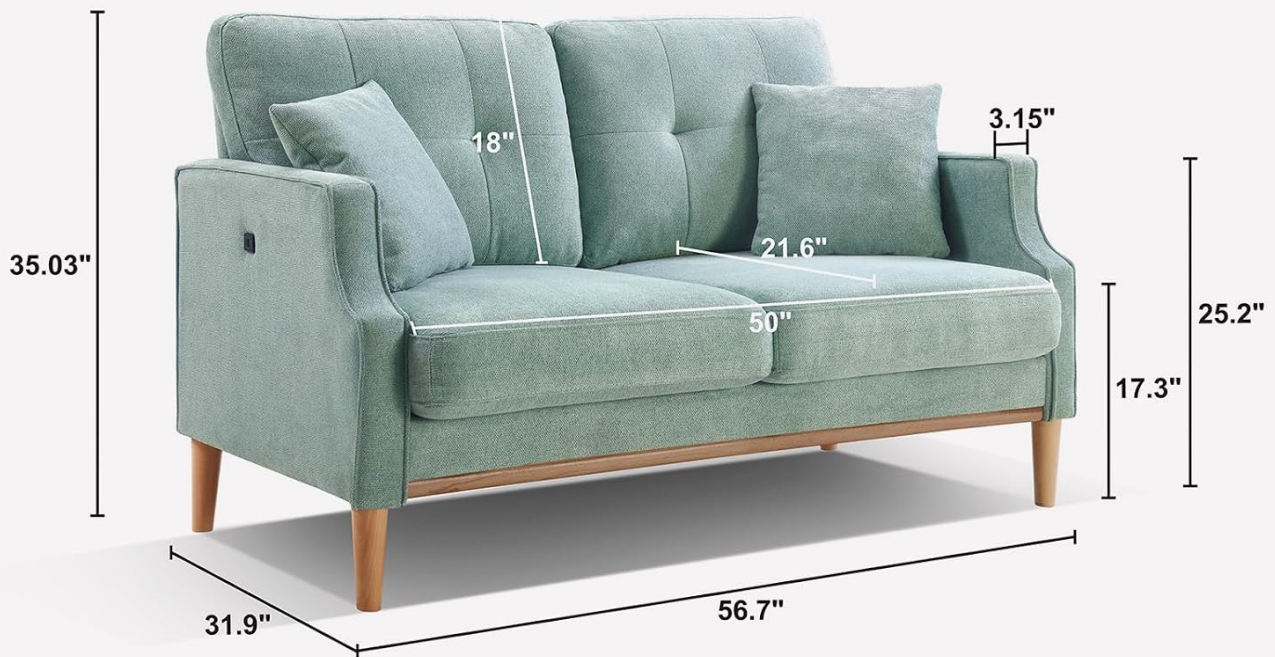


Image 8.1: Detailed dimensions of the SoarFlash Loveseat Sofa.

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact SoarFlash directly through their official channels. If you have any questions or require assistance with assembly or product functionality, do not hesitate to reach out to the manufacturer's customer service. You can often find support contact information on the product packaging or the brand's official website.

© 2025 SoarFlash. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DY4DQ26D>

More documents and user manuals: <https://manuals.plus/>