

JINSHANGZI CDS9 Ultra

JINSHANGZI CDS9 Ultra Smartwatch User Manual

Model: CDS9 Ultra

INTRODUCTION

Welcome to the JINSHANGZI CDS9 Ultra Smartwatch user manual. This guide provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your new smartwatch. The CDS9 Ultra features Android 9.0, 4G network capabilities, a unique rotating camera, and a vibrant AMOLED display, designed to enhance your daily connectivity and activities. Please read this manual carefully to ensure proper use and to maximize the performance and longevity of your device.

SETUP GUIDE

1. Unboxing and Initial Inspection

Upon opening the package, verify that all components are present:

- 1 x CDS9 Ultra Smartwatch (with 1 original strap)
- 1 x Screen Protector
- 1 x User Manual
- 1 x SIM Card Pin
- 1 x Charging Cable
- 1 x Original Box

2. Charging the Smartwatch

Before first use, fully charge your smartwatch. Connect the provided charging cable to the watch and a compatible USB power adapter (not included). The watch display will indicate charging status.
Note: Use only the original charging cable to prevent damage to the device.

3. SIM Card Installation

The CDS9 Ultra supports 4G network connectivity via a SIM card. Ensure your SIM card supports the following frequency bands:

- **2G Network:** GSM: B2/3/5/8

- **3G Network:** WCDMA: B1/2/4/5/8
- **4G Network:** LTE: B1/B2/B3/4/B5/B7/B8/B12/B17/B20/B38/B39/B40/B41 (100m)

To install the SIM card:

1. Power off the smartwatch.
2. Locate the SIM card slot on the side of the watch.
3. Use the provided SIM card pin to gently eject the SIM tray.
4. Place your Nano-SIM card into the tray, ensuring correct orientation.
5. Carefully reinsert the SIM tray into the watch.

4. Powering On/Off

- **To Power On:** Press and hold the power button until the screen lights up.
- **To Power Off:** Press and hold the power button, then select "Power Off" from the options on the screen.

OPERATING INSTRUCTIONS

1. Navigating the Interface

The CDS9 Ultra features a 2.2-inch AMOLED HD display with multi-touch support, allowing for intuitive navigation similar to a smartphone.

- **Swipe Up/Down/Left/Right:** Navigate through menus, notifications, and quick settings.
- **Tap:** Select an item or open an application.
- **Press and Hold:** Access additional options or customize watch faces.



Image: The smartwatch display demonstrating multi-touch control, suitable for gaming and precise interaction. The screen supports multi-point sensing for enhanced user experience.

2. Rotating Camera Functionality

The smartwatch is equipped with a 180-degree rotatable telescopic camera, enabling versatile photography, video recording, and video calls without blind spots.

- **Accessing the Camera:** Tap the camera icon on the home screen or in the app drawer.
- **Rotating the Camera:** Physically rotate the camera module to adjust the viewing angle for selfies or capturing your surroundings.
- **Taking Photos/Videos:** Use the on-screen controls to capture images or start/stop video recording.

3. Connectivity (4G, Wi-Fi, Bluetooth)

Your smartwatch offers multiple connectivity options:

- **4G Network:** Once a SIM card is installed and configured, the watch can make/receive calls, send messages, and access mobile data independently.
- **Wi-Fi:** Connect to Wi-Fi networks for faster internet access and app downloads. Go to *Settings > Network & Internet*

> *Wi-Fi* to manage connections.

- **Bluetooth 4.1:** Pair with Bluetooth headphones, speakers, or your smartphone for notifications and data synchronization. Go to *Settings > Connected devices > Bluetooth*

4. Applications and Google Play Store

Running on Android 9.0, the CDS9 Ultra provides access to a wide range of applications via the Google Play Store. You can download and install apps directly on your watch.

- **Pre-installed Apps:** Includes Clock, Launcher, Frames, Sports, SMS, Phone, Contacts, Settings, Step Counter, Calculator, Browser, Audio Recorder, Calendar, Email, Search, Video Player, Gallery, Downloads, Music, Alarm, Camera, Heart Rate Monitor, Compass, Weather.
- **Google Play Store:** Tap the Play Store icon to browse and download additional applications.

5. Health and Fitness Tracking

The smartwatch integrates various sensors for health and fitness monitoring:

- **Heart Rate Monitor:** Measures your heart rate. Access this feature via the dedicated app.
- **Pedometer:** Tracks your steps taken throughout the day.
- **Compass:** Provides directional guidance, useful for outdoor activities.

MAINTENANCE

1. Cleaning Your Smartwatch

To keep your smartwatch in optimal condition:

- Wipe the screen and body with a soft, lint-free cloth.
- For stubborn smudges, slightly dampen the cloth with water.
- Avoid using harsh chemicals, abrasive cleaners, or solvents.
- Ensure the charging ports are clean and dry before charging.

2. Water Resistance

The CDS9 Ultra is rated as water-resistant. While it can withstand splashes and brief immersion, it is not recommended for swimming, showering, or diving. Avoid exposing the watch to hot water or steam.

3. Software Updates

The watch supports OTA (Over-The-Air) online upgrades. Periodically check for software updates in *Settings > About Watch > System Update* to ensure your device has the latest features and security patches.

TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Watch does not power on.	Ensure the watch is fully charged. Connect it to the charger for at least 30 minutes.
Cannot connect to 4G network.	Verify that the SIM card is correctly inserted and supports the watch's frequency bands. Check network settings and signal strength.
Touchscreen is unresponsive.	Restart the watch. If the issue persists, ensure the screen is clean and dry.
Battery drains quickly.	Reduce screen brightness, close unused apps, disable unnecessary connectivity features (Wi-Fi, Bluetooth, GPS) when not in use.
Apps are not downloading from Play Store.	Check Wi-Fi or 4G data connection. Ensure sufficient storage space is available.

SPECIFICATIONS

Feature	Detail
Model Number	836485c5-b7b2-4ba1-9d1b-4de477ed8b68
Operating System	Android 9.0
Display Type	AMOLED
Screen Size	2.2 Inches
Memory Storage Capacity	128 GB
Battery Capacity	1280 mAh
Connectivity Technology	Bluetooth, Wi-Fi, 4G Cellular
Wireless Communication Standard	802.11a, Bluetooth 4.1
GPS	Integrated GPS
Water Resistance Level	Water Resistant
Input Type	Touchscreen
Supported Application	Google Play Store
Sensor Type	Heart Rate Monitor, Accelerometer, Gyroscope, Pedometer, Barometer, Compass
Camera	180-degree Rotatable Telescopic Camera

WARRANTY INFORMATION

The JINSHANGZI CDS9 Ultra Smartwatch comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty duration and coverage details.

This warranty typically covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or failure to follow the instructions in this manual.

For warranty claims or service, please retain your proof of purchase.

CUSTOMER SUPPORT

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact JINSHANGZI customer support.

For the most up-to-date support information, including contact details and FAQs, please visit the official JINSHANGZI website or the retailer's support page where you purchased the product.

When contacting support, please have your product model (CDS9 Ultra) and ASIN (B0DY4Q42LL) ready.

© 2023 JINSHANGZI. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DY4Q42LL>

More documents and user manuals: <https://manuals.plus/>