

Surfola SD05W

Surfola 15.6-inch HD Portable DVD Player

Model: SD05W

	Package	Product			
Introduction	Contents	Overview	Setup	Operation	Maintenance
Troubleshooting	Specifications				

1. INTRODUCTION

Thank you for purchasing the Surfola 15.6-inch HD Portable DVD Player, Model SD05W. This manual provides essential information for the safe and efficient use of your device. Please read it thoroughly before use and retain it for future reference.

2. PACKAGE CONTENTS

Ensure all items listed below are included in your package:

- Surfola 15.6-inch Portable DVD Player
- Remote Control
- AC Power Adapter (PSE certified, 100-240V global voltage compatible)
- Car Charger (1.8m cable)
- 3-in-1 AV Cable
- User Manual

DVDプレーヤー本体



Image: Contents of the Surfola Portable DVD Player package, including the player, remote control, AV cable, AC adapter, car charger, and user manual.

3. PRODUCT OVERVIEW

Familiarize yourself with the various parts and connections of your portable DVD player.



Image: Side view of the Surfola Portable DVD Player showing various connection ports. These include a USB port, SD card slot, AV OUT, AV IN, DC IN, Power Switch, and Headphone Jack.

Key Features:

- **15.6-inch HD LCD Display:** 1366x768 resolution for clear video playback.
- **270° Rotation & 180° Flip:** Screen can be adjusted for optimal viewing angles.
- **Region-Free & CPRM Compatible:** Plays DVDs from any region and supports CPRM content.
- **Multi-Format Support:** Plays video, music, and photo files from USB drives (up to 16GB) and SD cards. Supported formats include MPEG, MP3, JPG. *(Note: Blu-ray discs and MP4 format are not supported.)*
- **Resume Function:** Automatically resumes playback from where it was last stopped.
- **Multiple Power Options:** Built-in 5000mAh battery for up to 6 hours of playback, AC adapter (100-240V), and car charger (DC12V).
- **AV Input/Output:** Connect to a TV or projector for a larger screen experience.

4. SETUP

4.1 Initial Power On

1. **Connect Power:** Use the provided AC adapter or car charger to power the device. For portable use, ensure the internal battery is charged.
2. **Turn On:** Locate the power switch (usually on the side or back) and slide it to the "ON" position.

高齢者および子供でも使える

使い方かんたん3ステップ



01 電源を入れる



02 DVDを入れる



03 映像が再生!

Image: A visual guide showing three simple steps: 1. Turn on the power, 2. Insert a DVD, 3. Video playback begins.

5. OPERATING INSTRUCTIONS

5.1 Basic DVD Playback

1. **Open Disc Cover:** Gently lift the disc cover.
2. **Insert DVD:** Place a DVD disc onto the spindle with the label side facing up. Ensure it is seated correctly.
3. **Close Disc Cover:** Close the disc cover.
4. **Playback:** The player will automatically detect the disc and begin playback. Use the remote control or front panel buttons for play, pause, stop, and navigation.

5.2 USB/SD Card Playback

1. **Insert Media:** Insert a USB flash drive (up to 16GB) into the USB port or an SD card into the SD card slot.
2. **Select Source:** Use the "Source" or "Mode" button on the remote or player to select USB or SD mode.

3. **Browse Files:** Navigate through your files using the directional buttons and select the desired video, music, or photo file to play.



Image: The portable DVD player displaying content from a USB drive and SD card. Text indicates support for various image, music, and video formats, and notes that MP4 is not supported.

5.3 Screen Adjustment

The screen can be rotated 270 degrees and flipped 180 degrees for flexible viewing. Adjust the screen to your preferred angle for comfortable viewing in various environments, including in a car.

画面の角度を自由に調整可能

お好みの角度に画面調整可能。
どこでも、どんな姿勢でも快適に楽しめます。



Image: Demonstrates the screen's ability to rotate 270 degrees and flip 180 degrees, showing various viewing configurations including a folded tablet-like mode.

5.4 Connecting to External Displays (TV/Projector)

Use the included 3-in-1 AV cable to connect your DVD player to a TV or projector for a larger viewing experience.

1. **Connect AV Cable:** Insert one end of the AV cable into the AV OUT port on the DVD player.
2. **Connect to Display:** Connect the other end of the AV cable to the corresponding AV IN ports (Yellow for Video, Red/White for Audio) on your TV or projector.
3. **Select Input:** On your TV or projector, select the correct AV input source.



Image: The portable DVD player connected via AV cable to a television and a projector, demonstrating its capability to synchronize with external displays for a larger viewing experience.

5.5 Resume Function

The player features a resume function that allows it to automatically continue playback from the exact point where it was last stopped, even after powering off the device. This is useful for uninterrupted viewing.

レジューム機能

前回止めたところから再生できます。
万が一バッテリーが切れてしまっても心配ないです。



Image: A visual representation of the resume function, showing that playback continues from the last stopped position even after the device is powered off and on again.

6. POWER SUPPLY

Your Surfola Portable DVD Player offers three power options:

- **Built-in Battery:** The 5000mAh internal battery provides up to 6 hours of continuous playback on a full charge.
- **AC Adapter:** Use the included AC power adapter for home use. It supports 100-240V, making it suitable for international travel.
- **Car Charger:** The included 1.8m car charger connects to your vehicle's cigarette lighter socket (DC12V) for use on the go.

3つの給電方式

充電アダプター (AC100~240V対応)



100-240Vの充電アダプター
海外で充電/使用可能



最大6時間の連続再生可能
5000MAHバッテリー内蔵



シガーソケット(DC12V)
ドライブ旅行にも適用

Image: Illustrates the three power supply methods: charging via AC adapter, continuous playback with the 5000mAh internal battery, and powering via car cigarette lighter socket.

7. MAINTENANCE

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the screen. For stubborn marks, slightly dampen the cloth with water or a screen cleaner. Avoid harsh chemicals.
- **Cleaning the Disc Tray:** Keep the disc tray free of dust and debris. Use a soft brush or compressed air if necessary.
- **Storage:** When not in use, store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use for extended periods.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery drained, power adapter not connected, power switch off.	Charge the battery, ensure AC adapter/car charger is properly connected, turn power switch ON.
Disc not playing	Disc inserted incorrectly, disc is dirty/scratched, unsupported disc type (e.g., Blu-ray).	Reinsert disc correctly, clean disc, try a different disc. Note that Blu-ray discs are not supported.
No sound	Volume too low, headphones not connected properly, external speaker issue.	Increase volume, check headphone connection, ensure external speakers are working if connected.
No picture on external display	AV cable not connected correctly, incorrect input selected on TV/projector.	Check AV cable connections, select the correct AV input on your TV/projector.
USB/SD card not recognized	Unsupported format, card/drive capacity too large (over 16GB), media corrupted.	Ensure media is formatted correctly (e.g., FAT32), check capacity (max 16GB), try a different USB/SD card.

9. SPECIFICATIONS

Feature	Detail
Model Number	SD05W
Screen Size	15.6 inches
Display Type	LCD
Resolution	1366 x 768
Disc Compatibility	DVD, CVD, VCD, SVCD, CD-R, CD-RW, DVD-R, DVD-RW, DVD+RW (Region-Free, CPRM compatible)
USB/SD Card Support	Up to 16GB
Supported Formats (USB/SD)	Video: MPEG, VOB, AVI, DIVX, FLV; Audio: MP3, WMA; Image: JPG, JPEG, BMP
Battery Capacity	5000mAh
Continuous Playback Time	Approx. 6 hours
Power Input	AC 100-240V (Adapter), DC 12V (Car Charger)
Connectivity	USB, SD Card, AV IN, AV OUT, Headphone Jack

Feature	Detail
Dimensions (approx.)	39 x 26 x 5 cm (15.35 x 10.24 x 1.97 inches)
Weight (approx.)	1.8 kg (3.97 lbs)

Note: Blu-ray discs and MP4 format are not supported.



Image: A size comparison showing the 15.6-inch Surfola Portable DVD Player next to a smaller 9.0-inch player, highlighting its larger screen size.

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided in your product packaging or visit the official Surfola website. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: Surfola

