

[Manuals.plus](#) /

› [Surfola](#) /

› Surfola Portable DVD Player SD03 User Manual

## Surfola SD03

# Surfola Portable DVD Player SD03 User Manual

Model: SD03 | Brand: Surfola

## 1. INTRODUCTION

---

This manual provides essential instructions for the safe and efficient operation of your Surfola Portable DVD Player, model SD03. Please read this manual thoroughly before using the device and retain it for future reference.

The Surfola Portable DVD Player SD03 is a compact and lightweight device designed for convenient media playback. It features a 7.5-inch LCD screen, region-free DVD playback, and multiple power options, making it suitable for various environments.

# 軽量でコンパクトなので 持ち運びやすく、

場所を取りません。



Image: The portable DVD player being easily placed into a handbag, highlighting its lightweight and compact design for portability.

## 2. PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- Surfola Portable DVD Player SD03
- Remote Control
- Power Adapter (AC100-240V compatible)
- AV Cable (Male)
- Car Charger (1.8M cigarette lighter socket cable)
- User Manual

## 3. PRODUCT OVERVIEW

---

### 3.1. Components and Controls

Familiarize yourself with the various parts and controls of your portable DVD player.



Image: Overview of the Surfola Portable DVD Player SD03, showing various ports and included accessories like USB memory, headphones, SD card, AV cables, and charger.

- **Screen:** 7.5-inch LCD display, rotatable 270 degrees horizontally and 180 degrees vertically.
- **Control Buttons:** Play, Pause, Stop, Fast Forward, Rewind, Menu, Volume, etc. (located on the player and remote).
- **Disc Tray:** For inserting DVDs/CDs.
- **Ports:**
  - USB Port: For connecting USB memory devices (up to 16GB).
  - SD Card Slot: For inserting SD cards (up to 16GB).
  - Earphone Jack: For private listening.
  - AV Output: To connect to an external display (TV, projector).
  - AV Input: To connect external video sources.
  - DC IN: For power adapter or car charger connection.
- **Speakers:** Built-in stereo speakers.

# 270°自由回転可能

自由に画面の角度を調節できるので、完璧な視界を得られてとても見やすいです。



上下180°反転で



左右270°回転



360°折りたたみ



Image: Demonstrates the 270-degree screen rotation and 180-degree flip feature of the portable DVD player, allowing for various viewing angles and tablet mode.

## 4. SETUP

### 4.1. Charging the Device

The player has a built-in rechargeable battery providing approximately 4-5 hours of continuous playback. Before first use, fully charge the device.

1. Connect the power adapter to the DC IN port on the player.
2. Plug the power adapter into a standard AC outlet (100-240V).
3. The charging indicator will illuminate. Charging is complete when the indicator changes color or turns off (refer to device specific indicator behavior).

Alternatively, use the included car charger to power the device in a vehicle. The 1.8-meter cable allows for flexible placement, reaching even rear seats.

# 3つの給電方式

充電アダプター (AC100~240V対応)



**充電アダプター (AC100~240V対応)**

室内で充電しながらDVDも視聴できる



**2500MAHバッテリー内蔵**

連続4時間再生ができる

**車載用シガーソケット  
アダプター**

12Vのシガーソケットが付き、  
長い車旅がより楽しくなる  
(DC9~12V対応)



Image: Illustration of the three power supply methods: AC adapter for home use, the internal 2500mAh battery for portable use, and the car charger for in-vehicle use.

## 4.2. Basic Connection to External Displays (TV/Projector)

To enjoy content on a larger screen, connect the DVD player to a TV or projector using the AV output port.

1. Ensure both the DVD player and the external display are powered off.
2. Connect one end of the included AV cable (male) to the AV OUT port on the DVD player.
3. Connect the other end of the AV cable to the corresponding AV input ports (usually yellow for video, white/red for audio) on your TV or projector.
4. Power on the external display and select the correct AV input source.
5. Power on the DVD player. The content from the DVD player should now be displayed on the external screen.


## テレビと同期可能 AV出力端子搭載



付属のAVケーブル(オス)



## プロジェクターと 同期可能

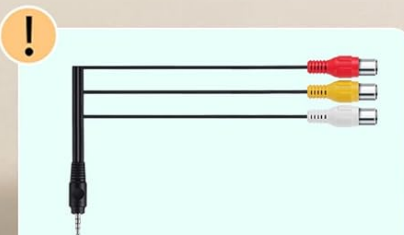

別売りのAVケーブル(メス)



Image: Demonstrates connecting the portable DVD player to a television using the included AV cable (male) and to a projector using a separately sold AV cable (female).

## 5. OPERATING INSTRUCTIONS

### 5.1. Playing a DVD/CD

Follow these simple steps to play a DVD or CD:

# 子供でも使える

使い方かんたん3ステップ



01 電源を入れる



02 DVDを入れる



03 映像が再生!

Image: A visual guide demonstrating three easy steps for playing a DVD: 1. Power on the device, 2. Insert a DVD, 3. The video plays automatically.

1. **Power On:** Ensure the player is charged or connected to a power source. Press the power button to turn it on.
2. **Insert Disc:** Open the disc cover and carefully place a DVD or CD onto the spindle with the label side facing up. Close the disc cover.
3. **Playback:** The player will automatically detect and begin playing the disc. Use the control buttons on the player or remote for playback functions (Play, Pause, Stop, Skip, Volume).

This player supports various disc formats including DVD±R, DVD±RW, CD-R, CD-RW, and is region-free, allowing playback of DVDs from any region. Blu-ray discs are not supported.

## 5.2. Playing Media from USB/SD Card

The player supports media playback from USB drives and SD cards up to 16GB.

1. Insert a USB drive into the USB port or an SD card into the SD card slot.
2. Use the 'Source' or 'Mode' button on the player or remote to select USB or SD as the input source.

3. Navigate through your files using the directional buttons and press 'Play' or 'OK' to start playback.

Supported file formats include:

- **Image:** JPG, JPEG, BMP
- **Audio:** MP3, WMA (Bitrate: 32-192Kbps)
- **Video:** VOB, AVI, MPEG, MPG, DIVX, FLV (Resolution: 800x480 or below). Note: MP4 video is not supported.



Image: Illustrates the player's capability to play various files from USB/SD cards up to 16GB, and its compatibility with domestic and international DVDs (region-free, CPRM compatible), excluding Blu-ray.

### 5.3. Subtitle Display Function

If your DVD supports subtitles, you can enable or disable them using the subtitle function.

1. During DVD playback, press the 'Subtitle' button on the remote control.
2. Select your desired subtitle track from the available options.

# 字幕表示機能搭載

英語の勉強/語学学習にも便利



※字幕設定可能なDVDを使用してください。



字幕表示

Image: A child watching the portable DVD player, highlighting the subtitle display function, which is useful for language learning. A remote control with a "Subtitle Display" button is also shown.

## 5.4. Last Memory Function (Resume Playback)

The player features a last memory function, allowing you to resume playback from where you left off, even after powering off the device.

# ラストメモリー機能

DVDを見ている途中で電源を切っても、再度その続きから見ることができます。



Image: Illustrates the last memory function, showing that if the power is turned off during playback, the device will resume from the last watched point when powered on again.

## 6. MAINTENANCE

### 6.1. Cleaning the Device

- Always power off and unplug the device before cleaning.
- Use a soft, dry cloth to wipe the exterior of the player.
- For the screen, use a soft, lint-free cloth specifically designed for electronics screens. Do not use abrasive cleaners or solvents.
- To clean the disc tray, use a specialized DVD/CD lens cleaner disc. Do not attempt to clean the lens manually.

### 6.2. Storage

- Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid storing in dusty or humid environments.

- When not in use for extended periods, ensure the battery is partially charged (around 50%) to prolong its lifespan.

## 7. TROUBLESHOOTING

If you encounter issues with your Surfola Portable DVD Player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Battery drained; Power adapter not connected properly.	Charge the battery; Ensure power adapter is securely connected to both the player and the outlet.
Disc not playing	Disc is dirty or scratched; Incorrect disc format; Disc inserted incorrectly.	Clean the disc; Ensure disc is a supported format (not Blu-ray); Reinsert disc with label side up.
No sound	Volume too low; Mute function active; External speakers/headphones not connected properly.	Increase volume; Disable mute; Check connections of external audio devices.
No picture on external display	AV cable not connected properly; Incorrect input source selected on TV/projector.	Check AV cable connections; Select the correct AV input on your TV/projector.
USB/SD card not recognized	Card/drive not inserted correctly; Unsupported file format; Card/drive capacity exceeds 16GB.	Reinsert card/drive; Ensure files are in supported formats; Use a card/drive within 16GB capacity.

If the problem persists after trying these solutions, please contact Surfola customer support.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Surfola
Model Number	SD03
Screen Size	7.5 inches
Display Type	LCD
Native Resolution	800x480
Color	White
Media Type Supported	CD-R, CD-RW, DVD+RW, DVD-R, DVD-RW (Region-Free, CPRM compatible, Blu-ray not supported)
Connectivity	USB, SD Card, AV Input, AV Output, Earphone Jack, DC IN
Compatible Devices	TV, Projector, Headphones
Battery Life	Approx. 4-5 hours continuous playback
Dimensions (L x W x H)	20.7 cm x 16 cm x 4.2 cm

Feature	Detail
Item Weight	0.68 kg
UPC	850068141203

## 9. WARRANTY AND SUPPORT

### 9.1. Warranty Information

This product comes with a **1-year manufacturer's warranty** from the date of purchase. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

For warranty claims, please retain your proof of purchase.

### 9.2. Customer Support

If you have any questions, require technical assistance, or need to report a problem, please contact Surfola customer support.

- **Email Support:** Available 24 hours.
- **Phone Support:** Weekdays 11:00-13:00 / 15:00-17:00 (excluding Saturdays, Sundays, and holidays).

For the most up-to-date contact information, please refer to the official Surfola website or your purchase documentation.





**5h** 平日・営業時間内  
日本語電話サポート



**24時間**  
迅速なメールサポート



**30日間**  
無料交換



**1年間**  
品質保証

安心保証

購入は、ゴールではなく、私たちとの約束の始まりです。

一つひとつのお声に真摯に向き合い、それが、SURFOLAのアフターサポートです。

ご購入後も、お客様との対話を大切に、毎日が少しでも快適になるよう寄り添います。

アクセサリ・部品について

SURFOLAをご利用のお客様は、充実したアフターサービスをご利用いただけます。

ご使用中に、部品の破損や紛失があった場合でも、アフターサービスチームへ直接ご連絡いただければ、交換部品をご提供いたします。



電話サポート  
平日 11:00-13:00 / 15:00-17:00  
(土日及び祝日を除く)



メールまたはAmazonメッセージ対応  
24時間迅速に対応

Image: Details on Surfola's customer support, including phone and email availability, free exchange policy, and 1-year quality guarantee.

© 2026 Surfola. All rights reserved.