Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > DETONGER /
- > DETONGER P1 Label Maker Machine User Manual

DETONGER P1

DETONGER P1 Label Maker Machine User Manual

Model: P1

Introduction Package Contents Product

Overview Setup Operation Maintenance Troubleshooting Specifications Warranty &

Support

1. Introduction

This manual provides detailed instructions for the safe and efficient use of your DETONGER P1 Label Maker Machine. Please read this manual thoroughly before operating the device and retain it for future reference.



Image: The DETONGER P1 Label Maker Machine, a compact white thermal printer, shown with several examples of labels it can produce, including shipping labels, product labels, and decorative labels.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1x DETONGER P1 Label Maker Machine
- 1x White Label Roll (2"x1.2", 240 sheets, pre-installed)
- 1x Type-C Charging Cable
- 1x User Manual
- 1x Certificate of Conformity



Image: A flat lay of the DETONGER P1 Label Maker Machine and its included accessories: a white label roll, a USB-C charging cable, a user manual, and a certificate of conformity.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your P1 Label Maker:

- Power Button: Long press to turn on/off. Short press to feed label.
- Status Indicator Light: Indicates device status (e.g., power on, charging, error).
- Label Exit Slot: Where printed labels emerge.
- Cover Release Button: Used to open the top cover for label loading.
- **USB-C Port:** For charging the device.



Image: The DETONGER P1 Label Maker with its top cover open, revealing the internal mechanism and a label roll, illustrating the label loading area.

4. SETUP

4.1. Charging the Device

Before first use, fully charge the label maker. Connect the provided USB-C cable to the device and a power source. The status indicator light will show charging status.



Image: A visual comparison showing the DETONGER P1 Label Maker with its 1800mAh battery, indicating 4-5 hours of continuous use, contrasted with a generic printer showing frequent charging needs.

4.2. Loading Label Paper

Follow these steps to correctly load the thermal label paper:

- 1. Press the cover release button to open the top cover.
- 2. Remove any existing label roll and the seal sticker from the new roll.
- 3. Insert the label roll into the machine, ensuring the print side is facing down.
- 4. Adjust the movable plate to secure the label roll in place, aligning it with the sensor on the right side.
- 5. Close the cover, leaving approximately 0.1-0.2 inches of label paper exposed from the exit slot.

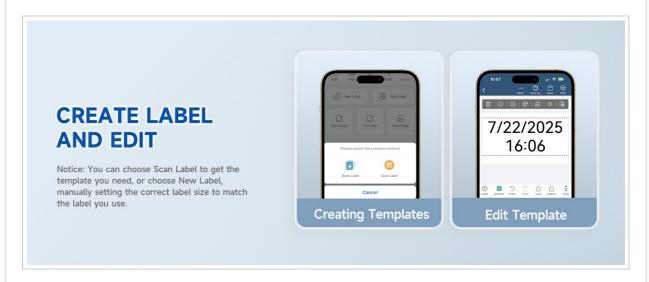


Image: A four-step visual guide demonstrating how to load label paper into the DETONGER P1 Label Maker, from opening the cover to ensuring the label is correctly positioned and exposed.

Your browser does not support the video tag.

Video: A demonstration of how to load paper into the DETONGER P1 Label Maker.

4.3. App Installation

The DETONGER P1 Label Maker operates with the "WePrint" application. Download the app from your device's app store (Google Play Store for Android or Apple App Store for iOS) or by scanning the QR code on the back of the packaging box.



Image: Instructions for downloading the "WePrint" application, showing icons for Google Play and Apple
App Store, and a QR code for easy access.

4.4. Bluetooth Connection

To connect your label maker to your smartphone via Bluetooth:

- 1. Ensure the label maker is powered on (long press the power button). The status indicator light should be active.
- 2. Enable Bluetooth and Location services on your smartphone.
- 3. Open the "WePrint" app. The app will automatically search for nearby printers.
- 4. Select your printer model (e.g., P1-XXXXXX) from the list and tap "Connect".
- 5. Alternatively, tap the "Unconnected" button in the top right corner of the app's homepage to initiate the connection process.



Image: A visual guide showing the steps to power on the printer and connect it to a smartphone via Bluetooth using the WePrint app.

Your browser does not support the video tag.

Video: A demonstration of how to connect the DETONGER P1 Label Maker to Bluetooth.

5. OPERATION

5.1. Creating and Editing Labels

The WePrint app offers various options for label creation:

- Scan Label: Scan the QR code on the label roll or packaging to automatically load the correct template.
- New Label: Manually set the label width and height to match your label paper.
- **Customization:** The app provides over 15 borders, 800+ symbols, 100+ fonts, and supports multiple languages for design.



Image: Screenshots of the WePrint app interface, showing options for creating new labels, scanning labels for templates, and editing label content with various design tools.

Your browser does not support the video tag.

Video: A demonstration of how to get label templates using the DETONGER P1 Label Maker app.

5.2. Printing

Once your label design is complete, tap the "Print" button in the app. The P1 Label Maker uses thermal

printing technology, requiring no ink or toner. It delivers 203 DPI prints with 15 levels of darkness adjustment for clear results.



Image: An example of labels printed by the DETONGER P1 Label Maker, shown on various containers, demonstrating its application for organizing kitchen items.

5.3. Label Types and Compatibility

The DETONGER P1 supports thermal labels with widths from 0.5 to 2 inches (12-50mm) and lengths from 0.8 to 2.8 inches (20-70mm). It is compatible with various shapes and colors of unencrypted thermal label paper, offering flexibility and cost savings.



Image: A display of various label shapes and sizes, including gift labels, apparel labels, QR code labels,

and price labels, all compatible with the DETONGER P1 Label Maker.

The labels produced are designed to be durable, featuring 7-layer coating for liquid-proof, tear-resistant, and scratch-resistant properties, with excellent adhesion and no adhesive residue upon removal.



Image: A collage illustrating the durability features of DETONGER P1 labels, including oil-proof, tear resistance, waterproof, non-shedding, scratch resistance, and no residue.

6. MAINTENANCE

6.1. Cleaning

Regular cleaning ensures optimal performance. Use a soft, dry cloth to wipe the exterior of the device. For the print head, use an alcohol wipe or a specialized thermal printer cleaning pen. Ensure the device is turned off before cleaning.

6.2. Storage

Store the label maker in a cool, dry place away from direct sunlight and extreme temperatures. When not in use for extended periods, ensure the device is fully charged before storage and recharge it periodically to maintain battery health.

7. TROUBLESHOOTING

If you encounter issues with your DETONGER P1 Label Maker, refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or power button not pressed correctly.	Charge the device. Long press the power button for 3 seconds.
Cannot connect via Bluetooth.	Bluetooth/Location off, app not detecting, or incorrect printer selected.	Ensure Bluetooth and Location are enabled. Restart the app. Select the correct printer model in the app.
Poor print quality.	Incorrect label loading, dirty print head, or low darkness setting.	Reload label paper correctly. Clean the print head. Adjust print darkness in the app.
Labels are misaligned or blank pages print.	Label paper not properly aligned with the sensor.	Open the cover, adjust the label roll and movable plate to ensure proper alignment with the sensor. Close the cover.

8. Specifications

Feature	Detail
Model	P1
Printing Technology	Thermal
Connectivity	Bluetooth, USB Type C
Print Resolution	203 DPI
Label Width Supported	0.5 - 2 inches (12 - 50 mm)
Label Length Supported	0.8 - 2.8 inches (20 - 70 mm)
Battery Capacity	1800mAh Rechargeable
Continuous Use Time	4-5 hours
Product Dimensions	3.62"D x 3.46"W x 2"H
Item Weight	7.3 ounces (208 Grams)
Controller Type	WePrint App

9. WARRANTY AND SUPPORT

The DETONGER P1 Label Maker Machine comes with a limited warranty. For specific warranty details, please refer to the warranty card included in your package or contact DETONGER customer support. For further assistance, technical support, or inquiries, please contact DETONGER customer service via Amazon. DETONGER offers 24/7 service to address any issues you may encounter.

You can also visit the official DETONGER store on Amazon for more information and related products: DETONGER Store

© 2025 DETONGER. All rights reserved.

Related Documents - P1



P1 Plastic Molded Running Board Installation Instructions for Ford F-150 and Super Duty Trucks
Detailed installation guide for P1 Plastic Molded Running Boards (Part# HW-WB-FT188) designed for 2015-2024 Ford F-150 Super Cab and 2017-2024 Ford F250/350/450/550 Super Duty Super Cab vehicles. Includes parts list and step-by-step instructions.



MakeID Label Printer-P1: User Manual and Quick Start Guide

This is the user manual and quick start guide for the MakeID Label Printer-P1. It provides detailed instructions on setup, label roll installation, software usage, printer parameters, troubleshooting, safety precautions, and warranty information.



USER MANUAL



Product Parameters

Print Method	Thermal Printing
Dim en sion	88×92×51mm
Weight	200 g
Label Width	Up to S8mm
Battery Capacity	1500mAh x 3.7V
Resolution	203DP1
Display Type	ROB LED
Operating Temperature	0℃ ~ 45℃
Charge Mode	Type-C 5V USB



Description of Status Light

Light Color	State	Description
Green	Breathing light	Blue tooth is not connected
Green	Almays on	Blue tooth is connected
Multipolar	Mixed flash	Label is printing
Red	50 ob e	Low veltage battery
Red	Breating light	Resharging
Yellow	Almays on	Out of paged Top cover is open
Yellow	Strate	Do not match the label

Fault Diagnosis

1. Fail to feed paper by pressing function button after lake! paper installation.
Phase confirm to late! paper is installed only printed in fee down.
Phase confirm take! fred out purit in the position of printed and orber cold.
Host, please put outparts the late! paper by manually and closs the printer to prove tighthy.

Paid to print
 Paids continued by phone this took turns on and connects with printe successfully.
 Phase section you use the rightAPP.

3. Printer points blurry

Please seeffor the print dakness in printer settings, generally, default
value 0 has best posting effect.

Mines or planes are not printed, please confirm whether there in foreign

Warnings

Prease certifies paper compatement is clean before using. It may cause damage to the ploth hand divining printing process if have in foreignments in it. If through measer is it foreign places are to great diseaser or after to clean paper occupants or compatement and print head in time.

devices inside it.

Phase a revision in a cool and usefulated soon, 30 not expose pointer and
process adopte to high temperature, high healthy or put it is notes, often-she share-close last cause before he healthy, and so make the cooling of the state of the shear of the shear

adapter, and it is sticity froblidden to use the power adapter robes the power cost is demaged, otherwise it could result in electric shock, fire, and damage to poster, Please half power adapter when unplugging it, the power cost will be damaged it put it directly.

Warranty Terms

Trom the date of purchase, the print head is guaranteed for 3 month and the remaining parts are guaranteed for 12 months.

The availably method is repair, user needs to send the malfunctioning product to sales service center.

The normally carries cannot be enjoyed if the following conditions occur
during the normally partied.


Demang caused by accident, abuse, reloase, or use of Non-Original
continuously.

Exceeds of the number of partied.

Dis accordable repair or not the points without a otherized;

2 Inch Portable Thermal Label Printer User Manual

User manual for the 2 inch Portable Thermal Label Printer, covering product guidelines, parameters, basic usage, status light descriptions, fault diagnosis, warnings, warranty terms, and FCC compliance.

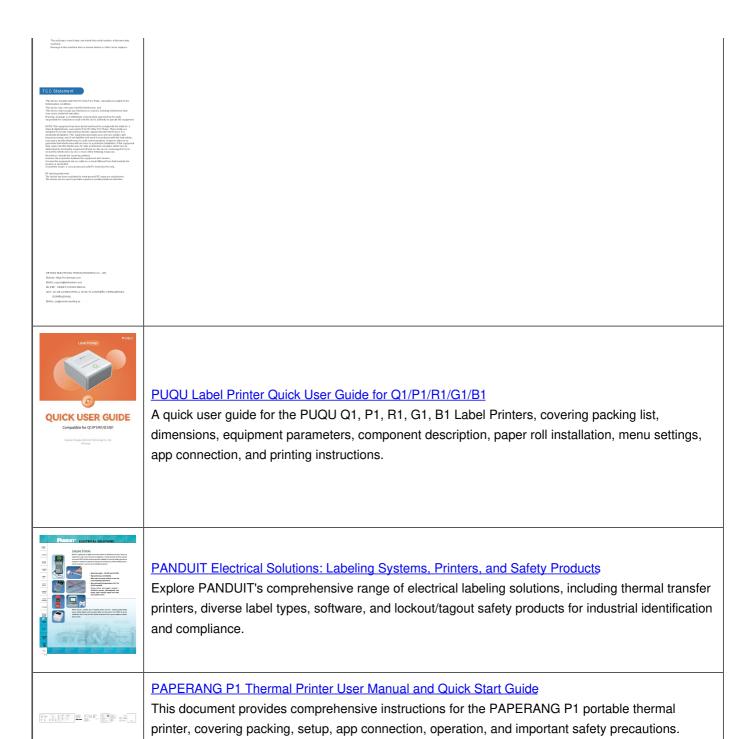

Learn how to use your PAPERANG printer efficiently.