

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Dovety](#) /

› [Dovety Handheld Steam Cleaner User Manual](#)

## Dovety TMSC-001

# Dovety Pressurized Handheld Steam Cleaner User Manual

Model: TMSC-001 | Brand: Dovety

## 1. PRODUCT OVERVIEW

The Dovety Pressurized Handheld Steam Cleaner is a versatile and powerful cleaning tool designed for various surfaces in your home and car. It utilizes high-temperature steam to effectively remove grime and grease without the need for harsh chemicals, ensuring a safe and healthy cleaning environment.

### Key Features:

- **Powerful Hot Steam:** 1000 watts of power, heats up in 3 minutes, providing 8-15 minutes of intense steam at 230°F.
- **Chemical-Free Cleaning:** Uses only water, making it safe for households with children and pets.
- **Portable & Convenient:** Lightweight, compact design with a 13.1-ft cord for easy maneuverability.
- **Multi-Surface Versatility:** Effective on kitchen grease, bathroom grime, car interiors, sofas, floors, upholstery, and tiles.
- **Safety Lock:** Features a reliable safety lock mechanism to prevent accidental steam release.
- **12-Piece Accessory Set:** Includes various brushes and nozzles for diverse cleaning tasks.



Image: The Dovety Handheld Steam Cleaner shown with its complete 12-piece accessory set, including the main unit, measuring cup, funnel, and various cleaning attachments.

## 2. SAFETY INSTRUCTIONS

Please read all safety warnings and instructions carefully before using this appliance to avoid electric shock, fire, and/or serious injury.

- Always ensure the safety lock is engaged when the device is not in active use to prevent accidental steam release.
- Do not point the steam nozzle at people, pets, or electrical appliances. Steam is extremely hot and can cause severe burns.
- Never open the water tank cap while the unit is pressurized or hot.
- **How to Open the Cap Safely:** To safely open the lid, first unplug the power cord. Invert the steam cleaner to release any remaining steam. Wait until the steam engine has cooled down completely before turning the lid counterclockwise to avoid burns.
- Use only clean tap water. Do not add any cleaning solutions, perfumes, or other chemicals to the water

tank, as this can damage the unit or produce harmful fumes.

- Keep the appliance out of reach of children and pets.
- Do not immerse the unit in water or other liquids.
- Always unplug the steam cleaner when not in use and before cleaning or performing maintenance.



Image: Illustration of the safety lock feature, showing the difference between steam being emitted and the unit being safely locked without steam.

### 3. PACKAGE CONTENTS

Your Dovety Handheld Steam Cleaner package includes the following items:

- Dovety Handheld Steam Cleaner Main Unit
- Measuring Cup
- Funnel
- Bent Spray Nozzle
- Glass Cleaning Accessory
- Extended Nozzle
- Plastic Round Brush
- Metal Round Brush
- Long Spray Nozzle
- Fabric Steamer Tool
- Cloth Cover for Fabric Steamer Tool
- Flexible Extension Hose



Image: A visual representation of the steam cleaner unit and its comprehensive 12-in-1 accessory set.

## 4. SETUP

1. **Prepare the Unit:** Ensure the steam cleaner is unplugged and completely cool before starting.
2. **Fill the Water Tank:** Unscrew the water tank cap. Using the provided measuring cup and funnel, fill the tank with up to 280ml of clean tap water. The maximum capacity is 350ml, but 280ml is recommended for optimal performance and to prevent overfilling. Do not exceed the MAX fill line.
3. **Secure the Cap:** Screw the water tank cap back on tightly to ensure a proper seal.
4. **Attach Desired Accessory:** Select the appropriate accessory for your cleaning task (e.g., bent spray nozzle for toilets, round brush for scrubbing). Attach it firmly to the steam cleaner's nozzle.
5. **Plug In:** Plug the power cord into a standard electrical outlet.



Image: Step-by-step illustration of filling the water tank of the steam cleaner.

## 5. OPERATING INSTRUCTIONS

1. **Heating Up:** Once plugged in, the steam cleaner will begin to heat up. This typically takes about 3 minutes. The indicator light will change or turn off when the unit is ready to produce steam.
2. **Release Steam:** Point the nozzle away from yourself and others. Press and hold the steam button to release steam. The steam temperature reaches 230°F (110°C).
3. **Cleaning Surfaces:**

- For general cleaning of kitchen grease, bathroom grime, car interiors, sofas, floors, upholstery, and tiles, move the steam cleaner slowly over the surface, allowing the hot steam to penetrate and loosen dirt.
  - Use the appropriate accessory for the task. For example, the round brushes are excellent for scrubbing stubborn spots, while the fabric steamer tool is ideal for refreshing upholstery or clothes.
  - For grout stains, use a long nozzle sprayer and plastic brush.
  - For stubborn oil stains, apply an oil stain remover first, wait 10-20 minutes, then use the steam cleaner and wipe clean with a cloth.
  - Older mold that has deeply penetrated surfaces may require repeated scrubbing.
4. **Refilling Water:** If steam production decreases or stops, the water tank may be empty. Refer to the "How to Open the Cap Safely" instructions in the Safety section before refilling.
  5. **Finishing Cleaning:** When finished, release any remaining steam, unplug the unit, and allow it to cool completely before storing.



Image: Visual representation of the steam cleaner's fast heating capability and high steam temperature.



**Bent spray nozzle**



**Glass Cleaning Accessory**



**Extended Nozzle**



**Round brush**



**Long spray nozzle**



**Fabric steamer tool**



**Stubborn stains, mold, and grout require repeated cleaning with cleaning agents for optimal results.**

Image: Examples of the steam cleaner's versatility with various accessories on different surfaces.

# POWERFUL & EFFICIENT

Subverting traditional cleaning methods



Image: A visual demonstration of the steam cleaner's effectiveness on a greasy stove top.

## 6. MAINTENANCE AND CARE

- **Cleaning the Unit:** After each use, ensure the unit is unplugged and completely cool. Wipe the exterior with a damp cloth.
- **Cleaning Accessories:** Most accessories can be rinsed with water. For fabric covers, hand wash as needed.
- **Descaling:** Over time, mineral deposits may build up inside the water tank, especially in hard water areas. If steam output decreases, descaling may be necessary. Consult the manufacturer's website or support for specific descaling instructions.
- **Storage:** Store the steam cleaner and its accessories in a cool, dry place, away from direct sunlight and out of reach of children.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank is empty or low. Unit not heated sufficiently. Mineral buildup.	Refill water tank (refer to Safety section for safe refilling). Allow 3 minutes for heating. Perform descaling if necessary.
Water leaking from nozzle.	Accessory not properly attached. Unit not fully heated.	Ensure accessory is securely attached. Wait for the unit to fully heat up before use.
Unit does not turn on.	Not plugged in correctly. Power outlet issue.	Check power cord connection. Try a different power outlet.

## 8. SPECIFICATIONS

<b>Brand</b>	Dovety
<b>Model Name</b>	TMSC-001
<b>Wattage</b>	1000 watts
<b>Tank Volume</b>	350 Milliliters (recommended fill: 280ml)
<b>Heat Time</b>	3 minutes
<b>Maximum Temperature</b>	230°F (110°C)
<b>Cable Length</b>	13.1 Feet
<b>Item Weight</b>	4.38 Pounds
<b>Product Dimensions</b>	10"D x 5.9"W x 9.5"H
<b>Power Source</b>	Corded Electric
<b>Voltage</b>	120 Volts
<b>Color</b>	Blue

## 9. WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please contact Dovety customer support directly. Refer to the product packaging or the official Dovety website for the most up-to-date contact details.

You can also visit the [Dovety Store on Amazon](#) for more product information and support resources.

© 2025 Dovety. All rights reserved.