

FOLIAGE G12/SE255/A301 Replacement Blade

FOLIAGE Replacement Blade Instruction Manual

For Bizerba Meat/Deli Slicers G12, SE255, A301



FOLIAGE Brand Logo

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use and maintenance of your FOLIAGE Replacement Blade for Bizerba Meat/Deli Slicers. Please read this manual thoroughly before installation and operation to ensure proper function and safety.

Safety Information:

- Always exercise extreme caution when handling sharp blades.
- Ensure the slicer is unplugged from the power source before any installation, cleaning, or maintenance procedures.
- Wear cut-resistant gloves when handling the blade.
- Keep the blade out of reach of children.

2. PRODUCT OVERVIEW

The FOLIAGE replacement blade is engineered for precision slicing, ensuring consistent results for various meats and deli items. It is designed to meet the performance standards of original Bizerba blades, providing a seamless cutting experience.



Image 2.1: FOLIAGE Replacement Blade for Bizerba Slicers

3. COMPATIBILITY

This FOLIAGE replacement blade is specifically designed to be compatible with the following Bizerba Meat/Deli Slicer models:

- Bizerba G12
- Bizerba SE255
- Bizerba A301

Please verify your slicer model number before attempting installation to ensure proper fit and safe operation.

4. SETUP (INSTALLATION)

Follow these steps carefully to install your new FOLIAGE replacement blade. Always prioritize safety.

- Step 1: Safety First.** Ensure the Bizerba slicer is completely powered off and unplugged from the electrical outlet. Wear cut-resistant gloves for protection.
- Step 2: Remove Old Blade.** Carefully locate the blade retaining mechanism on your slicer. Follow your slicer's original instruction manual for specific steps to safely remove the old blade. Dispose of the old blade responsibly according to local regulations.
- Step 3: Position New Blade.** Align the FOLIAGE replacement blade with the blade mounting hub on your slicer. Ensure the central hole and any alignment pins match correctly.
- Step 4: Secure New Blade.** Reattach the blade retaining mechanism, tightening all fasteners securely but without over-tightening. Refer to your slicer's manual for torque specifications if available.
- Step 5: Final Check.** Gently rotate the blade by hand (with power still off) to ensure it is properly seated and rotates freely without obstruction. Ensure all safety guards are in place before plugging in the slicer.

5. OPERATING (USAGE)

The FOLIAGE replacement blade is designed for optimal performance when used according to your Bizerba slicer's original operating instructions. Always ensure the blade is clean and properly installed before each use.

- Pre-Operation Check:** Before each use, confirm the blade is securely fastened and free from any debris.
- Slicing Technique:** For best results, maintain a consistent slicing speed and pressure. Avoid forcing the blade through tough materials, as this can damage the blade or the slicer motor.
- Safety Guards:** Always use the slicer with all safety guards and features in place as recommended by the slicer manufacturer.

6. MAINTENANCE

Proper maintenance will extend the life of your FOLIAGE replacement blade and ensure continued safe operation.

- Cleaning:** After each use, unplug the slicer and carefully remove the blade (following installation steps in reverse). Wash the blade immediately with warm, soapy water and a non-abrasive brush or cloth. Rinse thoroughly and dry completely to prevent corrosion. Do not use harsh chemicals or abrasive cleaners, as these can damage the blade's finish and sharpness.
- Storage:** Store the clean, dry blade in a safe location, preferably in its original packaging or a protective cover, to prevent accidental injury and maintain sharpness.
- Inspection:** Regularly inspect the blade for any signs of wear, damage, or dullness. A dull blade can lead to inefficient slicing and potential safety hazards. Replace the blade if significant wear, chips, or damage is observed.

7. TROUBLESHOOTING

If you encounter issues with your FOLIAGE replacement blade, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Poor Slicing Quality	Blade is dull or dirty. Blade not properly installed.	Clean the blade thoroughly. If dull, consider replacement. Re-install the blade, ensuring it is securely fastened and aligned.

Problem	Possible Cause	Solution
Blade Not Fitting	Incorrect model compatibility.	Verify your Bizerba slicer model against the compatible models listed in this manual. Ensure you have the correct FOLIAGE replacement blade.
Unusual Noise During Operation	Blade not properly seated or loose.	Immediately power off and unplug the slicer. Re-check blade installation to ensure it is securely fastened and aligned.

8. SPECIFICATIONS

- **Manufacturer:** FOLIAGE
- **ASIN:** B0DY7MQV96
- **Compatible Slicer Models:** Bizerba G12, SE255, A301
- **Item Model Number:** G12/SE255/A301 Replacement Blade
- **Date First Available:** February 24, 2025

9. WARRANTY AND SUPPORT

Warranty: FOLIAGE products are manufactured to high standards. For specific warranty information regarding your replacement blade, please refer to the product packaging or contact FOLIAGE customer support directly.

Customer Support: For assistance with your FOLIAGE replacement blade, including questions about installation, maintenance, or troubleshooting not covered in this manual, please contact our customer support team. Contact details can typically be found on our official website or product packaging.

We are committed to providing quality products and support to ensure your satisfaction.

© 2025 FOLIAGE. All rights reserved.

This manual is for informational purposes only. FOLIAGE is not affiliated with Bizerba.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DY7MQV96>

More documents and user manuals: <https://manuals.plus/>