

Seesii OT8E601-03

Seesii 2-in-1 Cordless Electric Hedge and Grass Trimmer User Manual

Model: OT8E601-03

Components	Setup	Operation	Safety Instructions	Product	Specifications	Warranty & Support
			Maintenance	Troubleshooting		
			Support			

INTRODUCTION

Thank you for choosing the Seesii 2-in-1 Cordless Electric Hedge and Grass Trimmer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new tool. Please read this manual thoroughly before first use and keep it for future reference.

This versatile tool is designed for trimming hedges, shrubs, small trees, and grass edges, offering convenience and precision for various gardening tasks.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

General Safety

- **Work Area Safety:** Keep the work area clean and well-lit. Cluttered or dark areas invite accidents. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- **Electrical Safety:** Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges, and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.

- **Personal Safety:** Always wear eye protection and hearing protection. Use appropriate personal protective equipment such as non-skid safety shoes, hard hat, or hearing protection when necessary. Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing, and gloves away from moving parts.
- **Tool Use and Care:** Do not force the power tool. Use the correct power tool for your application. It will do the job better and safer at the rate for which it was designed. Disconnect the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.
- **Battery Tool Use and Care:** Recharge only with the charger specified by the manufacturer. Use power tools only with specifically designated battery packs.

Specific Trimmer Safety

- Keep hands away from cutting blades. Do not attempt to remove cut material or hold material to be cut when blades are moving.
- Ensure the safety switch is pressed before activating the power button to prevent accidental start-ups.
- Inspect the area to be trimmed for foreign objects such as wires, fences, or other debris that could damage the blades or cause injury.
- Always use both hands to operate the trimmer.
- Do not operate the trimmer in wet conditions or rain.
- When transporting or storing the trimmer, always ensure the blade cover is in place.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Seesii 2-in-1 Cordless Electric Hedge and Grass Trimmer.



Image: The Seesii 2-in-1 Cordless Electric Hedge and Grass Trimmer, shown with the hedge trimming blade attached. The teal body, black handle, and silver blade are visible.

1. **Hedge Trimming Blade:** For pruning hedges, shrubs, and small trees.
2. **Grass Shearing Blade:** For trimming grass and edges.
3. **Blade Cover:** Protective cover for the blades during storage and transport.
4. **Safety Switch:** Must be pressed before activating the power button.
5. **Power Button:** Activates the trimmer.
6. **Ergonomic Handle:** Provides a comfortable grip.
7. **Battery Pack:** Rechargeable 20V 2000mAh lithium battery.
8. **Battery Charger:** For recharging the battery packs.
9. **Grass Catcher Attachment:** Collects clippings during grass shearing.

SETUP AND ASSEMBLY

Charging the Battery

1. Insert the battery pack into the charger. Ensure it clicks into place.
2. Plug the charger into a standard electrical outlet.
3. The indicator light on the charger will show the charging status (refer to charger manual for specific light indications).
4. Once fully charged, disconnect the charger from the outlet and remove the battery pack.

Attaching/Changing Blades

The Seesii 2-in-1 trimmer allows for tool-free blade changes.

1. **Ensure the battery is removed from the trimmer before changing blades.**
2. To remove a blade, locate the blade release mechanism (usually a button or lever) and activate it while carefully sliding the blade off.
3. To attach a new blade (either hedge or grass shear), align the blade with the trimmer's drive shaft and slide it into place until it clicks securely.
4. Verify the blade is firmly attached before re-inserting the battery.

Attaching the Grass Catcher (for Grass Shearing)

If using the grass shearing blade, the grass catcher can be attached to collect clippings.

1. Ensure the grass shearing blade is securely attached.
2. Align the grass catcher attachment with the designated slots on the trimmer body.
3. Push firmly until it snaps into place.

OPERATION

Starting the Trimmer

1. Ensure the correct blade is installed and the battery is fully charged and inserted into the trimmer.
2. Grip the handle firmly with both hands.
3. Press and hold the **Safety Switch** (usually a button on the handle).
4. While holding the safety switch, press the **Power Button** to start the trimmer.
5. Release the power button to stop the trimmer. The safety switch can then be released.

Hedge Trimming

- Use the longer hedge trimming blade for this task.
- Hold the trimmer firmly with both hands.
- Begin trimming from the bottom of the hedge and work your way upwards.
- Maintain a steady, sweeping motion. Avoid forcing the blade through thick branches.
- The trimmer can cut branches up to 8mm thick. For thicker branches, use appropriate pruning shears.

Grass Shearing

- Use the shorter grass shearing blade for this task.
- Attach the grass catcher if desired.
- Hold the trimmer at a slight angle to the ground.
- Move the trimmer along the edge of the lawn or around obstacles with a smooth, controlled motion.
- Empty the grass catcher when full.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your trimmer.

Cleaning

- **Always remove the battery pack before cleaning.**
- After each use, clean the blades with a stiff brush to remove sap, leaves, and debris.
- Wipe down the trimmer body with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Ensure all parts are dry before storing.

Blade Care

- Periodically apply a light machine oil or blade lubricant to the blades to prevent rust and ensure smooth operation.
- If blades become dull, they can be sharpened by a qualified service technician or replaced.
- Always store blades with the blade cover in place.

Battery Storage

- Store battery packs in a cool, dry place, away from direct sunlight and extreme temperatures.
- For long-term storage, charge the battery to approximately 50% capacity.
- Do not store battery packs with metal objects that could short the terminals.

TROUBLESHOOTING

If you encounter issues with your trimmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not start.	Battery not charged or improperly inserted. Safety switch not engaged.	Ensure battery is fully charged and correctly inserted. Press and hold the safety switch before pressing the power button.
Blades are not cutting effectively.	Blades are dull or dirty. Material being cut is too thick.	Clean and lubricate blades. Sharpen or replace blades if dull. Do not attempt to cut branches thicker than 8mm.
Trimmer stops during operation.	Battery is low. Overload protection activated.	Recharge the battery. Reduce the load on the trimmer; avoid cutting excessively thick material. Allow the tool to cool down if it overheats.
Excessive vibration.	Blade improperly installed or damaged.	Remove battery, inspect blade for damage. Reinstall blade correctly. Replace damaged blades.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	OT8E601-03
Brand	Seesii
Power Source	Battery Powered
Battery Type	20V 2000mAh Lithium-ion (x2 included)
Motor Type	Brushless Motor
No-Load Speed	1200 rpm
Hedge Blade Length	9.8 inches
Grass Blade Width	6.3 inches
Max Cutting Diameter	8 mm
Item Weight	6 pounds
Product Dimensions	8"L x 4"W x 15"H

WARRANTY AND SUPPORT

Seesii products are manufactured to high-quality standards. For information regarding warranty coverage, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Seesii website.

If you require assistance, please have your model number (OT8E601-03) and purchase date available when contacting support.

For further assistance, you may visit the [Seesii Store on Amazon](#).

