

VGR V-735

VGR V-735 Women's Hair Removal Machine User Manual

Model: V-735 | Brand: VGR

1. INTRODUCTION

Thank you for choosing the VGR V-735 Women's Hair Removal Machine. This device is designed for efficient and gentle hair removal, providing long-lasting smooth skin. It features a professional design suitable for various body areas, including legs, arms, underarms, and the bikini area. Please read this manual carefully before use to ensure safe and optimal performance.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Keep the appliance away from water when charging.
- Do not use the appliance if it is damaged or malfunctioning.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Keep out of reach of children.
- Only use the charger provided with the appliance.
- Do not disassemble the appliance. For repairs, contact qualified service personnel.
- Avoid using on irritated, sunburned, or broken skin. Consult a doctor if you have skin conditions.

3. PRODUCT COMPONENTS

The VGR V-735 hair removal machine comes with several components to enhance your grooming experience.



Image 1: VGR V-735 Hair Removal Machine with various attachments and charging cable.

- **Main Unit:** The ergonomic handle containing the motor and rechargeable battery.
- **Foil Shaver Head:** For close and gentle shaving.
- **Trimmer Head:** For pre-trimming longer hairs.
- **Protective Cap:** To cover the shaver head when not in use.
- **Cleaning Brush:** For removing hair residue from the heads.
- **USB Charging Cable:** For recharging the device.
- **Guide Combs:** Two adjustable guide combs for different hair lengths.

4. SETUP

4.1 Charging the Device

1. Ensure the device is switched off before charging.
2. Connect the USB charging cable to the charging port on the device.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
4. The charging indicator light will illuminate, indicating that the device is charging.
5. A full charge typically takes approximately 8 hours and provides extended cordless operation.
6. Unplug the device once fully charged. Do not overcharge.

4.2 Attaching/Detaching Heads

1. To attach a head (e.g., foil shaver or trimmer), align the head with the main unit and press it down until it clicks into place.
2. To detach a head, gently pull it upwards while holding the main unit firmly.
3. Ensure the device is switched off before changing heads.

5. OPERATING INSTRUCTIONS

5.1 General Use

1. Ensure your skin is clean and free of oils or lotions.
2. Press the power button to turn on the device. The integrated LED light will illuminate to help you see fine hairs.
3. Select the desired speed setting. The VGR V-735 offers two adjustable speeds to suit different hair densities and skin sensitivities.

4. Hold the device at a 90-degree angle to your skin and move it gently against the direction of hair growth.
5. Stretch your skin taut with your free hand to ensure optimal contact and reduce discomfort.
6. After use, press the power button to turn off the device.

5.2 Wet and Dry Use

The VGR V-735 is water-resistant, allowing for both wet and dry hair removal. For wet use, you can use it in the shower or bath with foam or gel for a more comfortable experience. For dry use, ensure your skin is completely dry for optimal results.

5.3 Using Guide Combs

Attach the desired guide comb to the trimmer head for precise hair trimming to a specific length. Ensure the comb is securely attached before operating the device.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your VGR V-735 hair removal machine.



Image 2: VGR V-735 Hair Removal Machine showcasing its detachable heads for easy cleaning.

1. Turn off and unplug the device before cleaning.
2. Detach the shaver or trimmer head from the main unit.
3. Use the provided cleaning brush to remove any trapped hairs from the blades and foil.
4. For a more thorough clean, the detachable heads can be rinsed under running water. Ensure they are completely dry before reattaching or storing.
5. Wipe the main unit with a damp cloth. Do not submerge the main unit in water.
6. Store the device in a dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device for at least 8 hours.
Poor hair removal performance.	Blades are dull or clogged with hair.	Clean the shaver/trimmer head thoroughly. Consider replacing the head if blades are dull.
Device stops during use.	Battery is low.	Recharge the device.
Skin irritation after use.	Incorrect technique or sensitive skin.	Ensure proper technique (90-degree angle, against hair growth). Use on wet skin with foam/gel. Apply soothing lotion after use. If irritation persists, discontinue use.

8. SPECIFICATIONS

Feature	Detail
Model Name	V-735
Power Source	Battery Powered (Rechargeable)
Blade Material	Stainless Steel
Head Type	Foil
Special Features	Detachable Head, Wet/Dry Use, LED Light, 2 Adjustable Speeds, Pain Reduction Technology
Recommended Uses	Legs, Arms, Underarms, Bikini Area
Item Weight	300 grams
Color	Light Green (as pictured, note: product data listed 'Black')
Country of Origin	Egypt

9. WARRANTY AND SUPPORT

The VGR V-735 Hair Removal Machine is designed for durability and performance. For specific warranty information, please refer to the warranty card included in your product packaging or contact the retailer where you purchased the device.

For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact VGR customer service through their official website or the contact information provided in your product documentation.