

[Manuals.plus](#) /

› [SICOTAS](#) /

› SICOTAS Rattan Sideboard Buffet Cabinet SC017 - Instruction Manual

SICOTAS SC017

SICOTAS Rattan Sideboard Buffet Cabinet (Model SC017) - Instruction Manual

Your guide to assembly, operation, and care.

1. SAFETY INFORMATION

Always follow the assembly instructions carefully. Use appropriate tools and safety gear when assembling the cabinet to prevent injuries.

- Ensure all parts are present before beginning assembly.
- Do not overtighten screws to avoid damaging the wood.
- Place the cabinet on a flat, stable surface.
- Keep small parts away from children during assembly.
- If any parts are missing or damaged, contact customer support immediately.

2. PRODUCT OVERVIEW

The SICOTAS Rattan Sideboard Buffet Cabinet (Model SC017) is a versatile storage unit designed for various rooms including the kitchen, living room, dining room, and entryway. It features a boho-inspired design with rattan accents and a light oak finish.

Key Features:

- **Boho-Inspired Design:** Combines classic rattan accents with a wood grain finish.
- **Ample and Flexible Storage:** Three doors and two drawers, with two adjustable shelves inside.
- **Durable Material:** Made from FSC-certified, high-quality engineered wood.
- **Versatile Use:** Functions as a TV console, coffee bar, buffet table, or entryway cabinet.

Dimensions:

- **Product Dimensions:** 14"D x 43.5"W x 33.9"H
- **Item Weight:** 78.3 Pounds



Image: Front view of the SICOTAS Rattan Sideboard Buffet Cabinet, highlighting its overall dimensions of 14"D x 43.5"W x 33.9"H.

3. SETUP AND ASSEMBLY

The SICOTAS Rattan Sideboard Buffet Cabinet requires assembly. Please follow the included instructions carefully. It is recommended to have two people for assembly to ensure stability and ease of construction.

Assembly Tips:

- Attach the small fasteners to the back of the cabinet.
- Tighten screws at a 45-degree angle for enhanced stability and sturdiness.
- Organize all components and hardware before starting.
- Use a soft cloth or cardboard to protect surfaces during assembly.

Your browser does not support the video tag.

Video: An overview of the SICOTAS Rattan Storage Cabinet, demonstrating its features and potential placement in a home setting.

This video is provided by the seller, SICOTAS.

Your browser does not support the video tag.

Video: A detailed look at the SICOTAS Light Oak Cabinet with 3 Doors and 2 Drawers, showcasing its design and storage capabilities. This video is provided by the seller, SICOTAS.

4. OPERATION AND STORAGE

The cabinet is designed for easy access and organization. It features two top drawers and three lower doors, each concealing adjustable shelving.

Using the Drawers:

- Gently pull the golden handles to open the drawers.
- Push firmly to close, ensuring they are fully seated.

Adjusting Shelves:

- The interior shelves are adjustable to three different heights.
- To adjust, remove items from the shelf, lift the shelf, and reposition the shelf pins to the desired height.
- Ensure all four shelf pins are securely in place before placing items on the shelf.



Image: The interior of the SICOTAS Rattan Sideboard Buffet Cabinet with doors open, illustrating the adjustable shelves and ample storage space for various items.



Image: The SICOTAS Rattan Sideboard Buffet Cabinet configured as a coffee bar, demonstrating its versatility and storage capacity for kitchen essentials.

5. CARE AND MAINTENANCE

Proper care will ensure the longevity and appearance of your SICOTAS Rattan Sideboard Buffet Cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust with a dry, soft cloth.
- **Spills:** Clean spills immediately to prevent staining.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading of the wood finish.
- **Humidity:** Maintain a stable humidity level to prevent warping or cracking of the wood.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cabinet feels wobbly.	Screws are loose or not tightened correctly.	Check all screws and tighten them, especially those at a 45-degree angle as per assembly tips. Ensure the cabinet is on a level surface.
Drawers do not slide smoothly.	Drawer slides are misaligned or obstructed.	Verify that the drawer slides are correctly installed and free from debris. Apply a silicone-based lubricant if necessary.
Doors do not close properly.	Hinges are misaligned or loose.	Adjust the hinges to ensure proper alignment. Tighten any loose hinge screws.

7. SPECIFICATIONS

- **Brand:** SICOTAS
- **Model Number:** SC017
- **Color:** Reclaimed Light Oak
- **Material:** Engineered Wood, Rattan
- **Product Dimensions:** 14"D x 43.5"W x 33.9"H
- **Item Weight:** 78.3 Pounds
- **Number of Doors:** 3
- **Number of Drawers:** 2
- **Number of Shelves:** 5 (Adjustable)
- **Mounting Type:** Floor Mount
- **Assembly Required:** Yes
- **UPC:** 635508492721

8. WARRANTY AND SUPPORT

SICOTAS offers hassle-free after-sales service. Our dedicated customer service team is available 7 days a week to assist with any issues or questions you may have regarding your product.

For support, please refer to the contact information provided with your purchase or visit the official SICOTAS store on Amazon.

Return Policy: This product is eligible for 30-day easy returns.

Protection Plans: Optional 2-Year and 3-Year Protection Plans are available for purchase separately.

