

[Manuals.plus](#) /

› [KODAK](#) /

› KODAK PIXPRO C1 Friendly Zoom Digital Camera User Manual

KODAK C1-BK

KODAK PIXPRO C1 Friendly Zoom Digital Camera User Manual

Model: C1-BK

INTRODUCTION

This manual provides comprehensive instructions for the KODAK PIXPRO C1 Friendly Zoom Digital Camera. It covers essential information regarding setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device. Please read this manual thoroughly before using your camera.



Figure 1: Front view of the KODAK PIXPRO C1 Digital Camera, showcasing its compact design and lens.

WHAT'S IN THE BOX

Upon opening the package, please verify that all components listed below are present and in good condition:

- KODAK PIXPRO C1 Digital Camera Body
- USB Cable
- Power Adapter
- Wrist Strap
- Quick Start Guide
- Warranty Card
- AAAA Battery (pre-installed or included separately)



Figure 2: All items included in the KODAK PIXPRO C1 retail package, including the camera, cables, and documentation.

SETUP

1. Battery Installation and Charging

The KODAK PIXPRO C1 camera uses an AAAA battery. Ensure the battery is correctly inserted into the battery compartment, typically located at the bottom of the camera. Align the battery according to the polarity indicators (+/-). For initial use, or if the battery is low, connect the camera to the power adapter using the provided USB cable to charge the battery. The charging indicator light will illuminate during charging and turn off when fully charged.

2. Inserting a Memory Card

The camera requires a microSD card (not included) for storing photos and videos. Locate the memory card slot, usually near the battery compartment or on the side of the camera. Insert the microSD card with the gold contacts facing down until it clicks into place. Ensure the card is fully seated to prevent data loss.



Figure 3: Top-down view of the KODAK PIXPRO C1, illustrating the power button and potential port locations for charging and memory card access.

3. Initial Power On and Settings

Press and hold the power button (typically on the top of the camera) to turn on the camera. Upon first use, you may be prompted to set the date, time, and language. Navigate through the menu using the directional buttons and confirm selections with the 'SET' button. The camera's default language is Italian, but it can be changed in the settings menu.

Basic Controls Overview



Figure 4: Rear view of the KODAK PIXPRO C1, highlighting the LCD screen and control buttons for navigation and settings.

- **Shutter Button:** Located on the top, press halfway to focus, fully to capture.
- **Zoom Lever (T/W):** Adjusts optical zoom (4x) for telephoto (T) or wide-angle (W) views.
- **Mode Button:** Cycles through various shooting modes (e.g., Auto, Scene Modes).
- **Menu Button:** Accesses the camera's main settings menu.
- **DISP. Button:** Toggles display information on the LCD screen.
- **SET Button:** Confirms selections in menus.
- **Directional Buttons:** Navigate menus and adjust settings.

Taking Photos

1. Turn on the camera.
2. Frame your shot using the 2.8-inch LCD screen.
3. Adjust zoom as needed using the T/W lever.
4. Press the shutter button halfway to achieve focus (a green frame will appear).
5. Press the shutter button fully to capture the image.

Recording Videos

The KODAK PIXPRO C1 supports 1080P Full HD video recording.

1. Switch to video recording mode (if applicable, via the Mode button or a dedicated video record button).
2. Press the dedicated record button (often marked with a red dot) to start recording.
3. Press the record button again to stop recording.

Using the 180° Tilt LCD Flip Screen

The camera features a 2.8-inch LCD screen that can tilt 180 degrees, making it ideal for selfies and vlogging.



Figure 5: The KODAK PIXPRO C1 with its 180-degree tilt LCD screen in the upward position, suitable for self-portraits or low-angle shots.

Gently pull the top edge of the LCD screen outwards and rotate it upwards until it faces the front of the camera. This allows you to easily compose self-portraits or monitor your video recordings when you are in front of the lens.

Playback and Connecting to a Computer

To view your captured photos and videos, press the Playback button (often indicated by a triangle icon). Use the directional buttons to navigate through your media.

To transfer files to a computer, connect the camera using the supplied USB cable. The camera should appear as a

removable drive on your computer, allowing you to copy files directly.

MAINTENANCE

Cleaning the Camera

- **Lens:** Use a soft, lint-free microfiber cloth specifically designed for optical lenses. Gently wipe in a circular motion. Avoid using harsh chemicals or abrasive materials.
- **LCD Screen:** Wipe with a clean, soft cloth. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner solution.
- **Camera Body:** Use a dry, soft cloth to wipe away dust and fingerprints.

Battery Care

- Charge the battery fully before first use.
- Avoid exposing the battery to extreme temperatures.
- If storing the camera for an extended period, remove the battery.

Storage

Store the camera in a cool, dry place away from direct sunlight, dust, and moisture. Consider using a camera bag or case for added protection during transport.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is depleted or incorrectly inserted.	Charge the battery. Ensure battery is inserted with correct polarity.
Cannot take photos.	Memory card is full, locked, or not inserted.	Delete some files, unlock the card, or insert a new card.
Images are blurry.	Lens is dirty, insufficient light, or camera shake.	Clean the lens. Use flash or shoot in brighter conditions. Hold camera steady.
Camera freezes or becomes unresponsive.	Software glitch.	Remove and reinsert the battery to reset the camera.

If the problem persists after attempting these solutions, please refer to the Warranty and Support section for further assistance.

SPECIFICATIONS

Feature	Detail
Model Name	C1
Brand	KODAK
Item Model Number	C1-BK
Maximum Webcam Image Resolution	13.12 MP
Photo Sensor Size	1/3-inch
Photo Sensor Technology	BSI CMOS
Optical Zoom	4x
Image Stabilization	Digital
Supported File Format	JPEG
Aspect Ratio	4:3
Compatible Mountings	Tripod Socket
Batteries	1 AAAA battery (included)
Item Weight	3.95 ounces
Manufacturer	KODAK PIXPRO
Country of Origin	China
Date First Available	June 5, 2025

WARRANTY AND SUPPORT

Limited Warranty

The KODAK PIXPRO C1 camera comes with a limited warranty. Please refer to the "Warranty Card" included in your product packaging for detailed terms and conditions, including coverage period, what is covered, and how to make a claim. This warranty typically covers defects in materials and workmanship under normal use.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact KODAK PIXPRO customer support. Contact information can usually be found on the manufacturer's official website or on the warranty card.

You may also visit the official KODAK store on Amazon for additional product information and support resources: [KODAK Store on Amazon](#)

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I configure the Kodak PIXPRO C1 to automatically organize photo files into date-based folders instead of saving everything to the '100KODC1' folder?

Based on the available documentation for the KODAK PIXPRO C1, the camera follows a standard DCIM (Digital Camera Images) folder structure, which typically defaults to a single folder like 100KODC1 for all captures. Unfortunately, the...

[Read full answer](#)

How can I change the photo storage settings on the KODAK PIXPRO C1 so that photos are saved in folders based on the date they were taken instead of the default 100KODC1 folder?

Based on the available documentation for the KODAK PIXPRO C1, the camera uses a standard DCIM folder structure (e.g., 100KODC1) to store images. The manual does not list a specific setting to automatically generate...

[Read full answer](#)

How do I adjust the LED screen display time on the KODAK PIXPRO C1-BK digital camera?

Based on the KODAK PIXPRO C1-BK manual, there is no specific mention of a "screen timeout" or "display duration" setting. However, you can typically find these options within the camera's main settings menu to...

[Read full answer](#)