

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Generic for Richmat HJC25 ML150 127780C250033

Replacement Remote Control User Manual

For Richmat Adjustable Bed Base Control Box

PRODUCT OVERVIEW

This manual provides instructions for the replacement remote control for specific Richmat adjustable bed base control boxes. This remote is designed to replace lost or damaged original remotes and is compatible with the model **for Richmat HJC25 ML150 127780C250033**.



Figure 1: Front view of the replacement remote control. It features dedicated buttons for adjusting head and foot positions, as well as a 'FLAT' button to return the bed to a flat position.

IMPORTANT COMPATIBILITY NOTE

This remote control is specifically designed to work with the Richmat HJC25 ML150 127780C250033 control box. It is crucial to verify your existing control box model number to ensure compatibility. This remote is **not compatible** with OKIN Control boxes or other models not explicitly listed.

Before attempting to pair, ensure your old remote is identical in button layout and functionality to the replacement remote. If you are unsure about compatibility, it is recommended to provide detailed information about your bed, control box, and old remote control to the supplier for verification.

Important Note:

Before placing your order
please provide us with clear pictures
of your control box and old remote
(front & back) in order to match
the correct remote to your bed,
like this:

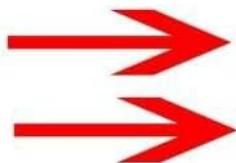


Figure 2: Visual guide for identifying your control box and old remote for compatibility verification. This image highlights the importance of matching the control box model and the appearance of your previous remote.

SETUP AND PAIRING INSTRUCTIONS

The replacement remote requires 2 AAA batteries (not included). Please install them before proceeding with the pairing process.



Figure 3: Rear view of the remote control, illustrating the battery compartment. Ensure 2 AAA batteries are correctly inserted according to polarity markings.

Pairing Method:

1. **Step 1:** On the remote, press and hold the "head up" button and the "foot up" button simultaneously for 10 seconds.
2. **Step 2:** Locate the control box underneath your adjustable bed. Push the button on the side of the control box that indicates "Learn" or "Reset Coding". ***Do not press and hold this button; simply press and release it quickly.***
3. **Step 3:** Once you hear beeps, this indicates that the remote has successfully synced with the control box.

It is recommended to refer to the original user manual for your adjustable bed base for any specific pairing instructions or additional details unique to your bed model.

OPERATING INSTRUCTIONS

Once successfully paired, the remote control allows you to adjust the positions of your adjustable bed base. The remote

features the following primary functions:

- **Head Up/Down:** Buttons with a person icon showing the upper body raised or lowered. Press to raise or lower the head section of the bed.
- **Foot Up/Down:** Buttons with a person icon showing the lower body raised or lowered. Press to raise or lower the foot section of the bed.
- **FLAT:** A central button labeled "FLAT". Press this button to return both the head and foot sections of the bed to a completely flat position.

For advanced features or specific preset positions, please consult the original manual provided with your adjustable bed base, as this remote is a replacement for basic functionality.

MAINTENANCE

To ensure optimal performance and longevity of your remote control:

- **Battery Replacement:** The remote requires 2 AAA batteries. Replace batteries when the remote's response becomes sluggish or stops working. Always use new, good quality batteries.
- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a dry place, away from extreme temperatures and direct sunlight.

TROUBLESHOOTING

If you encounter issues with your replacement remote control, please refer to the following common solutions:

- **Remote Not Responding:**
 - Check if the batteries are correctly inserted and have sufficient charge. Replace them if necessary.
 - Ensure there are no obstructions between the remote and the bed's control box.
 - Re-attempt the pairing process as described in the "Setup and Pairing Instructions" section.
- **Incorrect Functionality:**
 - Verify that the remote model is indeed compatible with your specific Richmat control box model (for Richmat HJC25 ML150 127780C250033).
 - Confirm that your old remote had an identical button layout and functions.
- **Remote Does Not Pair:**
 - Ensure you are pressing and holding the correct buttons on the remote for 10 seconds (head up + foot up).
 - Make sure you are pressing and *releasing* the "Learn" or "Reset Coding" button on the control box, not holding it down.
 - Check the original bed base manual for any alternative pairing methods or specific requirements.

If the issue persists after following these steps, please contact customer support with detailed information about your bed, control box, and the remote.

SPECIFICATIONS

Feature	Detail
Model Number	for Richmat HJC25 ML150 127780C250033

Compatible Control Box	Richmat HJC25 ML150 127780C250033 (also compatible with NL200U 127780C180169 as per product features)
Power Source	2 x AAA Batteries (not included)
Color	Black
Max Number of Supported Devices	1
Compatible Devices	Adjustable bed base
Manufacturer	SZHKHDX

WARRANTY AND SUPPORT

This product is a replacement part. For specific warranty information, please refer to the original purchase terms or contact the seller directly. No explicit warranty information is provided with this replacement remote.

Customer Support:

If you require further assistance, have questions regarding compatibility, or encounter issues not covered in the troubleshooting section, please contact the supplier. When contacting support, be prepared to provide:

- Detailed information about your adjustable bed base (brand, model).
- The model number of your existing control box.
- Pictures of your old remote control (front and back) and the control box label.
- A description of the issue you are experiencing.

Providing this information will help expedite the support process and ensure accurate assistance.