



Manuals.plus /

› IYZPCTMC /

› IYZPCTMC Air Fryer Basket Accessory for Philips HD9622, HD9642, HD9643, HD9627, HD9646, HD9647 - Instruction Manual

IYZPCTMC IYZPCTMC

IYZPCTMC Air Fryer Basket Accessory Instruction Manual

Model: IYZPCTMC

INTRODUCTION

This manual provides essential information for the safe and effective use of your IYZPCTMC Air Fryer Basket Accessory. Designed to enhance your air frying experience, this inner basket is a compatible replacement or additional accessory for specific Philips Air Fryer models. Please read these instructions thoroughly before first use and retain for future reference.

PRODUCT COMPATIBILITY

This air fryer basket accessory is specifically designed for compatibility with the following Philips Air Fryer models:

- Philips HD9622
- Philips HD9642
- Philips HD9643
- Philips HD9627
- Philips HD9646
- Philips HD9647

Ensure your air fryer model matches one of the listed compatible models for proper fit and function.

KEY FEATURES

- **Enhanced Cooking Efficiency:** The inner basket design is optimized to improve cooking efficiency, meeting various culinary needs.
- **Accelerated Thermal Conduction:** Features a design that reduces energy consumption and shortens overall cooking time, also suitable for use as an oven rack or steamer rack.
- **Non-Stick Surface:** The basket is equipped with a non-stick coating, making it easy to clean and maintain.
- **Even Heat Distribution:** The accessory structure ensures food is heated uniformly, contributing to perfectly crispy results.

SETUP AND INSTALLATION

1. **Unpack:** Carefully remove the air fryer basket accessory from its packaging. Inspect for any signs of damage.
2. **Initial Cleaning:** Before first use, wash the basket with warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Insert the clean basket into the designated slot within your compatible Philips Air Fryer. Ensure it sits securely and correctly. Do not force the basket into place.



Image 1: The IYZPCTMC Air Fryer Inner Basket, showing its overall structure and non-stick interior. This image illustrates the main component of the accessory.

OPERATING INSTRUCTIONS

1. **Prepare Food:** Place your food items directly into the air fryer basket. Avoid overfilling to ensure proper air circulation and even cooking.
2. **Insert Basket:** Slide the basket, with food inside, into your air fryer unit.
3. **Cook:** Operate your air fryer according to its specific model instructions for temperature and time settings. The basket's design promotes efficient cooking.
4. **Remove Food:** Once cooking is complete, carefully remove the basket from the air fryer. Use heat-resistant gloves or utensils as the basket will be hot.



Image 2: A top-down view of the IYZPCTMC Air Fryer Basket, highlighting the rim and attachment points. This view helps in understanding how the basket fits into the air fryer unit.

MAINTENANCE AND CLEANING

Regular cleaning will prolong the life of your air fryer basket accessory and maintain its non-stick properties.

- **After Each Use:** Allow the basket to cool completely before cleaning.
- **Hand Washing:** Wash the basket with warm water and a mild dish soap using a soft sponge or cloth. Avoid abrasive cleaners or scouring pads, which can damage the non-stick coating.
- **Dishwasher:** While the basket may be dishwasher safe, hand washing is recommended to preserve the non-stick coating over time.
- **Drying:** Dry the basket thoroughly after washing to prevent water spots and ensure hygiene.
- **Storage:** Store the clean, dry basket in a safe place until its next use.

TROUBLESHOOTING

If you encounter any issues with your air fryer basket accessory, consider the following:

- **Basket Not Fitting:** Ensure your air fryer model is listed under the "Product Compatibility" section. Do not force the basket into an incompatible unit.
- **Food Sticking:** Ensure the non-stick coating is not damaged. Always add a small amount of oil to food items that are prone to sticking, even with non-stick surfaces.
- **Uneven Cooking:** Avoid overfilling the basket. Shake or flip food items halfway through cooking for more even results.

SPECIFICATIONS

Feature	Detail
Model Number	IYZPCTMC
Manufacturer	IYZPCTMC
Item Weight	1.76 ounces (approximately 50 grams)
Package Dimensions	1.18 x 0.79 x 0.39 inches
ASIN	B0DYDBDG79

SAFETY INFORMATION

- Always handle the basket with heat-resistant gloves when it is hot.
- Do not use metal utensils or abrasive cleaning tools that could scratch or damage the non-stick coating.
- Keep the accessory out of reach of children.
- Ensure the basket is properly seated in the air fryer before operation.
- Do not expose the basket to direct flame or extreme heat sources other than within a compatible air fryer.