

Fossil CH2565

Fossil Men's Coachman Quartz Chronograph Watch CH2565 User Manual

Model: CH2565

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Fossil Men's Coachman Quartz Chronograph Watch, Model CH2565. Please read this manual thoroughly to ensure proper use and care of your timepiece.

PRODUCT OVERVIEW

The Fossil Coachman watch features a robust design with chronograph functionality and a genuine leather strap. Key components include the watch case, dial, hands, subdials, crown, and pushers.



Front view of the Fossil Coachman Quartz Chronograph Watch, featuring a silver-tone case, tan dial with wood accents, and a brown leather strap.





Side view of the Fossil Coachman watch, showing the crown and chronograph pushers on the right side of the case.



Close-up of the watch dial, highlighting the three subdials for minutes, seconds, and 24-hour time, along with the date window.

SETUP

Setting the Time

1. Pull the crown out to position 2.

2. Turn the crown to adjust the hour and minute hands to the correct time.
3. Push the crown back into position 1 to start the watch.

Setting the Date

1. Pull the crown out to position 1 (first click).
2. Turn the crown clockwise or counter-clockwise (depending on the movement) to set the correct date.
3. Once the date is set, push the crown back into position 0.

Note: Avoid setting the date between 9 PM and 3 AM, as this may interfere with the date change mechanism.

OPERATING INSTRUCTIONS

Chronograph Function

The chronograph function allows for precise time measurement. Your watch features three subdials: one for minutes, one for seconds, and a 24-hour indicator.

1. **Start:** Press the top pusher (A) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the top pusher (A) again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** Press the bottom pusher (B) to reset the chronograph hands to zero.

Water Resistance

This watch is water resistant up to 100 meters (330 feet) or 10 ATM. It is suitable for bathing, swimming, or snorkeling. It is not designed for scuba diving.

Important: Do not operate the crown or pushers when the watch is wet or submerged in water, as this can compromise the water resistance.

MAINTENANCE

Battery Replacement

The watch is powered by one Lithium Metal battery (included). When the watch stops or the second hand skips, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

Cleaning

- **Case and Crystal:** Wipe with a soft, damp cloth. Avoid harsh chemicals.
- **Leather Strap:** Clean the leather strap with a soft, dry cloth. Avoid prolonged exposure to water, direct sunlight, and harsh chemicals, as these can damage the leather.

Storage

When not in use, store your watch in a cool, dry place away from direct sunlight and extreme temperatures. The original Fossil tin (if available) provides suitable protection.



Various designs of Fossil watch tins, suitable for storing your watch when not in use.

TROUBLESHOOTING


Problem	Possible Cause	Solution
Watch stops or runs intermittently	Low battery	Replace battery by a professional.
Time is incorrect	Crown not pushed in, or time needs adjustment	Ensure crown is fully pushed in. Reset time as per "Setting the Time" instructions.
Date does not change	Date set during restricted hours (9 PM - 3 AM)	Adjust the time past 3 AM, then reset the date.
Chronograph hands do not reset to zero	Requires calibration	Consult a watch technician for calibration.

SPECIFICATIONS

- Model Number:** CH2565
- Movement:** Quartz Chronograph
- Case Material:** Stainless Steel
- Band Material:** Genuine Leather (Calfskin)
- Case Diameter:** 45mm
- Band Width:** 22mm
- Crystal:** Mineral
- Water Resistance:** 10 ATM (100 meters / 330 feet)
- Battery:** 1 Lithium Metal battery (included)
- Product Dimensions:** 4.33 x 5.12 x 3.15 inches; 3.39 ounces

CASE SIZE GUIDE : ROUND CASES

Wrists come in all sizes. Use this handy guide to find the right watch for you!
Print on 8.5 x 11 paper at 100% scale.

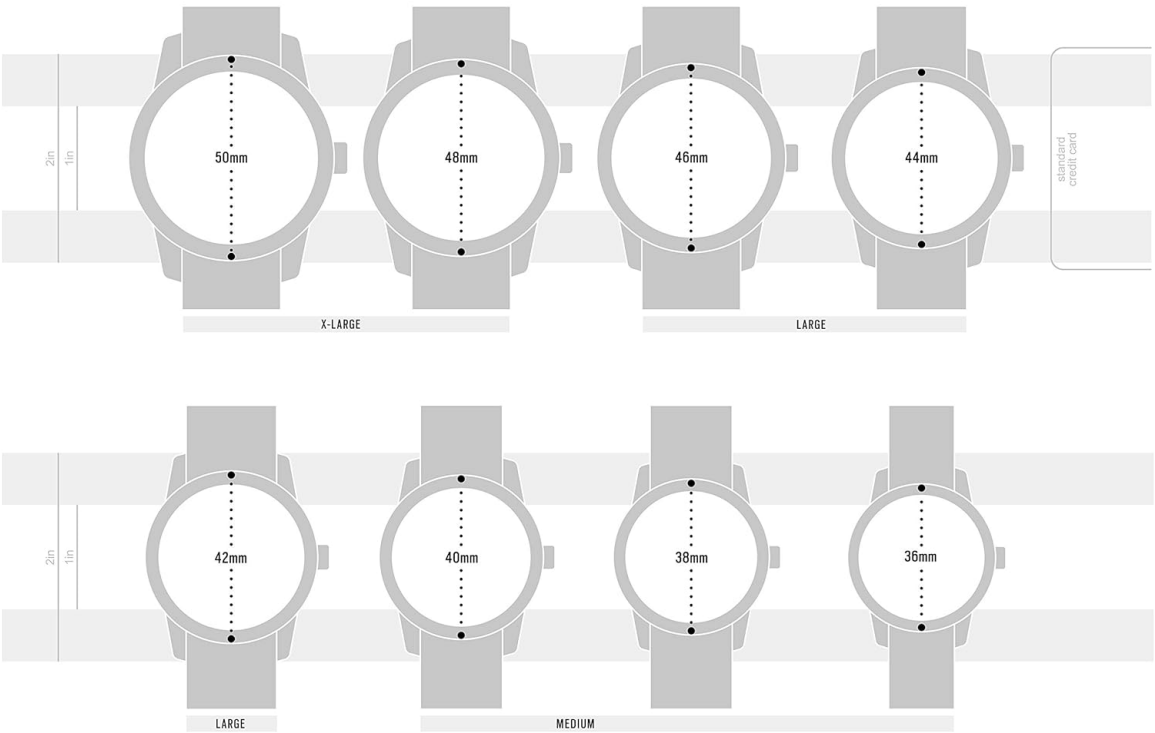

Visual guide for watch case sizes, illustrating different diameters for round watches.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Fossil website or contact their customer service. Protection plans may be available for extended coverage.

- **2-Year Protection Plan:** Available for extended coverage.

- **3-Year Protection Plan:** Available for extended coverage.
- **Complete Protect:** A monthly plan covering eligible past and future purchases.