

[Manuals.plus](#) /

› [Amazon Basics](#) /

› Amazon Basics Multipurpose Steam Cleaner DS-PSC10-NA User Manual

Amazon Basics DS-PSC10-NA

Amazon Basics Multipurpose Steam Cleaner

MODEL: DS-PSC10-NA

Brand: Amazon Basics

Introduction

The Amazon Basics Multipurpose Steam Cleaner provides a chemical-free cleaning solution for various household surfaces. Utilizing powerful steam, it effectively cleans and sanitizes, making it ideal for homes with pets or children. This manual provides essential information for safe and efficient use of your steam cleaner.

Important Safety Information

- **Hot Steam Hazard:** Steam is extremely hot and can cause severe burns. Always direct steam away from people, pets, and electrical appliances.
- **Electrical Safety:** Ensure the appliance is properly grounded. Do not operate with a damaged cord or plug. Keep the power cord away from heated surfaces.
- **Water Usage:** Use only distilled or demineralized water to prevent mineral buildup and prolong the life of the appliance. Never add cleaning solutions, perfumes, or other chemicals to the water tank.
- **Supervision:** Close supervision is necessary when the appliance is used by or near children.
- **Storage:** Always unplug the appliance and allow it to cool completely before storing.

Product Overview



Image: Key features of the Amazon Basics Multipurpose Steam Cleaner, highlighting chemical-free cleaning, up to 37 minutes of continuous steaming, and 22 versatile attachments.

Key Features:

- 1500-watt power with 51 PSI steam pressure.
- Adjustable steam rate for various cleaning tasks.
- 51-ounce water tank provides up to 37 minutes of continuous steam.
- Quick 8-minute heat-up time.
- Chemical-free cleaning, eliminating 99.9% of germs.
- Compact design with built-in wheels for easy maneuverability.
- 7-foot flexible hose and 18-foot power cord for extended reach.

What's Included:



Image: A comprehensive view of the 22-piece accessory set, including various brushes, mop head, squeegee, extension wands, and a storage bag.

- Squeegee (1 set)
- Jet steam nozzle (1)
- Mop head (1)
- Microfiber cloth pad (2)
- Brass brush (1)
- Nylon brush (5)
- Small fabric cover for squeegee (1)
- Extension wands (2)
- Magic brush (1 set)
- Measuring cup (1)
- Funnel (1)
- Gap brush (1)
- Storage bag (1)

Setup

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all 22 accessories are present.
2. **Assemble Handle/Extension Wands:** Connect the extension wands to the main handle and then to the steam cleaner unit as needed for your cleaning task. Ensure they click securely into place.
3. **Fill Water Tank:**
 - Open the water tank cap.
 - Using the provided measuring cup and funnel, fill the tank with distilled or demineralized water. Do not overfill.
 - Securely close the water tank cap.



Image: A close-up view of the steam cleaner's water tank opening and control dial.

4. **Attach Desired Accessory:** Select the appropriate brush, mop head, or nozzle for your cleaning task and attach it firmly to the end of the hose or extension wand.
5. **Power On:** Plug the steam cleaner into a grounded electrical outlet. Press the power button. The indicator light will illuminate red, indicating the unit is heating up.
6. **Wait for Heating:** Allow approximately 8 minutes for the unit to heat up. The indicator light will turn green when the steam cleaner is ready for use.

Your browser does not support the video tag.

Video: Official "How to Use" guide for the Amazon Basics Multipurpose Steam Cleaner, demonstrating assembly and initial operation.

Operating Instructions

1. **Adjust Steam Output:** Use the steam control dial on the unit to adjust the steam intensity according to the surface and cleaning requirement.
2. **Begin Cleaning:** Press the steam trigger on the handle to release steam. Move the attachment slowly over the surface to be cleaned. For stubborn dirt, hold the steam over the area for a few seconds.
3. **Surface Recommendations:**
 - **Floors (Tiles, Hardwood):** Use the mop head with a microfiber cloth pad.
 - **Grout, Ovens, Stovetops, BBQs:** Use the brass or nylon brushes for scrubbing.
 - **Windows, Mirrors, Showers:** Use the squeegee attachment.
 - **Fabric Steaming, Curtains, Pet Beds:** Use the small fabric cover for the squeegee or the jet steam nozzle.

4. **Refilling Water:** If steam output decreases or stops, the water tank may be empty. Turn off and unplug the unit, allow it to cool for a few minutes, then carefully refill the tank as per setup instructions.
5. **Finishing Cleaning:** Once cleaning is complete, turn off the unit and unplug it from the power outlet.

Maintenance

- **Cleaning Attachments:** After each use, clean all attachments with warm water and mild soap. Allow them to air dry completely before storing.
- **Descaling:** To prevent mineral buildup, periodically descale the unit. Consult the full instruction manual for detailed descaling procedures.
- **Storage:** Store the steam cleaner and its accessories in a cool, dry place. The included storage bag can be used for organizing accessories.

Troubleshooting

Problem	Possible Cause	Solution
No steam output.	Water tank is empty; unit not heated; steam trigger not pressed.	Refill water tank; wait for green indicator light; press steam trigger.
Weak steam output.	Low water level; mineral buildup; steam control dial set too low.	Refill water tank; descale unit; adjust steam control dial.
Water leaking from attachments.	Attachments not securely fastened; unit not fully heated.	Ensure attachments are clicked into place; wait for green indicator light.

For further assistance, please refer to the complete user manual or contact customer support.

Specifications

Feature	Detail
Brand	Amazon Basics
Model Name	Multipurpose Steam Cleaner
Model Number	DS-PSC10-NA
Wattage	1500 watts
Steam Pressure	51 PSI
Water Tank Capacity	51 ounces
Continuous Steam Time	Up to 37 minutes
Heat-up Time	8 minutes

Feature	Detail
Power Source	AC
Maximum Temperature	230 Degrees Fahrenheit
Color	White
Included Components	22-piece accessory set (Squeegee, Jet steam nozzle, Mop head, Microfiber cloth pads, Brass brush, Nylon brushes, Fabric cover, Extension wands, Magic brush, Measuring cup, Funnel, Gap brush, Storage bag)



Image: Visual representation of the steam cleaner's dimensions.

Warranty and Support

For warranty information and customer support, please refer to the documentation included with your product or visit the official Amazon Basics website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DYDK2MQG>

More documents and user manuals: <https://manuals.plus/>