

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AX WABER](#) /

› [Universal Floor TV Stand Instruction Manual](#)

AX WABER B0DYDMDC2C

Universal Floor TV Stand Instruction Manual

Brand: AX WABER | **Model:** B0DYDMDC2C

1. INTRODUCTION

Thank you for choosing the AX WABER Universal Floor TV Stand. This portable rolling TV mount is designed to provide a versatile and stable solution for displaying your television. It features an 80-degree swivel, height adjustability, and a sturdy design with wheels for easy mobility. This manual provides detailed instructions for assembly, operation, and maintenance to ensure safe and optimal use of your new TV stand.



Image 1.1: The AX WABER Universal Floor TV Stand with a television mounted.

2. SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Failure to follow these instructions may result in property damage, serious injury, or death. If you do not understand these instructions, or have doubts about the safety of the installation, please contact customer support.

- Do not exceed the maximum weight capacity of 88 lbs (40 kg).
- Ensure your TV's VESA dimensions are within the supported range (100x100mm to 400x400mm).
- Always ensure all screws and connections are securely tightened before use.
- Do not allow children to climb on the TV stand or hang from the television.
- Move the stand slowly and carefully, especially on uneven surfaces. Lock wheels when stationary.
- Keep packaging materials away from children.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact customer service.

- Base with Wheels
- Main Support Column
- TV Mounting Bracket
- Adjustable Media Shelf
- Cable Management Clips
- Hardware Kit (screws, washers, spacers, Allen wrenches)
- Instruction Manual



Image 3.1: Key components and features of the TV stand.

4. ASSEMBLY INSTRUCTIONS

Assembly of the AX WABER TV Stand is designed to be straightforward and can typically be completed in under 15 minutes. Follow these steps carefully:

1. **Attach the Main Column to the Base:** Secure the main support column to the base using the provided screws and tools. Ensure it is firmly seated and stable.
2. **Install the TV Mounting Bracket:** Attach the TV mounting bracket to the top of the main column. Use the strengthening screws to ensure a secure connection.
3. **Mount the TV:** Carefully attach your television to the mounting bracket. Ensure the VESA holes on your TV align with the bracket. Use the appropriate screws and spacers for your TV model.
4. **Attach the Media Shelf:** Position the adjustable media shelf at your desired height on the main column and secure it with the designated fasteners.
5. **Organize Cables:** Utilize the integrated cable management clips along the main column to neatly route and conceal your TV and device cables.



Image 4.1: Visual guide for easy assembly.

For a visual demonstration of the assembly process, please watch the official product video:

Your browser does not support the video tag.

Video 4.1: Official product video demonstrating assembly and features of the TV stand.

5. OPERATING INSTRUCTIONS

5.1 Height Adjustment

The TV stand offers multiple height adjustments to achieve your optimal viewing position. The main column allows for significant vertical adjustment. After installation, you can further fine-tune the height by adjusting the TV mounting bracket along the column.



Image 5.1: Height adjustment capabilities of the TV stand.

5.2 Swivel Function

The TV mount allows for a swivel of approximately $\pm 40^\circ$ (80 degrees total) left and right. This feature enables you to easily adjust the viewing angle to suit different seating arrangements or room layouts, providing a comfortable viewing experience from various positions.



Image 5.2: Demonstration of the TV stand's swivel feature.

5.3 Mobility and Locking Wheels

Equipped with four smooth-rolling wheels, this TV stand can be effortlessly moved to any desired location within your home or office. Each wheel includes a locking mechanism to ensure stability once the stand is in position. To move, unlock the wheels. To secure, press down on the locking lever on each wheel.



Image 5.3: The locking wheels provide both mobility and stability.

5.4 Cable Management

The integrated cable clips help organize and conceal unsightly cables, maintaining a tidy and organized space around your TV setup. Simply route your power and HDMI cables through the clips along the back of the main column.

PRODUCT DIMENSION



Image 5.4: Effective cable management system.

6. MAINTENANCE

To ensure the longevity and appearance of your TV stand, follow these simple maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Inspections:** Periodically check all screws and connections to ensure they remain tight and secure. Re-tighten if necessary.
- **Wheel Care:** Keep the wheels free of dust and debris to ensure smooth movement.



AVOID BREAKAGE



EASY CLEANING

Image 6.1: The durable base is easy to clean.

7. TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Loose screws; uneven floor; TV too heavy or not centered.	Check and tighten all assembly screws. Ensure the stand is on a flat, level surface. Verify TV weight and VESA compatibility.
Wheels not rolling smoothly or locking.	Debris in wheels; locking mechanism engaged.	Clean any debris from the wheels. Ensure the locking levers are fully disengaged for movement.
TV not sitting level on the mount.	Mounting arms unevenly installed; TV not centered.	Re-check the installation of the TV mounting arms to ensure they are level. Adjust TV position on the bracket.

8. SPECIFICATIONS

Feature	Detail
Brand	AX WABER
Model	B0DYDMDC2C
Compatible TV Sizes	27 to 65 Inches
Maximum Weight Capacity	88 lbs (40 kg)
VESA Compatibility	100x100mm to 400x400mm
Swivel Range	±40° (80 degrees total)
Material	Alloy Steel
Color	Black
Item Weight	20.8 pounds
Mounting Type	Floor Mount



Image 8.1: VESA compatibility and TV size range.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact AX WABER customer service directly. Our team is available to assist you with any questions or concerns regarding your Universal Floor TV Stand.

You can typically find contact information on the manufacturer's official website or through your point of purchase.
