

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Retevis](#) /
- › [Retevis EZTalk 70 Kids Walkie Talkies Instruction Manual](#)

Retevis EZTalk 70

Retevis EZTalk 70 Kids Walkie Talkies Instruction Manual

Model: EZTalk 70

Brand: Retevis

INTRODUCTION

Welcome to your new Retevis EZTalk 70 Kids Walkie Talkies. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your walkie-talkies to ensure a safe and enjoyable communication experience. Please read this manual thoroughly before using the product.

WHAT'S IN THE Box

- EZTalk 70 Walkie Talkie x 3
- Type-C charging cable x 3
- Belt clip x 3
- Lanyard x 3
- User Manual

Package Includes



EZTalk70 Walkie Talkie *3




Type-c charging cable *3



User's manual *1



Belt clip *3

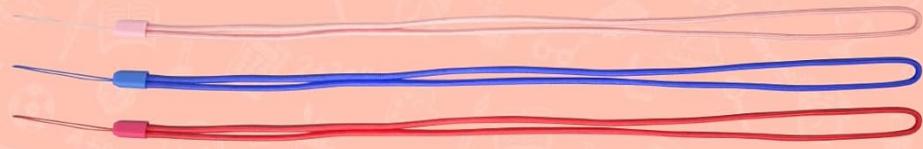

Lanyard *3

Image: The complete package contents, including three walkie-talkies, charging cables, belt clips, lanyards, and the user manual.

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your EZTalk 70 walkie-talkie.

Your browser does not support the video tag.

Video: This video provides a visual guide to the buttons and features of the Retevis EZTalk 70 walkie-talkie.

Detailed Presentation



Image: Diagram illustrating the various parts of the walkie-talkie, including the PTT button, microphone, speaker, power/menu button, upwards/downwards keys, LED flashlight, LCD display, charging port, call tone/keypad lock button, and safe mode button.

SETUP

Battery Installation and Charging

Your EZTalk 70 walkie-talkies come with built-in rechargeable batteries. Ensure they are fully charged before first use.

Your browser does not support the video tag.

Video: This video demonstrates the charging process and highlights the extended battery life of the walkie-talkies.

Hours of Endless Joy



Powered by a 1000mAh battery



Charges with a Type-C cable



Enjoy 29 hours of laughter and chats



Image: A red walkie-talkie being charged via a Type-C cable, with icons indicating 1000mAh battery and 29 hours of runtime.

Charging Instructions:

- Connect the provided Type-C charging cable to the charging port on the side of the walkie-talkie.
- Plug the other end of the cable into a compatible USB power adapter (not included).
- The battery indicator on the LCD screen will show charging status. A full charge provides approximately 29 hours of use.

Powering On/Off

To power on or off, **long press** the **MENU** button located below the screen.

OPERATING INSTRUCTIONS

Basic Communication

Selecting a Channel:

- Press the **MENU** button once. The channel number will flash on the display.
- Use the **Up** or **Down** arrow buttons to select your desired channel (1-22).
- Press the **MENU** button again to confirm the channel.

Transmitting and Receiving:

- To speak, press and hold the **PTT** (Push-To-Talk) button on the side of the walkie-talkie. Speak clearly into the microphone.
- Release the **PTT** button to listen for a response.



Image: A mother and child using walkie-talkies to communicate over a distance of 1 mile, demonstrating the long-range chat capability.

Safe Mode

The Safe Mode feature helps prevent unwanted communication from unknown sources, ensuring only trusted family and friends can reach your child.



Image: An icon representing "Communication Security" with a red cross over a silhouette, indicating the blocking of strangers' messages.



Image: A three-panel image demonstrating how to activate Safe Mode: 1) Open the walkie-talkie, 2) Press a button, 3) See "SF" on the screen, indicating Safe Mode is active.

Activating Safe Mode:

- Press and hold the **Safe-M** button (often integrated with the call tone/keypad lock button) for 3 seconds until "SF" appears on the display.
- In Safe Mode, the walkie-talkie will block chatter from other channels, allowing communication only with other walkie-talkies set to the same Safe Mode frequency.

Keypad Lock

To prevent accidental button presses, activate the keypad lock.

Your browser does not support the video tag.

Video: This video demonstrates various functions of the walkie-talkies, including the key lock setting.

Activating Keypad Lock:

- Long press the **Call tone/Keypad lock** button. A key icon will appear on the display.
- To unlock, long press the same button again.

Flashlight Function

Your walkie-talkie includes a built-in LED flashlight for convenience in low-light conditions.

Amusement Park Fun

Laugh and ride all day long



Image: A three-panel image showing how to activate the flashlight: 1) Grab the walkie-talkie, 2) Long press the Upwards/Downwards Key, 3) Flashlight turns on.

Using the Flashlight:

- Long press either the **Up** or **Down** arrow button to turn the flashlight on.
- Long press the same button again to turn it off.

MAINTENANCE

- Keep the walkie-talkies clean by wiping them with a soft, dry cloth.
- Avoid exposing the devices to extreme temperatures, moisture, or direct sunlight.
- Ensure the charging port is free of debris before charging.
- Store the walkie-talkies in a cool, dry place when not in use.

Crafted with Safety in Mind

Play worry-free with the safe ABS material



Image: A close-up view of a blue Retevis EZTalk 70 walkie-talkie, emphasizing its durable ABS material construction.

TROUBLESHOOTING

No Power

- Check the battery level on the LCD screen. Recharge the walkie-talkie if the battery is low.
- Ensure the device is powered on by long-pressing the **MENU** button.

Cannot Communicate

- Verify both walkie-talkies are on the same channel and CTCSS/DCS code (if applicable).
- Ensure Safe Mode is correctly configured on all devices if used.
- Check the distance; the maximum range is approximately 1 mile in open areas. Obstacles like buildings or dense foliage can significantly reduce range.
- Confirm the **PTT** button is fully pressed when speaking and released when listening.

Poor Sound Quality

- Adjust the volume level using the **Up/Down** arrow buttons.
- Ensure there are no obstructions blocking the microphone or speaker.
- Move to an area with fewer obstructions or less interference.

SPECIFICATIONS

| | |
|------------------------|---|
| Item Weight | 12.6 ounces |
| Product Dimensions | 1.22 x 1.97 x 3.78 inches |
| Item Model Number | EZTalk 70 |
| Battery Capacity | 1000mAh Li-ion (rechargeable) |
| Brand | Retevis |
| Color | Pink Blue Red |
| Number of Channels | 22 |
| Special Features | 1000mAh battery, Safe Mode, rechargeable walkie talkies |
| Frequency Range | FRS |
| Talking Range Maximum | 1 Mile |
| Voltage | 3.7 Volts |
| Water Resistance Level | Not Water Resistant |

WARRANTY AND SUPPORT

Retevis provides a **2-year warranty** for the radio body and a **1-year warranty** for accessories from the date of purchase.

A **30-day no-reason return policy** is also offered for your convenience.

For service beyond the warranty period, maintenance services are available. Buyers are responsible for any associated costs for such services.

If you require assistance or have any questions, please contact Retevis customer support on Amazon. They aim to reply to all inquiries within 12 hours.