

Nothing A059

Nothing Phone (3a) Smartphone User Manual

Model: A059

Brand: Nothing

INTRODUCTION

Welcome to the user manual for your Nothing Phone (3a) Smartphone. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read this manual carefully to ensure proper use and to maximize your device's potential.

WHAT'S IN THE BOX

- Nothing Phone (3a) Smartphone
- USB Cable

Note: Power adapter sold separately.

INITIAL SETUP

1. Powering On

Press and hold the power button on the right side of the device until the Nothing logo appears on the screen.

2. Initial Configuration

Follow the on-screen prompts to select your preferred language, connect to a Wi-Fi network, and set up your Google account. This process will guide you through essential device settings.

3. SIM Card Installation

Locate the SIM card tray on the side of the phone. Use the provided SIM ejector tool to gently open the tray. Insert your Nano-SIM card(s) into the tray, ensuring they are correctly oriented. Carefully reinsert the tray into the phone.

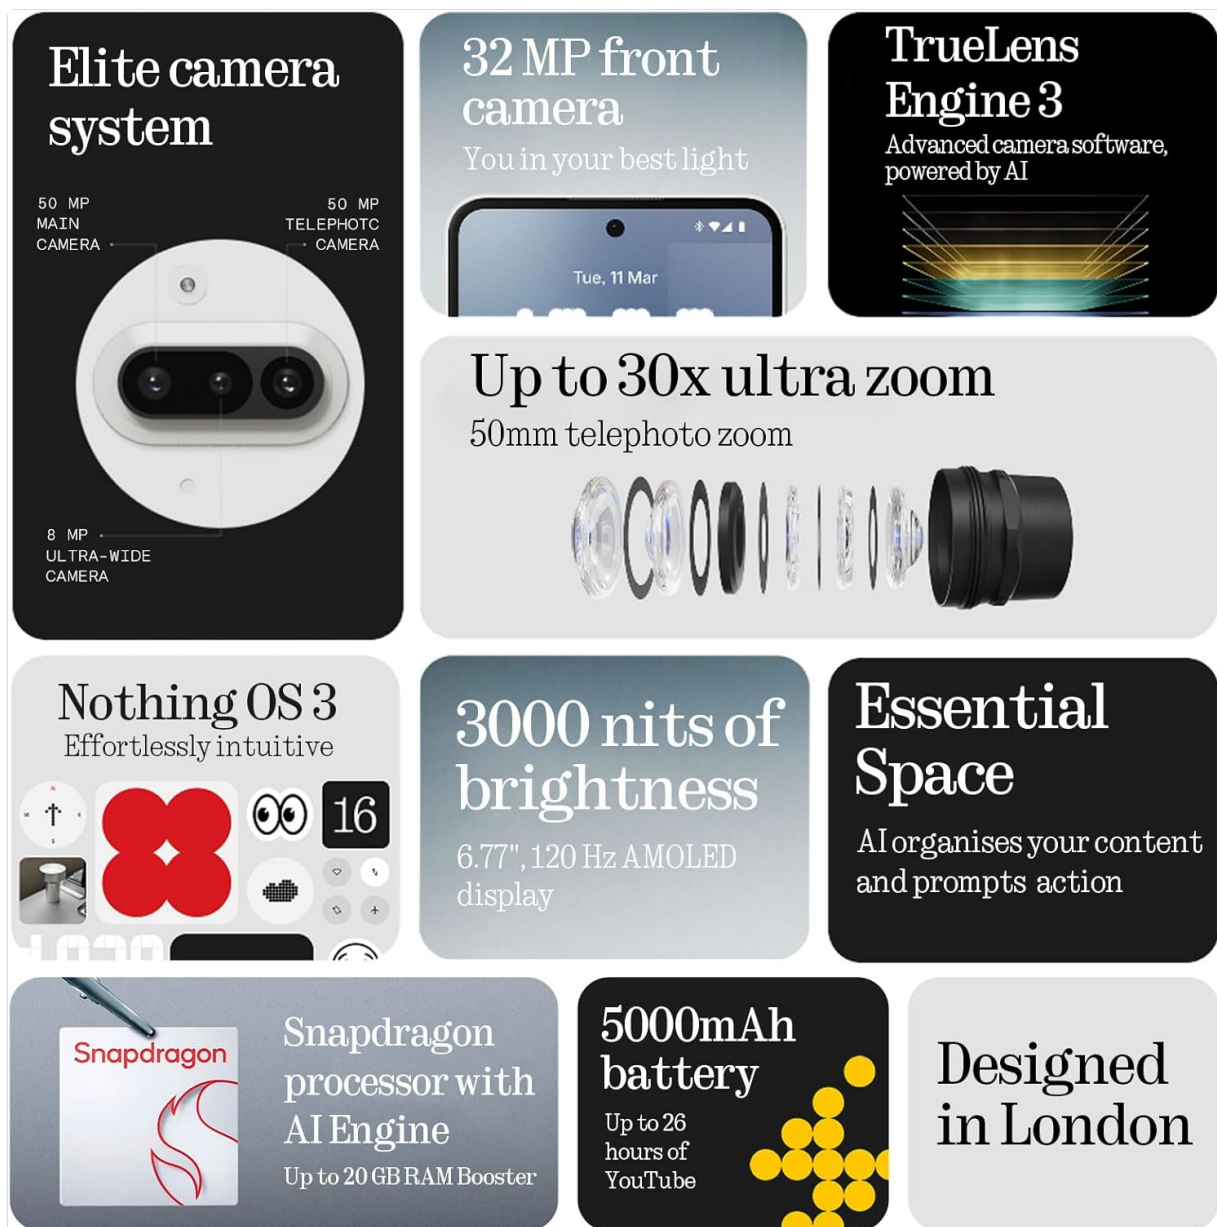 


Image showing the side of the Nothing Phone (3a) with the SIM card tray location.

OPERATING YOUR DEVICE

Display

The Nothing Phone (3a) features a vibrant 6.77-inch 120Hz Super-Bright AMOLED Display. This display offers stunning color reproduction and smooth scrolling. You can adjust brightness, color settings, and refresh rate preferences in the device's Display settings menu.



 
Front and back view of the Nothing Phone (3a) showcasing its display and Glyph Interface.

Glyph Interface

Experience a new way to interact with your phone through the unique Glyph Interface located on the back. This interface uses customizable light and sound patterns to provide notifications, indicate charging status, and offer other visual cues. Personalize your Glyph settings in the device's main settings menu.

TrueLens Engine 3

Advanced camera software, powered by AI

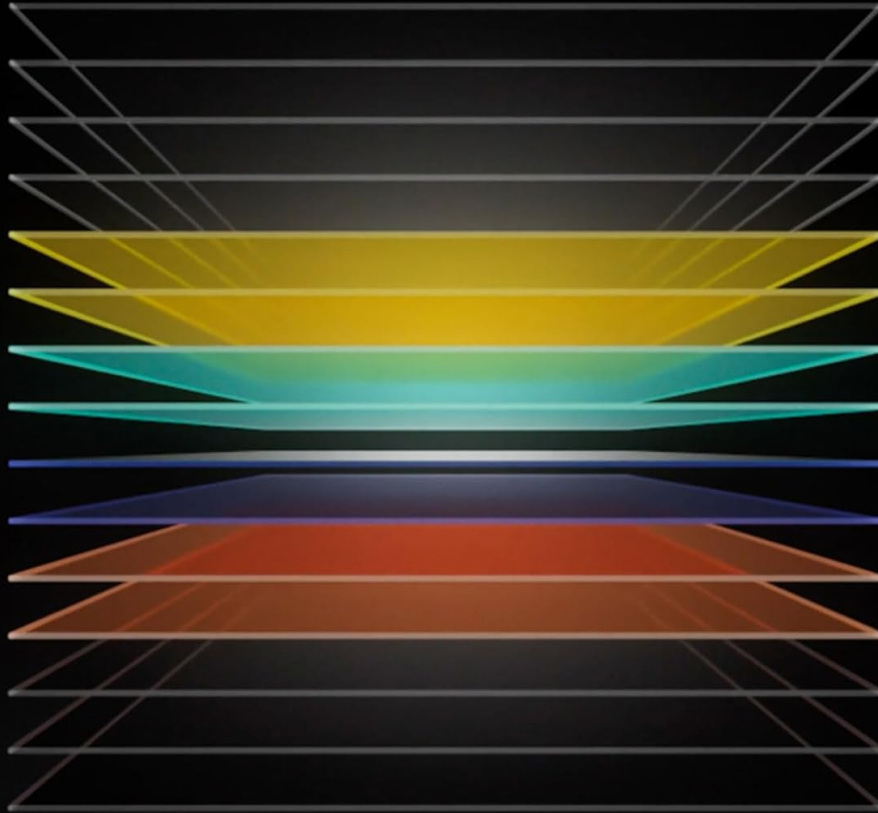

Close-up view of the Nothing Phone (3a)'s Glyph Interface on the back panel.

Camera System

Capture high-quality photos and videos with the 50MP Triple Camera System, which includes a telephoto lens for enhanced zoom capabilities. The front-facing camera is 32MP, ideal for clear selfies and video calls. Explore various camera modes and settings within the Camera application.



Detailed view of the triple camera system on the rear of the Nothing Phone (3a).

Battery and Charging

The Nothing Phone (3a) is powered by a 5000mAh battery, designed to provide extended usage. It supports 50W Fast Charge technology, allowing for quick recharging times. For optimal performance and safety, use a compatible fast charger. Wireless charging is also supported.

Official product video highlighting the Nothing Phone (3a) Smartphone's features, including battery and charging capabilities.

MAINTENANCE AND CARE

- **Cleaning:** Keep your device clean by wiping it with a soft, dry, lint-free cloth. Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays, as these can damage the device's finish.
- **Protection:** To prevent scratches and damage, it is recommended to use a protective case and a screen protector.
- **Software Updates:** Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. You can typically find updates in **Settings > System > Software Update**.
- **Temperature:** Avoid exposing your phone to extreme temperatures, both hot and cold, as this can affect battery life and overall performance.

Troubleshooting

Device Not Powering On

Ensure the battery is sufficiently charged. Connect the device to a charger for at least 15 minutes before attempting to power it on again. If the issue persists, try performing a force restart by holding down the power button and volume down button simultaneously for about 10-15 seconds.

Poor Battery Life

To optimize battery life, adjust screen brightness, disable unnecessary background apps, and review battery usage in **Settings > Battery** to identify power-consuming applications. Consider enabling battery saver mode when needed.

Connectivity Issues (Wi-Fi, Bluetooth, Mobile Data)

For Wi-Fi or Bluetooth issues, try toggling the respective settings off and on. For mobile data problems, ensure your SIM card is properly inserted and check your network settings. A device restart can often resolve temporary connectivity glitches.

Technical Specifications

Feature	Detail
Product Dimensions	6.44 x 3.05 x 0.33 inches
Item Weight	7.1 ounces
Item model number	A059
OS	Nothing OS 3.1 powered by Android 15
RAM	12 GB
Connectivity technologies	Bluetooth, USB, Wi-Fi
Special features	Built-In GPS, Dual SIM, Fast Charging Support, Stereo Speakers, Water Resistant
Scanner Resolution	1080 x 2392
Other camera features	Front, Rear
Form Factor	Bar
Color	Blue
Phone Talk Time	40 Hours
Battery Capacity	5000 Milliamp Hours
CPU Model	Snapdragon 7s Gen 3
CPU Speed	2.5 GHz
Screen Size	6.77 Inches
Refresh Rate	120 Hz
Wireless Carrier	Unlocked

 
Elite camera system

50 MP

MAIN
CAMERA

50 MP

TELEPHOTO
CAMERA

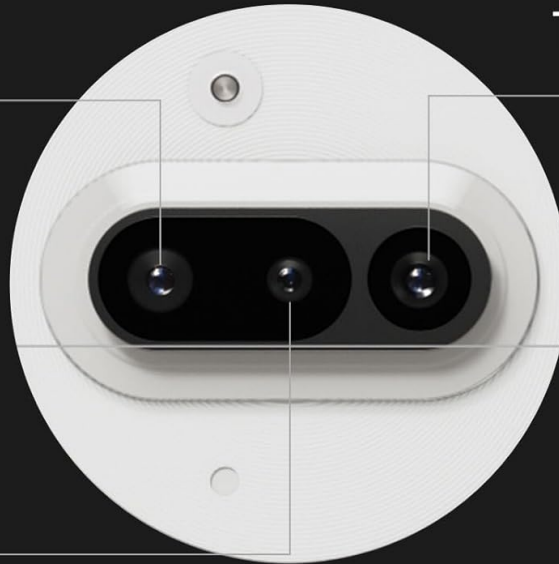

8 MP

ULTRA-WIDE
CAMERA

Infographic displaying key specifications of the Nothing Phone (3a) including camera, display, processor, and battery.

WARRANTY AND SUPPORT

For detailed warranty information, technical support, and service inquiries, please refer to the official Nothing website or contact their customer service department. Keep your proof of purchase for warranty claims.

Additional resources and product information can be found at the [Nothing Store on Amazon](#).