

[Manuals.plus](#) /

› [Winsing](#) /

› Winsing Android Tablet 10 inch User Manual (Model: Android Tablet 10 inch)

Winsing Android Tablet 10 inch

Winsing Android Tablet 10 inch User Manual

Model: Android Tablet 10 inch

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Winsing Android Tablet 10 inch. Please read it thoroughly before using your device to ensure optimal performance and longevity.

The Winsing Android Tablet 10 inch features the latest Android 15 operating system, an octa-core processor, 12GB RAM, and 128GB internal storage, expandable up to 2TB. It is equipped with a 10-inch IPS HD display (1280x800) and supports Wi-Fi and Bluetooth 5.0 connectivity.

2. WHAT'S INCLUDED

Upon unboxing, verify that all items listed below are present:

- Winsing Android Tablet 10 inch
- USB-C Cable
- AC Adapter (Charger)
- User Manual



Image: Winsing Android Tablet 10 inch with its accessories: USB-C cable, AC adapter, and user manual.

Your browser does not support the video tag.

Video: An unboxing demonstration of the Winsing Android Tablet 10 inch, showcasing the tablet and its included accessories.

3. DEVICE LAYOUT AND PORTS

Familiarize yourself with the physical components and ports of your tablet.



Image: Diagram illustrating the location of the 3.5mm headset jack, Power ON/OFF button, Volume buttons, Reset button, Rear Camera, Flashlight, Front Camera, TF Card slot, USB-C port, and Speakers on the Wising Android Tablet 10 inch.

- **Power ON/OFF Button:** Press and hold to power on/off or restart the device.
- **Volume Buttons:** Adjust the audio volume.
- **USB-C Port:** For charging and data transfer.
- **TF Card Slot:** Insert a microSD card for expandable storage.
- **3.5mm Headset Jack:** Connect headphones or external audio devices.
- **Front Camera:** For video calls and selfies.
- **Rear Camera with Flashlight:** For taking photos and videos.
- **Speakers:** Audio output.
- **Reset Button:** A small pinhole button for force restarting the device if it becomes unresponsive.

4. SETUP

4.1. Initial Charge

Before first use, fully charge your tablet. Connect the USB-C cable to the tablet's USB-C port and the AC adapter to a power outlet. The battery indicator on the screen will show charging status.

4.2. Power On/Off

- **To Power On:** Press and hold the Power ON/OFF button until the screen lights up.
- **To Power Off:** Press and hold the Power ON/OFF button, then select "Power off" from the options that appear on the screen.
- **To Restart:** Press and hold the Power ON/OFF button, then select "Restart" from the options.

4.3. Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process. This includes:

- Selecting your language.
- Connecting to a Wi-Fi network.
- Setting up your Google account (optional, but recommended for app downloads and services).
- Setting date and time.
- Configuring screen lock (PIN, pattern, password).

4.4. Expandable Storage (TF Card)

The tablet supports up to 2TB of expandable storage via a TF (microSD) card. To insert a TF card:

1. Locate the TF card slot on the side of the tablet.
2. Gently insert the TF card into the slot until it clicks into place.
3. The tablet will detect the new storage. You may be prompted to format the card for optimal use with the device.

Store More, Explore More




12GB (4+8)
RAM



128GB
ROM



2 TB
Support

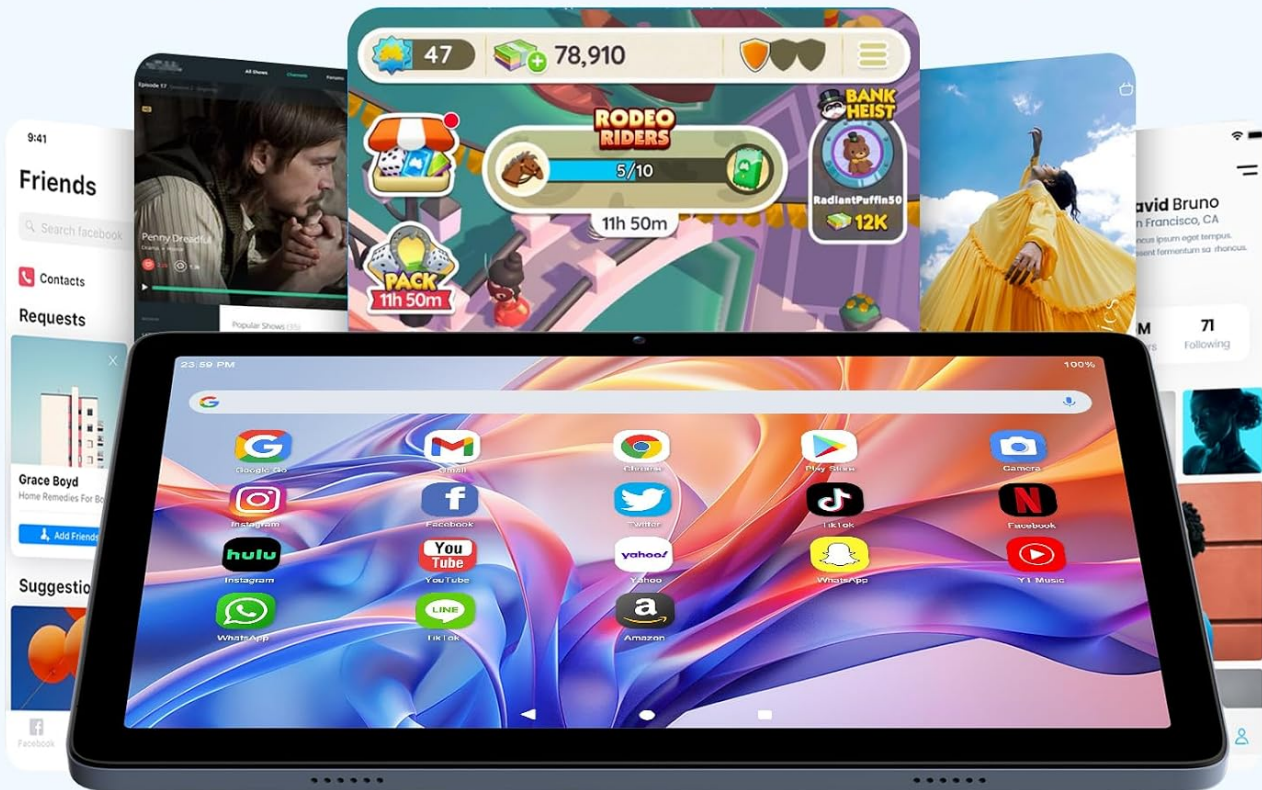

128GB+2TB TF Card Expansion



Image: The Winning Android Tablet 10 inch showcasing its 128GB internal storage and support for up to 2TB TF card expansion.

5. OPERATING INSTRUCTIONS

5.1. Navigation

The Winning Android Tablet 10 inch uses Android 15, offering intuitive touch-based navigation. Common gestures include:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through screens or lists.
- **Pinch-to-Zoom:** Enlarge or shrink content (e.g., photos, web pages).
- **Long Press:** Access contextual menus or move icons.

5.2. Connecting to Wi-Fi and Bluetooth

To connect to networks or devices:

1. Go to **Settings**.
2. Select **Network & internet** for Wi-Fi or **Connected devices** for Bluetooth.
3. Toggle Wi-Fi or Bluetooth on, then select the desired network or device and enter credentials if required.

5.3. Using Applications

The tablet comes pre-installed with essential Google applications. You can download more apps from the Google Play Store.

- **Installing Apps:** Open the **Play Store** app, search for your desired app, and tap "Install".
- **Uninstalling Apps:** Long-press the app icon on the home screen or app drawer, then drag it to "Uninstall" or select "App info" and choose "Uninstall".

5.4. Split Screen Functionality

The tablet supports split-screen mode for multitasking:

1. Open the first app you want to use.
2. Tap the recent apps button (usually a square icon or swipe up and hold from the bottom).
3. Tap the icon of the first app at the top of its card, then select "Split top".
4. Choose the second app from your recent apps or app drawer to fill the other half of the screen.

Split Screen, Double Efficiency

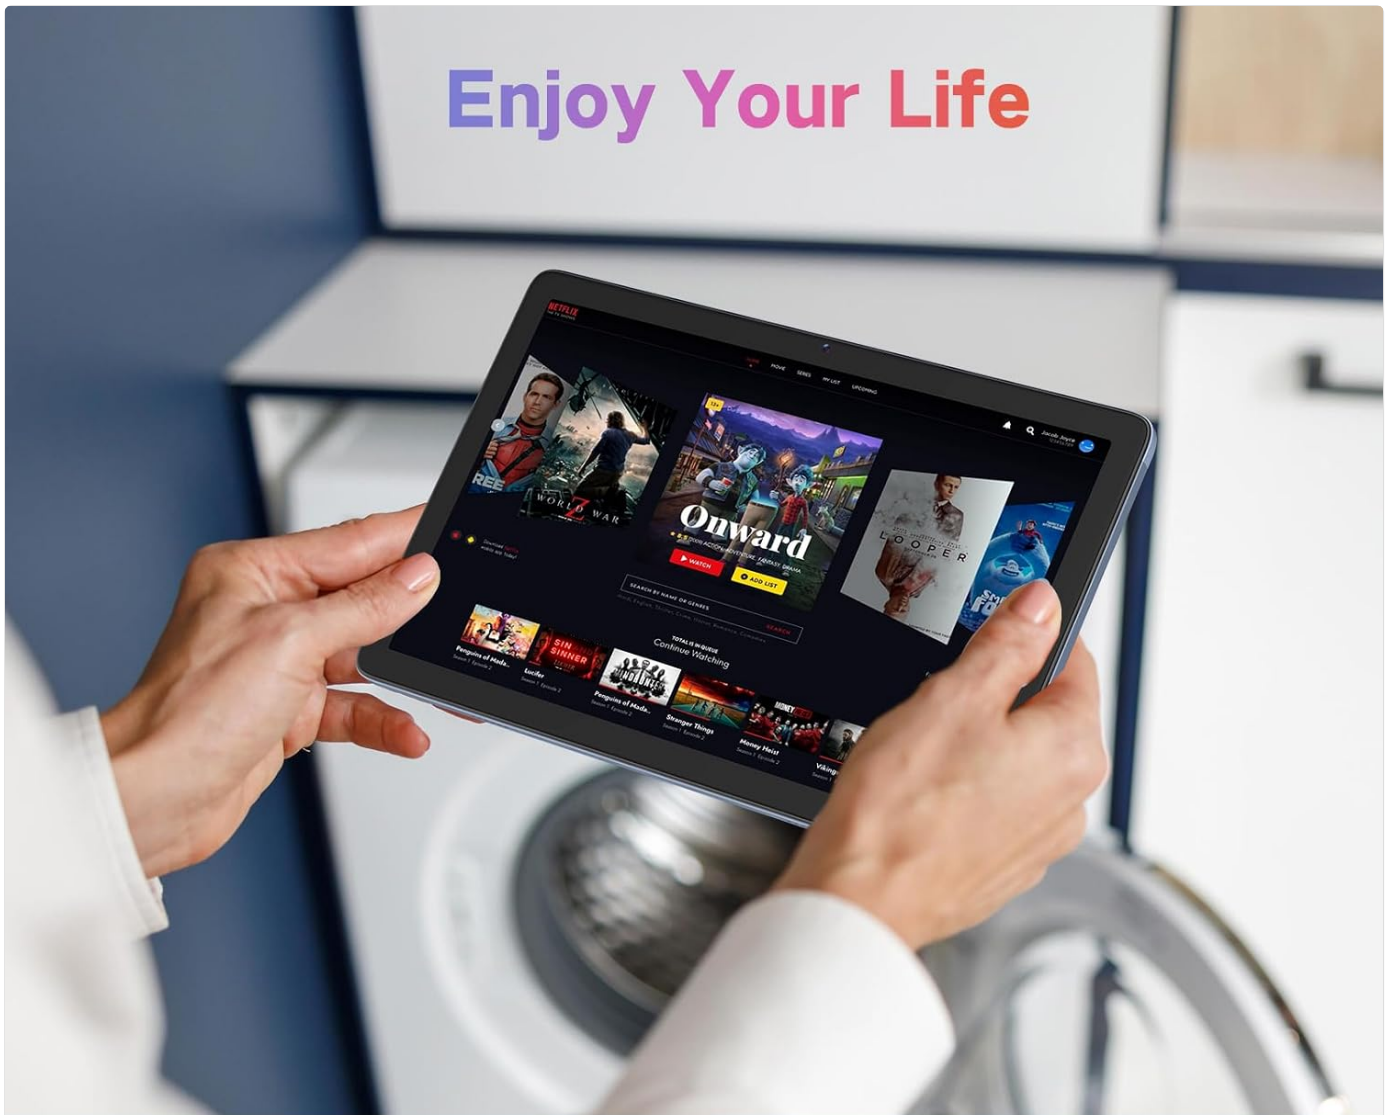


Image: A user holding the Winsing Android Tablet 10 inch, displaying two applications side-by-side in split-screen mode for enhanced productivity.

5.5. Media Consumption

Enjoy a cinematic visual experience with the 10-inch IPS HD display. Widevine L1 certification ensures high-definition streaming from platforms like Netflix, Disney+, Hulu, and YouTube.

Enjoy Your Life



Hulu



HBO Max



Netflix



Prime Video



Youtube

Image: The Winning Android Tablet 10 inch showing icons for popular streaming services like Hulu, HBO Max, Netflix, Prime Video, and YouTube, highlighting its entertainment capabilities.

6. MAINTENANCE

6.1. Battery Management

The tablet is equipped with a 6000mAh battery. To maximize battery life:

- Reduce screen brightness.
- Disable Wi-Fi and Bluetooth when not in use.
- Close unused applications running in the background.
- Use power-saving modes available in Settings.
- Avoid extreme temperatures.

Relax All Day

6000mAh

22.5W

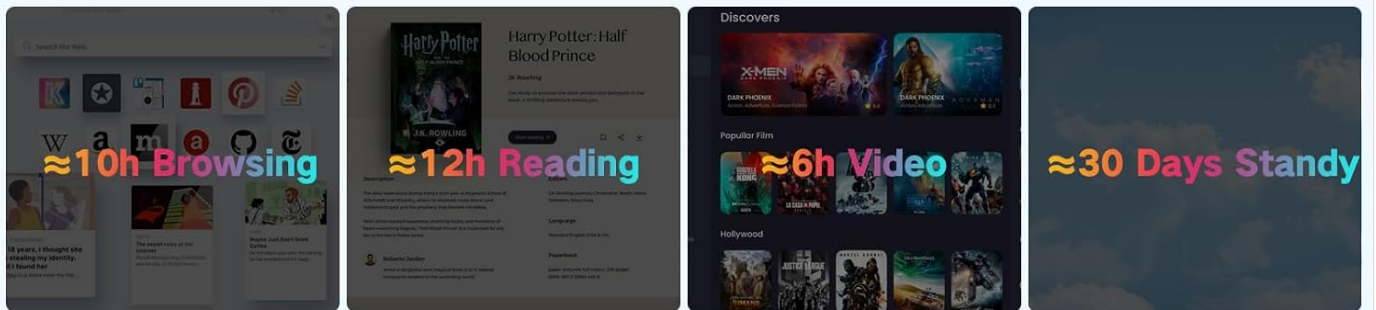


Image: Visual representation of the Winsing Android Tablet 10 inch's 6000mAh battery, indicating approximate usage times for browsing, reading, and video playback.

6.2. Storage Management

Regularly manage your tablet's storage to maintain performance:

- Delete unnecessary files, photos, and videos.
- Uninstall unused applications.
- Clear cache data for apps in **Settings > Apps > [App Name] > Storage & cache**
- Utilize the expandable TF card storage for large media files.

6.3. Software Updates

Keep your tablet's software updated for security and performance improvements. Check for updates in **Settings > System > System update**.

7. TROUBLESHOOTING

Problem	Possible Solution
Tablet does not power on.	Ensure the tablet is charged. Connect it to the charger for at least 30 minutes, then try powering it on again.
Apps crash frequently or tablet is slow.	Close background apps, clear app caches, or restart the tablet. Ensure sufficient storage space is available.
Cannot connect to Wi-Fi.	Check if Wi-Fi is enabled in Settings. Restart your router and the tablet. Verify the Wi-Fi password.
Touchscreen unresponsive.	Perform a force restart by pressing and holding the power button for about 10-15 seconds, or use the pinhole reset button if available.
Navigation issues (e.g., missing navigation buttons).	Check navigation settings under Settings > System > Gestures > System navigation to ensure your preferred method (3-button or gesture) is selected and functioning correctly. A restart may also resolve temporary glitches.

8. SPECIFICATIONS

Feature	Detail
Brand	Winsing
Model Name	Android Tablet 10 inch
Operating System	Android 15
Screen Size	10 Inches
Screen Resolution	1280 x 800 pixels (IPS HD)
Processor	Octa-Core, 2 GHz
RAM	12GB (4+8)
Internal Storage	128 GB
Expandable Storage	Up to 2TB via TF Card (microSD)
Wireless Connectivity	802.11a, 802.11ax, 802.11b, 802.11g, 802.11n, Bluetooth 5.0
Battery Life (Average)	8-10 Hours (mixed usage)
Item Weight	1.19 pounds (0.54 kg)
Product Dimensions	9.5 x 6.3 x 0.31 inches
Color	Gray Blue

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Winsing website or contact their customer service directly. Details are typically provided in the packaging or on the manufacturer's product page. Additional protection plans may be available for purchase through your retailer. Please consult your purchase documentation for specific terms and conditions.

For further assistance, you may visit the [Winsing Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question