

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic SC-HTS160GWK 2.1Ch Soundbar Speaker System User Manual](#)

## Panasonic SC-HTS160GWK

# Panasonic SC-HTS160GWK 2.1Ch Soundbar Speaker System User Manual

Model: SC-HTS160GWK

## INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Panasonic SC-HTS160GWK 2.1Ch Soundbar Speaker System. Please read this manual thoroughly before using the product and retain it for future reference.

## SAFETY INFORMATION

- Ensure the power supply voltage matches the requirements specified on the unit.
- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Do not block ventilation openings. Install according to the manufacturer's instructions.
- Protect the power cord from being walked on or pinched.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

## PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Soundbar Unit
- Subwoofer Unit
- Remote Control
- Audio Cable
- User Manual (this document)

## PRODUCT OVERVIEW

The Panasonic SC-HTS160GWK system consists of a soundbar and a subwoofer, designed to enhance your audio experience with 160W total output and 3D Surround Sound capabilities.

## Soundbar



The soundbar features a sleek design with a metal punching grille for durability and optimal sound. It houses the main speakers and control buttons.



Top panel controls include Power, Input, Volume Down, Play/Pause, and Volume Up.

## Subwoofer



The subwoofer provides deep bass with an extra range due to its front duct design. It connects to the soundbar to deliver a rich audio experience.



This image shows a closer view of the subwoofer's front, highlighting the bass port and Panasonic branding.

## Remote Control




The included remote control allows for convenient adjustment of settings, including power, input selection, volume, and sound modes (Music, Movie, News, 3D, Bass, Treble).

## SETUP

---

### 1. Placement

For optimal sound, place the soundbar centrally below your television. Position the subwoofer on the floor near the soundbar, ensuring it has adequate space for ventilation.

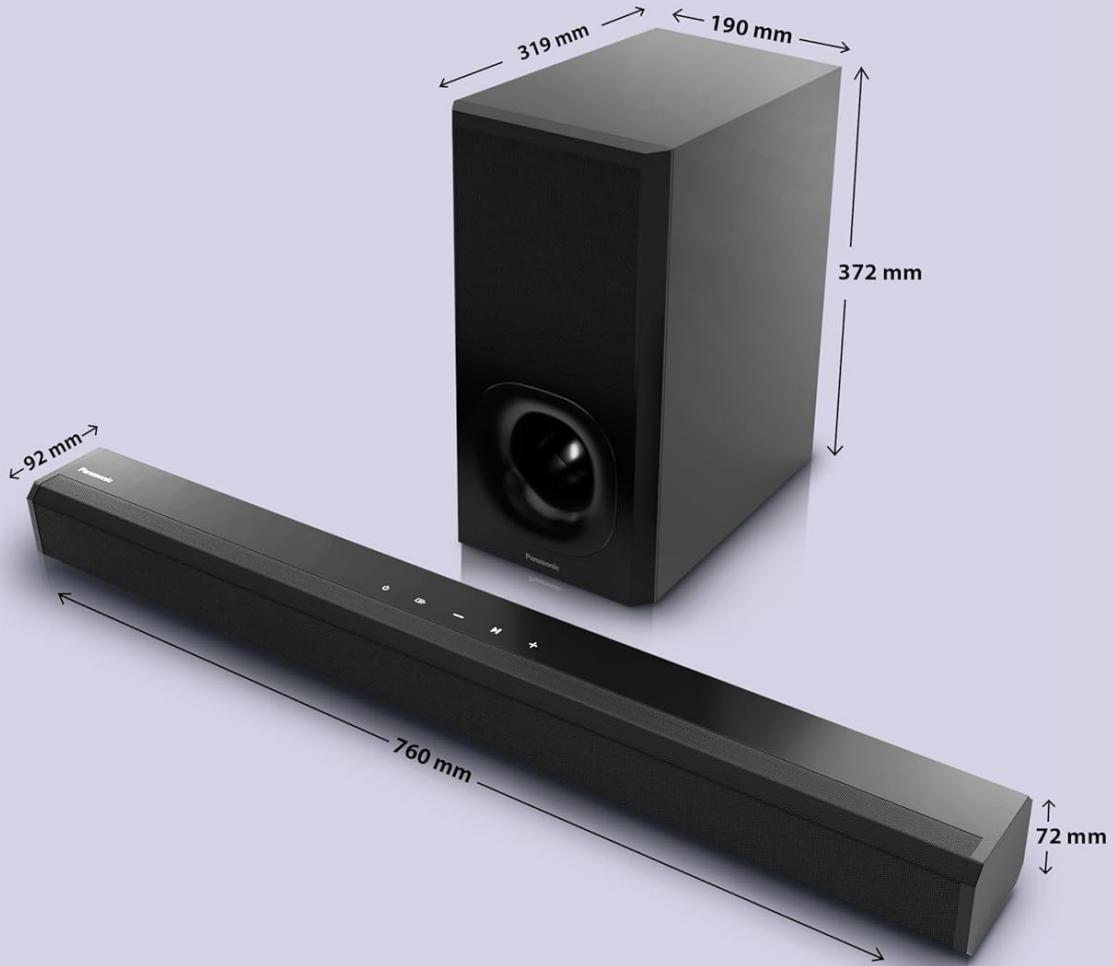

This diagram illustrates the recommended placement and dimensions of the soundbar and subwoofer for an optimal audio setup.

## 2. Power Connection

1. Connect the power cord to the soundbar's power input.
2. Plug the other end of the power cord into a wall outlet.
3. Ensure the subwoofer is also connected to a power source.

## 3. Audio Connections

The soundbar offers multiple connectivity options:



This image displays the available input ports on the soundbar, including Bluetooth, AUX, HDMI, and USB, allowing for versatile device connections.

- **Bluetooth:** For wireless connection to smartphones, tablets, and other Bluetooth-enabled devices.
- **USB:** For playing audio files directly from a USB drive.
- **RCA/AUX:** Use the provided audio cable to connect to devices with RCA or 3.5mm AUX output.
- **HDMI (ARC):** Connect to your TV's HDMI ARC port for high-quality audio and control.
- **Optical:** Connect to your TV or other audio source using an optical cable (not included).

## OPERATING INSTRUCTIONS

---

### Power On/Off

Press the **Power** button on the soundbar or the remote control to turn the unit on or off.

### Input Selection

Press the **Input** button on the soundbar or remote control to cycle through available input sources (Bluetooth, USB, AUX, HDMI, Optical).

### Volume Control

Adjust the volume using the **VOL+** and **VOL-** buttons on the soundbar or remote control.

### Bluetooth Pairing

1. Select Bluetooth input on the soundbar. The indicator will flash.
2. Enable Bluetooth on your device and search for "SC-HTS160GWK".
3. Select the soundbar from the list to pair. Once connected, the indicator will stop flashing.

### Using the Remote Control

## A MODE FOR EVERY MOOD

DIVERSIFY YOUR LISTENING MODES VIA REMOTE CONTROL



This image highlights the remote control's dedicated buttons for different sound modes, allowing users to customize their listening experience.

- Music Mode:** Optimizes audio for music playback.
- Movie Mode:** Enhances dialogue and effects for cinematic experiences.
- News Mode:** Clarifies speech for news broadcasts.
- 3D Mode:** Activates 3D surround sound for an immersive experience.
- Bass+/Bass-:** Adjusts the bass level.
- Treble+/Treble-:** Adjusts the treble level.

## MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the surfaces of the soundbar and subwoofer. Do not use liquid cleaners or abrasive materials.
- Ventilation:** Ensure that the ventilation openings are not blocked to prevent overheating.
- Storage:** If storing the unit for an extended period, unplug it from the power outlet and store it in a cool, dry place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not active.	Check power cord connection; Try a different outlet.
No sound	Incorrect input selected; Volume too low; Audio cable loose.	Select correct input; Increase volume; Reconnect audio cables.
Bluetooth pairing fails	Device too far; Bluetooth not enabled on device; Soundbar not in pairing mode.	Move device closer; Enable Bluetooth; Ensure soundbar is in pairing mode.
Remote control not working	Batteries depleted; Obstruction between remote and soundbar.	Replace batteries (2 AAA required); Remove obstructions.

## SPECIFICATIONS

Feature	Detail
Model Number	SC-HTS160GWK
Total Power Output	160 Watts
Sound Channel Configuration	2.1 Channel
Special Features	3D Surround Sound, Deep Bass, Touch Control
Connectivity Technology	Bluetooth, USB, RCA, AUX, HDMI (ARC), Optical
Wireless Communication	Bluetooth
Control Method	Remote Control, On-unit buttons
Product Dimensions	Soundbar: 760mm (W) x 72mm (H) x 92mm (D) Subwoofer: 190mm (W) x 372mm (H) x 319mm (D)
Item Weight	11 kg (total)
Included Components	Soundbar, Subwoofer, Remote, Audio Cable, User Manual
Power Source	Corded Electric
Remote Batteries Required	2 AAA batteries

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Panasonic India website. You may also contact Panasonic customer service directly.

**Manufacturer:** Panasonic Life Solutions India Private Limited

**Address:** 12th Floor, Ambience Tower I, Ambience Island NH-8, Gurgaon, Haryana-122002, India

**Telephone:** +91-0124-487-1300