

[Manuals.plus](#) /

› [Zostuic](#) /

› Zostuic DC101 4K 48MP Digital Camera User Manual

Zostuic DC101

Zostuic DC101 4K 48MP Digital Camera User Manual

Model: DC101 | Brand: Zostuic

INTRODUCTION

Thank you for purchasing the Zostuic DC101 4K 48MP Digital Camera. This compact and versatile camera is designed for both photography and vlogging, offering high-resolution imaging and video capabilities. With features like 4K video recording, 48MP autofocus, a 3-inch foldable screen, and various creative modes, it is an ideal tool for capturing your moments with clarity and precision. This manual provides detailed instructions on how to set up, operate, and maintain your camera to ensure optimal performance.

SAFETY INFORMATION

Please read all safety instructions carefully before using the camera.

- Do not expose the camera to water or moisture. This camera is not waterproof.
- Avoid dropping the camera or subjecting it to strong impacts.
- Keep the camera away from direct sunlight and high temperatures.
- Do not attempt to disassemble or repair the camera yourself. Refer to qualified service personnel.
- Use only the specified batteries and charging accessories.
- Keep out of reach of children.
- Dispose of batteries and electronic components responsibly according to local regulations.

PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- Zostuic DC101 4K Digital Camera
- Two (2) Lithium-polymer Batteries
- 32GB Memory Card

- USB Cable
- Power Adapter
- Lens Cap
- Camera Bag
- User Manual (this document)



Image: The Zostuic DC101 Digital Camera shown with its included accessories: two rechargeable batteries, a 32GB memory card, and a battery charger.

SETUP

1. Inserting the Battery

1. Open the battery compartment cover located at the bottom of the camera.
2. Insert the Lithium-polymer battery, ensuring the correct polarity as indicated inside the compartment.
3. Close the battery compartment cover securely until it clicks.

2. Inserting the Memory Card

1. Locate the memory card slot, usually next to the battery compartment or on the side.
2. Insert the 32GB SD card with the metal contacts facing down (or as indicated by the diagram near the slot) until it

clicks into place.

3. To remove the card, gently push it in until it clicks, then release, and it will spring out.

3. Charging the Battery

The camera comes with two batteries and a dedicated charger.

1. Insert a battery into the external battery charger.
2. Connect the charger to the power adapter using the USB cable.
3. Plug the power adapter into a wall outlet. The indicator light on the charger will show the charging status (e.g., red for charging, green for fully charged).
4. Alternatively, you can charge the battery inside the camera by connecting the camera directly to a power source via the USB cable.

Webcam for Vlogging/Youtube/Video

Welcome to my live stream on Christmas Eve



Image: Demonstrates two charging methods for the Zosui DC101 camera: direct camera charging via USB and external battery charging using the provided cradle.

OPERATING INSTRUCTIONS

1. Basic Controls

Familiarize yourself with the main buttons and screen functions.

- **Power Button:** Turns the camera on/off.

- **Shutter Button:** Press halfway to focus, fully to take a photo.
- **Mode Dial/Button:** Switches between photo, video, playback, and other modes.
- **Zoom Lever:** Controls the 16x optical zoom.
- **Navigation Buttons (Up/Down/Left/Right/OK):** Navigate menus and select options.
- **Display Screen:** The 3-inch foldable LCD screen for framing shots, reviewing media, and accessing menus.

2. Turning On/Off

Press and hold the Power button for a few seconds to turn the camera on or off.


3. Photo Mode (48MP Autofocus)

To capture high-resolution still images:

1. Turn on the camera and ensure it is in Photo mode.
2. Frame your shot using the 3-inch foldable screen.
3. Press the shutter button halfway down to activate autofocus. The camera will automatically adjust focus for clear images.
4. Press the shutter button fully to capture the 48MP image.
5. **Flash:** The integrated flash can be activated for low-light conditions. Refer to the camera's on-screen menu for flash settings (Auto, On, Off, Red-eye reduction).

48MP Autofocus Camera with Flip Screen

Clearer Photography and Take Selfies

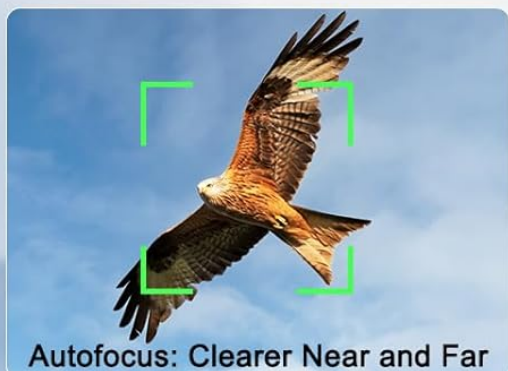

Autofocus: Clearer Near and Far



Without Focus: Blurry



Image: Illustrates the camera's 48MP autofocus feature, highlighting its ability to capture sharp details for both near and distant subjects.

Super Bright Flash, Night Like Day

Easily Shoot HD Night Scenes/Portraits



OFF



ON



Image: Demonstrates the effectiveness of the camera's super bright flash in low-light conditions, making night scenes appear as if shot in daylight.

4. Video Mode (4K Ultra HD)

Record high-quality 4K videos with 6-axis stabilization.

1. Switch the camera to Video mode.
2. Press the Record button to start recording. Press again to stop.
3. The camera supports 4K HDR video recording with 6-axis stabilization to minimize shakes.

4. **Pause and Restart:** During recording, you can pause and restart the video without creating a new file.
5. **Slow Motion:** Access the menu to enable super slow-motion video recording for cinematic effects.

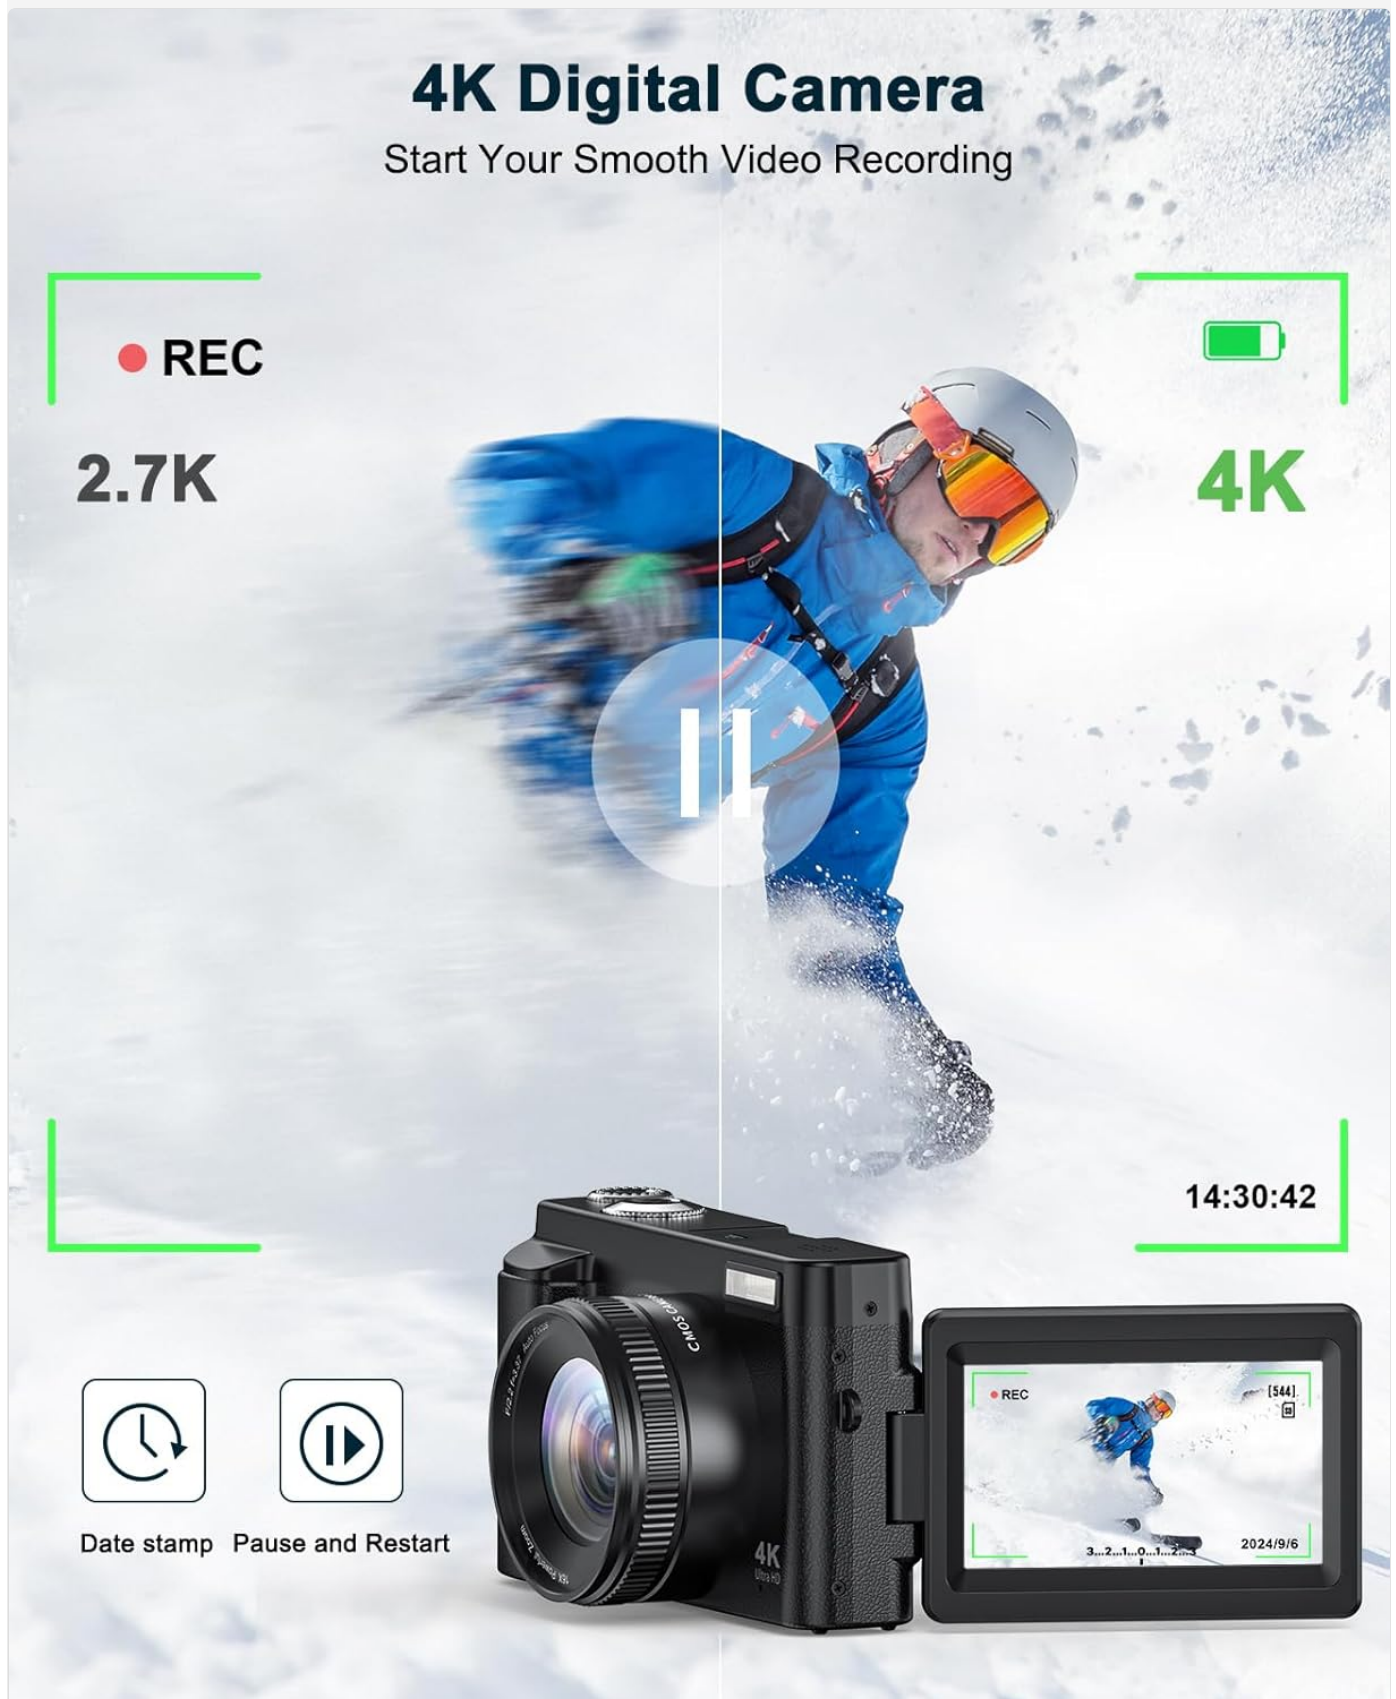


Image: Highlights the camera's 4K digital video recording capabilities, including features like date stamping and the ability to pause and restart recordings.

5. Selfie and Vlog Mode (Foldable Screen)

The 3-inch foldable screen is ideal for self-portraits and vlogging.

- Flip the screen outwards and rotate it 180 degrees to face the front.

- This allows you to see yourself while framing shots for selfies or vlogs.

6. Special Features


- **Continuous Shooting:** Capture a rapid sequence of photos by holding down the shutter button.
- **Smile & Face Capture:** The camera can detect smiles and faces, automatically optimizing settings for portraits.
- **Anti-shake:** The 6-axis stabilization helps reduce blur caused by camera movement.
- **Multiple Filters:** Apply 20 creative filters directly to your photos and videos.
- **Beauty Mode:** Enhance portraits with built-in beauty effects.
- **ISO Adjustment:** Manually adjust ISO sensitivity for different lighting conditions.
- **Timestamp:** Add a date and time stamp to your photos and videos.




Compact Travel



Continuous Shooting

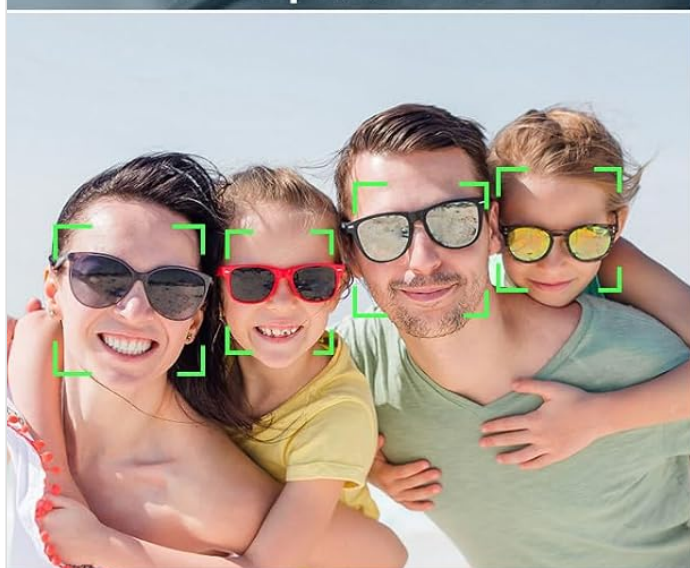

Smile & Face Capture

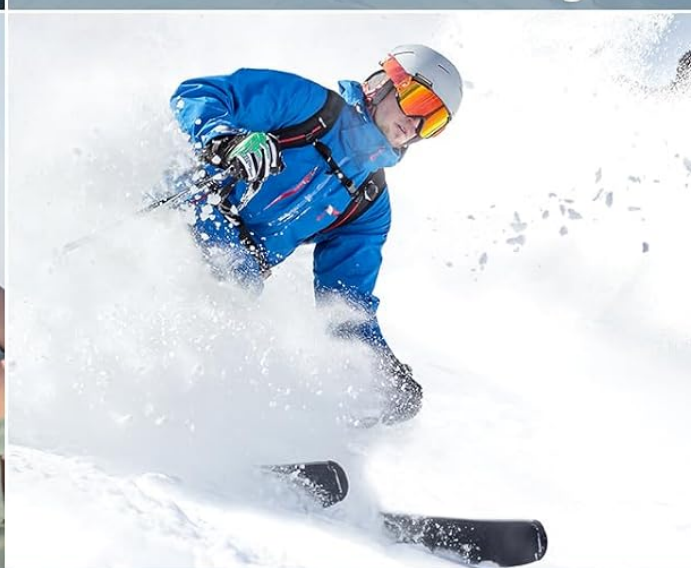 

Anti-shake



Multiple Filters

Image: A visual summary of the camera's key features, including its portability, continuous shooting mode, smart face detection, image stabilization, and a variety of artistic filters.

7. Live Streaming and File Transfer

- **Live Streaming:** Connect the camera to a computer via USB to use it as a webcam for live streaming on platforms like YouTube.
- **File Transfer:** Connect the camera to a computer using the USB cable to transfer photos and videos. The camera will appear as a removable disk drive.

MAINTENANCE

1. Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and lens cleaning solution. Do not use abrasive materials.
- Gently wipe the screen with a microfiber cloth.

2. Storage

- When not in use, store the camera in a cool, dry place, away from dust and direct sunlight.
- Use the provided camera bag for protection during travel or storage.
- Remove the battery if the camera will not be used for an extended period.

3. Battery Care

- Fully charge batteries before first use.
- Avoid completely draining the batteries regularly to prolong their lifespan.
- Store batteries in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is dead or not inserted correctly.	Charge the battery or reinsert it correctly.
Cannot take photos/videos.	Memory card is full or not inserted.	Insert a memory card or delete some files to free up space.
Images are blurry.	Autofocus failed, camera shake, or dirty lens.	Ensure autofocus locks, use anti-shake feature, or clean the lens.
Flash not working.	Flash setting is off or battery is low.	Check flash settings in the menu; ensure battery is charged.
Camera freezes.	Software glitch.	Remove and reinsert the battery to reset the camera.

SPECIFICATIONS

Feature	Detail
Brand	Zostuic
Model Name	DC101
Color	Black
Effective Still Resolution	48 Megapixels
Video Resolution	4K (2160p)
Optical Zoom	16x

Feature	Detail
Digital Zoom	16x
Screen Size	3.0 inches LCD (Foldable)
Image Stabilization	Optical, 6-axis
Focus Type	Autofocus
Minimum Shutter Speed	1/500 seconds
Maximum Shutter Speed	1/4000 seconds
Connectivity Technology	USB
Battery Composition	Lithium-polymer (2 included)
Supported File Format	AVI (for video)
Dimensions (Package)	17.2 x 14.2 x 9.9 cm; 580 grams
Special Features	Slow motion recording, Easy live streaming, Built-in flash, Beauty mode, Filters

WARRANTY AND SUPPORT

Zostuic products are manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or service, please refer to the warranty card included in your package or visit the official Zostuic website.

For any issues not covered in this manual, please contact Zostuic customer service.