

Puxinat AK-72

Puxinat Mini Projector AK-72 User Manual

Model: AK-72

INTRODUCTION

Thank you for purchasing the Puxinat Mini Projector AK-72. This manual provides essential information for setting up, operating, and maintaining your projector. Please read it thoroughly before use to ensure proper functionality and to maximize your viewing experience. Keep this manual for future reference.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Puxinat Mini Projector AK-72
- Remote Control
- Power Cord
- HDMI Cable
- User Manual (this document)
- Warranty Card

PRODUCT OVERVIEW

Familiarize yourself with the components and ports of your Puxinat Mini Projector.



**Pick Up the Fun and Go,
Take Home Theater Anywhere**

Image: Front view of the Puxinat Mini Projector, showing the projection lens and integrated handle.



Connection Methods



USB



HDMI



AV



CARD

Image: Rear view of the Puxinat Mini Projector, highlighting the USB, HDMI, AV, and Card ports.

Ports and Connections:

- **HDMI:** Connect to devices like TV sticks, laptops, game consoles.
- **USB:** Connect USB drives for media playback.
- **AUX (3.5mm Jack):** Connect external audio devices.
- **TF Card Slot:** Insert TF cards for media playback.
- **Power Input:** Connect the power cord.

SETUP

Follow these steps to set up your projector for the first time.

1. **Placement:** Place the projector on a stable, flat surface or mount it (floor mount compatible) at the desired distance from your projection surface. Ensure there are no obstructions to the lens or ventilation. The optimal projection distance is between 0.8 meters and 5 meters.
2. **Power Connection:** Connect the power cord to the projector's power input and then to an electrical outlet.
3. **Power On:** Press the power button on the projector or the remote control to turn on the device.
4. **Initial Adjustment:** The projector features automatic keystone correction and electric focus. It will attempt to adjust the image shape and clarity automatically upon startup.



Image: The projector displaying an image on a wall, illustrating the automatic keystone and electric focus features for hassle-free setup.

OPERATING INSTRUCTIONS

Basic Operation:

- **Power On/Off:** Use the power button on the projector or remote.
- **Navigation:** Use the arrow keys and OK button on the remote to navigate menus.
- **Source Selection:** Press the "Source" button on the remote to select input sources (HDMI, USB, etc.).

Focus and Keystone Adjustment:

While the projector features automatic adjustments, you can fine-tune them manually using the remote control.

- **Electric Focus:** Use the F+ and F- buttons on the remote to sharpen the image.

- **Manual Keystone:** If needed, access the menu to manually adjust keystone correction for a perfectly rectangular image.

One-Click Focus & Auto Keystone

Enjoy Clear Image at fingertips



Image: A close-up of the remote control, highlighting the F+ and F- buttons used for electric focus adjustment.

Zoom Function:

The projector supports a 50% to 100% electric zoom function, allowing you to adjust the image size without moving the projector.

- Access the zoom setting in the projector's menu.
- Adjust the percentage to enlarge or reduce the projected image.



Image: An illustration showing the projector's electric zoom capability, adjusting the image from 50% to 100% of its original size.

Connectivity:

The Puxinat Mini Projector offers versatile connectivity options.

- **Wi-Fi (5G/2.4G):** Connect to your home network for screen mirroring and online content.
- **Bluetooth 5.2 (Bidirectional):**
 - Connect to external Bluetooth speakers or headphones for enhanced audio.
 - Use the projector as a standalone Bluetooth speaker to play audio from your smartphone or other devices.
- **HDMI:** Connect to TV sticks, laptops, game consoles, and other HDMI-enabled devices.
- **USB:** Insert USB flash drives for direct media playback.
- **AUX:** Connect wired external speakers or headphones.
- **TF Card:** Insert a TF card for direct media playback.



Image: The projector functioning as a standalone Bluetooth speaker, shown in an outdoor setting with people enjoying music.



Image: The projector displaying various streaming service interfaces, demonstrating compatibility with TV sticks for endless entertainment.

Screen Mirroring:

Mirror your smartphone (iOS/Android) or tablet screen to the projector via Wi-Fi for a larger display.

1. Ensure both your device and the projector are connected to the same Wi-Fi network.
2. Select the screen mirroring option on the projector's menu.
3. On your smartphone/tablet, activate the screen mirroring feature (e.g., AirPlay for iOS, Cast for Android) and select the projector from the list of available devices.
4. *Note: Due to copyright restrictions, some streaming applications may not support screen mirroring. Use an HDMI connection or TV stick for such content.*

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your projector.

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for optical lenses. Do not use abrasive cleaners or cloths.
- **Cleaning the Exterior:** Wipe the projector's exterior with a soft, dry cloth. Avoid using liquid cleaners directly on the device.
- **Ventilation:** Ensure the ventilation vents are clear of dust and debris to prevent overheating. Do not block the vents during operation.
- **Storage:** When not in use for extended periods, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Lamp Life:** The projector lamp has an ultra-long life of approximately 60,000 hours. No regular lamp replacement is typically required under normal usage.



Image: An illustration depicting the internal components of the projector and highlighting its ultra-long lamp life of 60,000 hours.

TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No image displayed	Power not connected; Incorrect input source; Cable not connected properly.	Check power cord; Select correct input source (HDMI, USB); Ensure cables are securely connected.
Image is blurry	Focus not adjusted; Projector too close/far.	Use F+/F- buttons on remote to adjust electric focus. Ensure projector is within optimal projection distance (0.8m - 5m).

Problem	Possible Cause	Solution
Image is distorted (trapezoid shape)	Keystone not adjusted.	The projector has auto keystone. If manual adjustment is needed, access the keystone settings in the menu.
No sound	Volume too low; Muted; External audio device not connected/selected.	Increase volume; Unmute; Check external speaker connection or Bluetooth pairing.
Wi-Fi/Bluetooth connection issues	Out of range; Incorrect password; Interference.	Ensure projector is within range of router/device; Re-enter password; Reduce interference from other devices.

If the problem persists after trying these solutions, please contact Puxinat customer support.

SPECIFICATIONS

Brand	Puxinat
Model Name	AK-72
Display Resolution	Native 1920 x 720p (Supports 1080P)
Contrast Ratio	10000:1
Brightness	200 ANSI Lumens (approximate, based on reviews)
Connectivity Technology	Wi-Fi (5G/2.4G), Bluetooth 5.2, HDMI, USB, 3.5mm Jack (AUX), TF Card
Special Features	Electric Focus, Automatic Keystone Correction, 50%-100% Electric Zoom, Portable
Maximum Projection Size	300 Inches
Projection Distance	0.8 - 5 Meters
Lamp Life	60,000 Hours
Weight	1.36 Kilograms
Compatible Devices	TV Stick, Chromecast, Smartphones, Laptops, Tablets, PCs, Game Consoles, External Speakers

WARRANTY AND SUPPORT

The Puxinat Mini Projector AK-72 comes with a 3-year warranty, as indicated by the "3" in the warranty description. Please retain your proof of purchase and the warranty card included in the package.

For technical support, warranty claims, or any questions regarding your product, please contact Puxinat customer service through the retailer where you purchased the product or refer to the contact information provided on the warranty card.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question