

Manuals.plus /

> [abask](#) /

> abask 4-in-1 Portable Handheld Vacuum Cleaner User Manual

abask B0DYJK7NRK

abask 4-in-1 Portable Handheld Vacuum Cleaner User Manual

Model: B0DYJK7NRK | Brand: abask

INTRODUCTION

Thank you for choosing the abask 4-in-1 Portable Handheld Vacuum Cleaner. This versatile device is designed for efficient cleaning in various environments, including your car, home, and office. It features powerful suction, multiple functions, and a compact design for ease of use and storage. Please read this manual thoroughly before operation to ensure proper use and maintenance.

SAFETY INSTRUCTIONS

- Do not use the vacuum cleaner to pick up flammable or combustible liquids, hot ashes, or sharp objects.
- Keep the device away from water and high humidity. Do not immerse in water.
- Ensure the filter is properly installed before use.
- Do not block the air inlets or outlets during operation.
- Keep out of reach of children.
- Use only the provided charging cable and adapter.
- If the device is damaged, do not attempt to repair it yourself. Contact customer support.

PACKAGE CONTENTS

Please check the package for the following items:

- 1 x abask Handheld Vacuum Cleaner
- 1 x Side Brush
- 1 x Dust Brush
- 1 x Dusting Brush
- 1 x Charging Cable (USB-C)
- 2 x HEPA Filters (one pre-installed, one spare)
- 1 x Accessory Kit (including crevice tool, wide mouth nozzle, blowing nozzle, dual-purpose nozzles)

- 1 x User Manual



Image: The abask handheld vacuum cleaner shown with its various attachments, including different nozzles, brushes, and the two-part filter system. A USB-C charging cable is also visible.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your abask handheld vacuum cleaner:

- **Main Body:** Contains the motor, battery, and control buttons.
- **Dust Bin:** Transparent compartment for collecting dust and debris.
- **Filter System:** Consists of a metal mesh pre-filter and a HEPA filter.
- **Nozzle Attachment Point:** Where various accessories are connected.
- **LED Light:** Integrated light for illuminating dark areas.
- **Power Button/Mode Selector:** Controls power and suction modes.

- **Dust Bin Release Latch:** For easy emptying of the dust bin.

SETUP

1. Initial Charging

Before first use, fully charge the vacuum cleaner. Connect the USB-C charging cable to the charging port on the device and plug the other end into a compatible USB power source (e.g., wall adapter, computer USB port). The LED indicator will show charging status.

LED-Lit Cleaning: Brighten Dark Corners, Emergency Light Too

Illuminates dark areas for smarter cleaning & doubles as emergency light



Image: The abask vacuum cleaner with its integrated LED light turned on, illuminating a dark area, demonstrating its utility as both a cleaning tool and an emergency light.

2. Attaching Accessories

Select the appropriate nozzle or brush for your cleaning task and firmly attach it to the vacuum's suction/blowing port. Ensure it clicks into place securely.

OPERATING INSTRUCTIONS

Power On/Off and Suction Modes

Press the power button to turn on the vacuum cleaner. It will typically start in the default suction mode. Press the button again to cycle through different suction modes (e.g., ECO mode, MAX mode) or to turn off the device. The display will indicate the current mode and battery level.

Dual-Mode Powerful Suction

Storm-Level Cleaning
Every Inch of Your Car

MAX Model **21000PA**
≈20 Min 

ECO Model **13000PA**
≈30 Min 

140,000 RPM

High-Speed Motor



Low Mode



High Mode



Image: A visual representation of the vacuum's dual suction capabilities, showing the MAX mode (21000PA, ~20 min runtime) and ECO mode (13000PA, ~30 min runtime), powered by a 140,000 RPM high-speed motor.

4-in-1 Functionality

This vacuum cleaner offers four primary functions:


- **1. Suction:** For vacuuming dust, crumbs, pet hair, and debris from various surfaces. Use the appropriate nozzle for best results.
 - *Wide Mouth Nozzle:* Ideal for covering large areas quickly and picking up hair.
 - *Dual-Purpose Nozzle (Slim):* Reaches narrow spaces for thorough cleaning.
- **2. Blowing:** To clear dust from tight spaces, crevices, and delicate electronics like keyboards. Attach the blowing nozzle to the exhaust port.
 - *Blowing Nozzle:* For general blowing tasks.
 - *Blowing Nozzle + Brush:* For detailed cleaning of delicate surfaces and gaps.
- **3. Inflating:** Can be used to inflate air mattresses, swimming rings, and other inflatables. Attach the appropriate inflation adapter to the blowing port.
- **4. Fire Intensifier:** Functions as a powerful air blower to intensify flames for campfires or barbecues. Use with caution and appropriate distance.

4-in-1 Home & Car Vacuum

Your Versatile Partner for Cleaning Cars & Homes Across All Scenarios


Sucking

Suctions up dirt and debris from surfaces

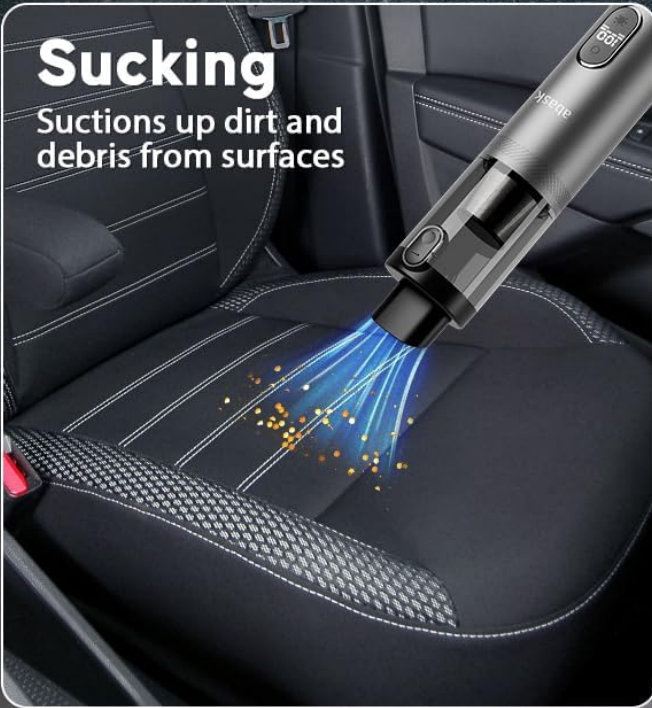

Blowing

Emits air to clean hard-to-reach areas

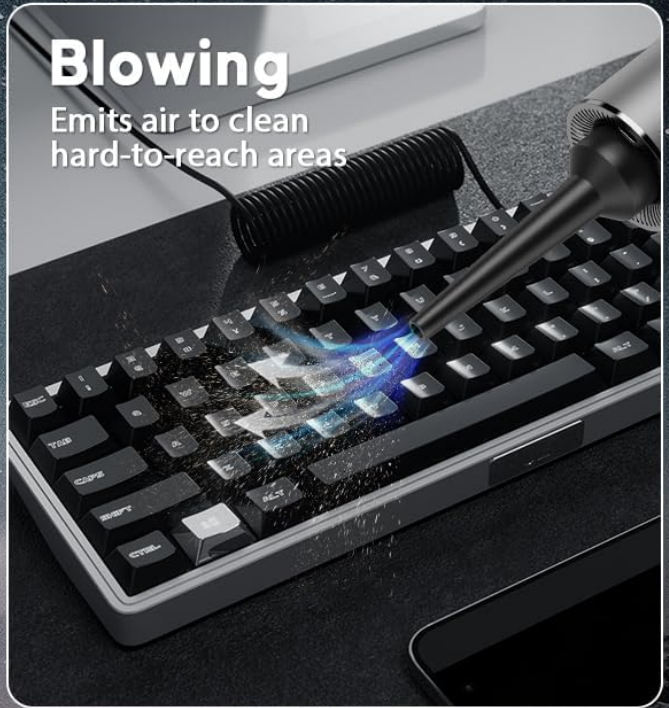

Inflating

Inflates air mattresses, swimming rings, etc



Fire Intensifier

Doubles as Powerful Air Blower for Bigger Flames



Image: A composite image illustrating the four main functions of the abask vacuum: vacuuming a car seat, blowing dust off a keyboard, inflating an air mattress, and acting as a fire intensifier for a campfire.

Multi-Accessory for Corner-to-Corner Cleaning

Wide Mouth Nozzle

Covers large areas quickly, sucking up dust and hair.



Blowing Nozzle

Clears dust from tight spaces and crevices.



Blowing Nozzle + Brush

Detailed cleaning of delicate surfaces and gaps.



Dual-Purpose Nozzle (Slim Nozzle)

Reaches narrow spaces for thorough cleaning.



Dual-Purpose Nozzle (Brush)

Gentle cleaning of fragile items and tight corners.



Image: A display of the multi-accessory kit, detailing the Wide Mouth Nozzle for large areas, Blowing Nozzle for tight spaces, Blowing Nozzle with Brush for delicate cleaning, Dual-Purpose Slim Nozzle for narrow reaches, and Dual-Purpose Brush Nozzle for fragile items and corners.

MAINTENANCE

1. Emptying the Dust Bin

To maintain optimal suction power, empty the dust bin regularly, especially after each significant use. Simply press the latch to open the dust bin and dispose of the collected debris.

One-Touch Dust Disposal Cleaner, Faster

Simply press the latch, and the dustbin
pops open effortlessly,



**Double-layer
Washable Filters x2**

**Innovative
Latch**



Image: The vacuum cleaner's dust bin being opened with a single press of a latch, showing dust falling out. An inset image displays the two washable, double-layer filters.

2. Cleaning and Replacing Filters

The vacuum cleaner uses a double-layer filter system (metal mesh pre-filter and HEPA filter) which are washable and

reusable. For best performance, clean the filters regularly.

1. Open the dust bin cover.
2. Empty the dust bin.
3. Remove the HEPA filter assembly.
4. Separate the metal mesh filter from the HEPA filter.
5. Wash both filters under running water. Ensure all dust is removed.
6. Allow the filters to air dry completely before reassembling and placing them back into the vacuum cleaner. Do not use a dryer or direct heat.

It is recommended to replace the HEPA filter every 3-6 months depending on usage to maintain optimal filtration and suction.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is low or depleted.	Charge the vacuum cleaner fully.
Weak suction power.	Dust bin is full. Filter is clogged. Nozzle is blocked.	Empty the dust bin. Clean or replace the filters. Check and clear any blockages in the nozzle or suction path.
Short operating time.	Battery not fully charged. Using MAX mode continuously.	Ensure the battery is fully charged before use. Use ECO mode for longer runtime when full power is not needed.
Device overheats.	Prolonged use or blocked airflow.	Turn off the device and allow it to cool down. Check for and clear any blockages.

SPECIFICATIONS

- **Brand:** abask
- **Model:** B0DYJK7NRK
- **Dimensions:** 29.1 x 10.8 x 7.7 cm
- **Weight:** 710 grams
- **Battery Capacity:** 6000mAh
- **Suction Power:** Up to 21000PA (MAX Mode), 13000PA (ECO Mode)
- **Motor Speed:** 140,000 RPM
- **Runtime:** Approx. 20 minutes (MAX Mode), Approx. 30 minutes (ECO Mode)
- **Charging Port:** USB-C
- **Features:** 4-in-1 (Suction, Blowing, Inflating, Fire Intensifier), LED Light, Washable HEPA Filters

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the

warranty card included in your package or contact abask customer support. If you encounter any issues or have questions regarding your product, please reach out to our support team for assistance.

Customer Support: Please refer to the contact information provided on the product packaging or the official abask website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question