

[Manuals.plus](#) /

› [Ikea](#) /

› BJORKOVIKEN Bookcase with Doors User Manual

Ikea 194.216.99

BJORKOVIKEN Bookcase with Doors User Manual

Model: 194.216.99

1. INTRODUCTION

This manual provides essential information for the assembly, operation, maintenance, and troubleshooting of your new BJORKOVIKEN Bookcase with Doors. Please read this manual thoroughly before beginning assembly or use to ensure safe and proper functionality.

The BJORKOVIKEN bookcase offers a practical storage and display solution, allowing you to showcase your favorite items on open shelves while keeping clutter out of sight behind closed doors. The front panels are crafted from oak veneer, providing a natural look and a sense of quality. Adjustable shelves allow for customized storage to meet your needs.

2. SAFETY INFORMATION

WARNING: To prevent tipping, this furniture must be securely fixed to the wall using the connecting parts provided in the package. Different wall materials require different types of connecting parts. Ensure you use connecting parts suitable for your home's wall structure. If your wall type requires different parts, they must be purchased separately. Always consult a professional if you are unsure about the appropriate wall-mounting hardware for your specific wall type.

- Always follow assembly instructions carefully.
- Do not overload shelves. The maximum load per shelf is 20 kg.
- Keep small parts and packaging materials away from children during assembly.
- Ensure all assembly fittings are properly tightened. Re-tighten if necessary after initial use and periodically thereafter.
- Do not climb on or hang from the furniture.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Main frame components
- Adjustable shelves (multiple)
- Doors/Front panels
- Soft-closing hinges (optional, if chosen)
- Magnetic push-openers (optional, if chosen)

- Assembly hardware (screws, dowels, etc.)
- Wall-mounting hardware (for standard wall types)

4. SETUP AND ASSEMBLY

Assembly of the BJORKOVIKEN bookcase requires careful attention to detail. It is recommended that two people assemble this unit for safety and ease.

1. **Unpack and Identify Parts:** Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches. Refer to the included assembly diagram (if provided separately) to identify each part.
2. **Assemble the Frame:** Follow the step-by-step instructions provided with your product to assemble the main frame of the bookcase. Ensure all connections are secure.
3. **Install Shelves:** Insert the adjustable shelves into the desired positions. The shelves can be moved to customize your storage space.
4. **Attach Doors:** Attach the doors using the provided hinges. If you have chosen soft-closing hinges, install them according to their specific instructions. Adjustable hinges allow for horizontal and vertical alignment of the doors. If using magnetic push-openers, install them as directed.
5. **Wall Mounting:** This is a critical safety step. Position the assembled bookcase against the wall in its final location. Using the provided wall-mounting hardware, secure the bookcase to the wall. Ensure the hardware is appropriate for your wall type. If necessary, purchase suitable hardware separately. This step prevents the unit from tipping over.
6. **Final Check:** Once assembled and wall-mounted, gently shake the unit to ensure stability. Re-tighten any loose fittings.

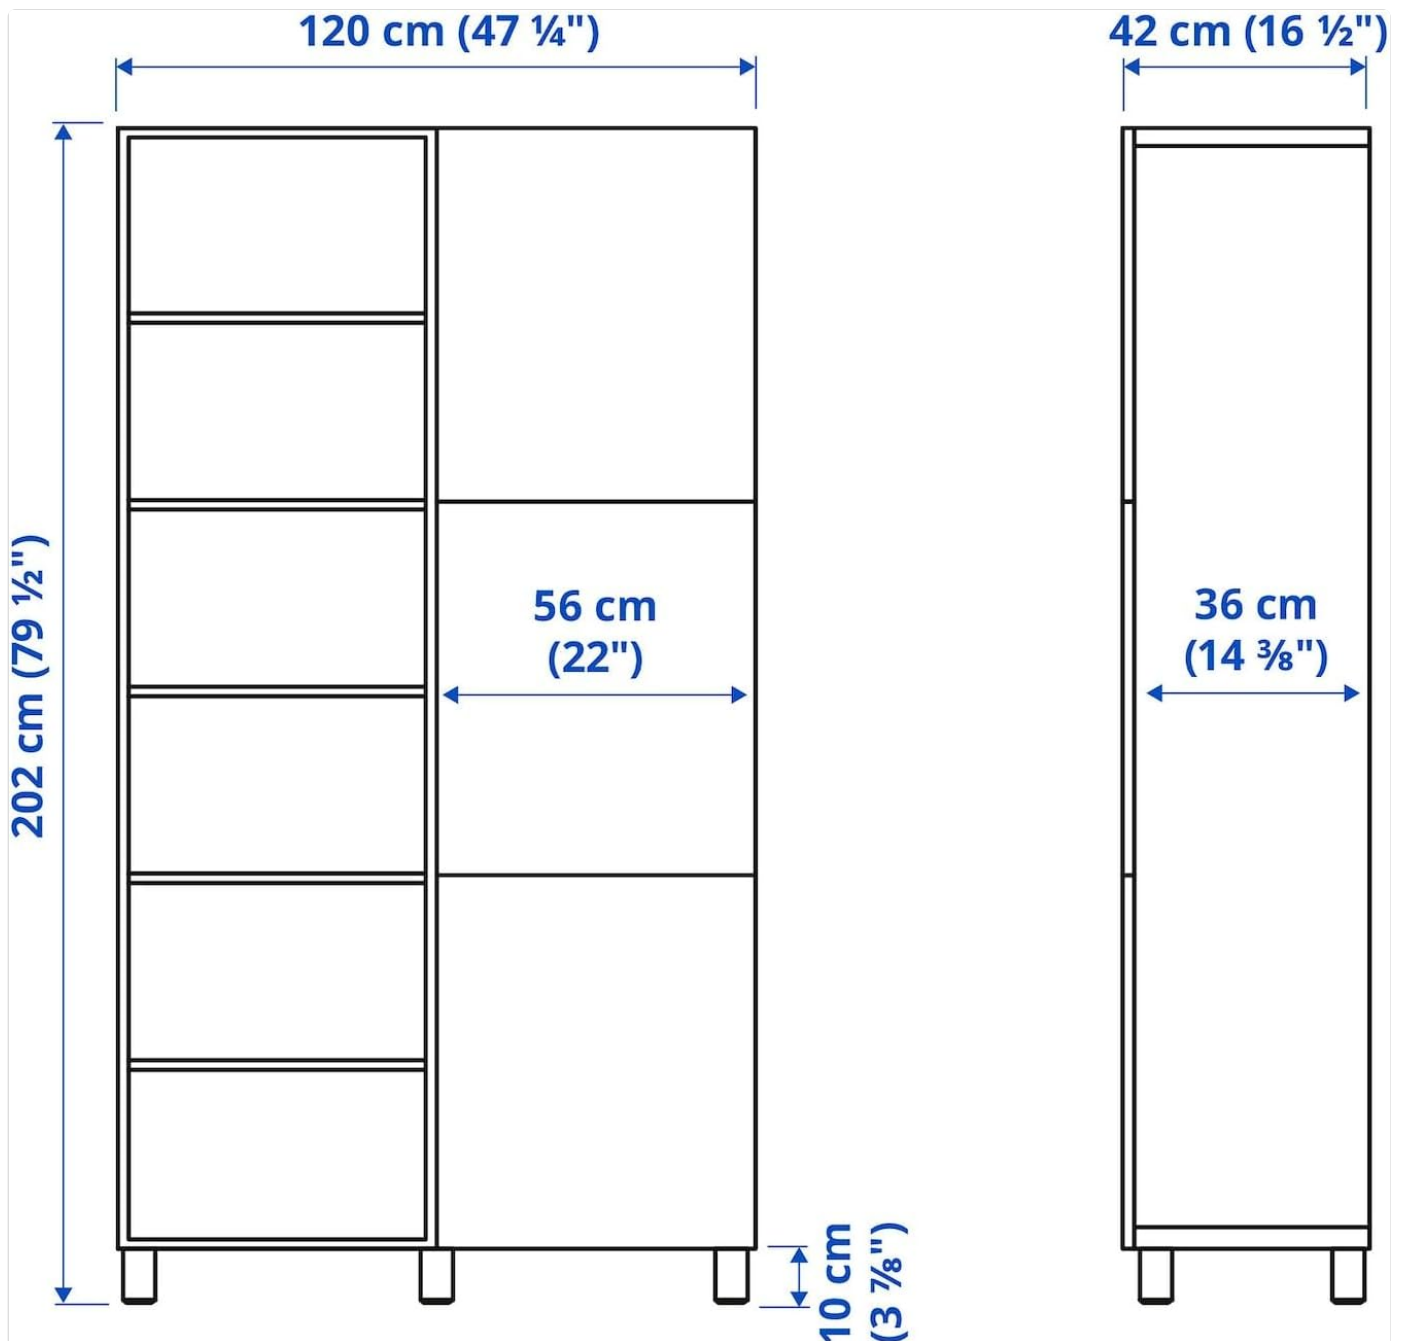


Figure 1: Product Dimensions. The bookcase measures 120 cm (47 1/4") in width, 42 cm (16 1/2") in depth, and 202 cm (79 1/2") in height. The internal shelf depth is 36 cm (14 3/8").

5. OPERATING INSTRUCTIONS

The BJORKOVIKEN bookcase is designed for versatile storage and display.

- **Adjustable Shelves:** To adjust a shelf, remove any items from it, lift the shelf, and reposition the shelf supports in the desired holes. Then, place the shelf back onto the supports.
- **Doors:**
 - If equipped with *soft-closing hinges*, the doors will close quietly and gently with minimal effort.
 - If equipped with *magnetic push-openers*, simply press lightly on the door to open it.
- **Storage Optimization:** You can further optimize and organize your BESTÅ storage space by using compatible boxes and additional inserts (sold separately).



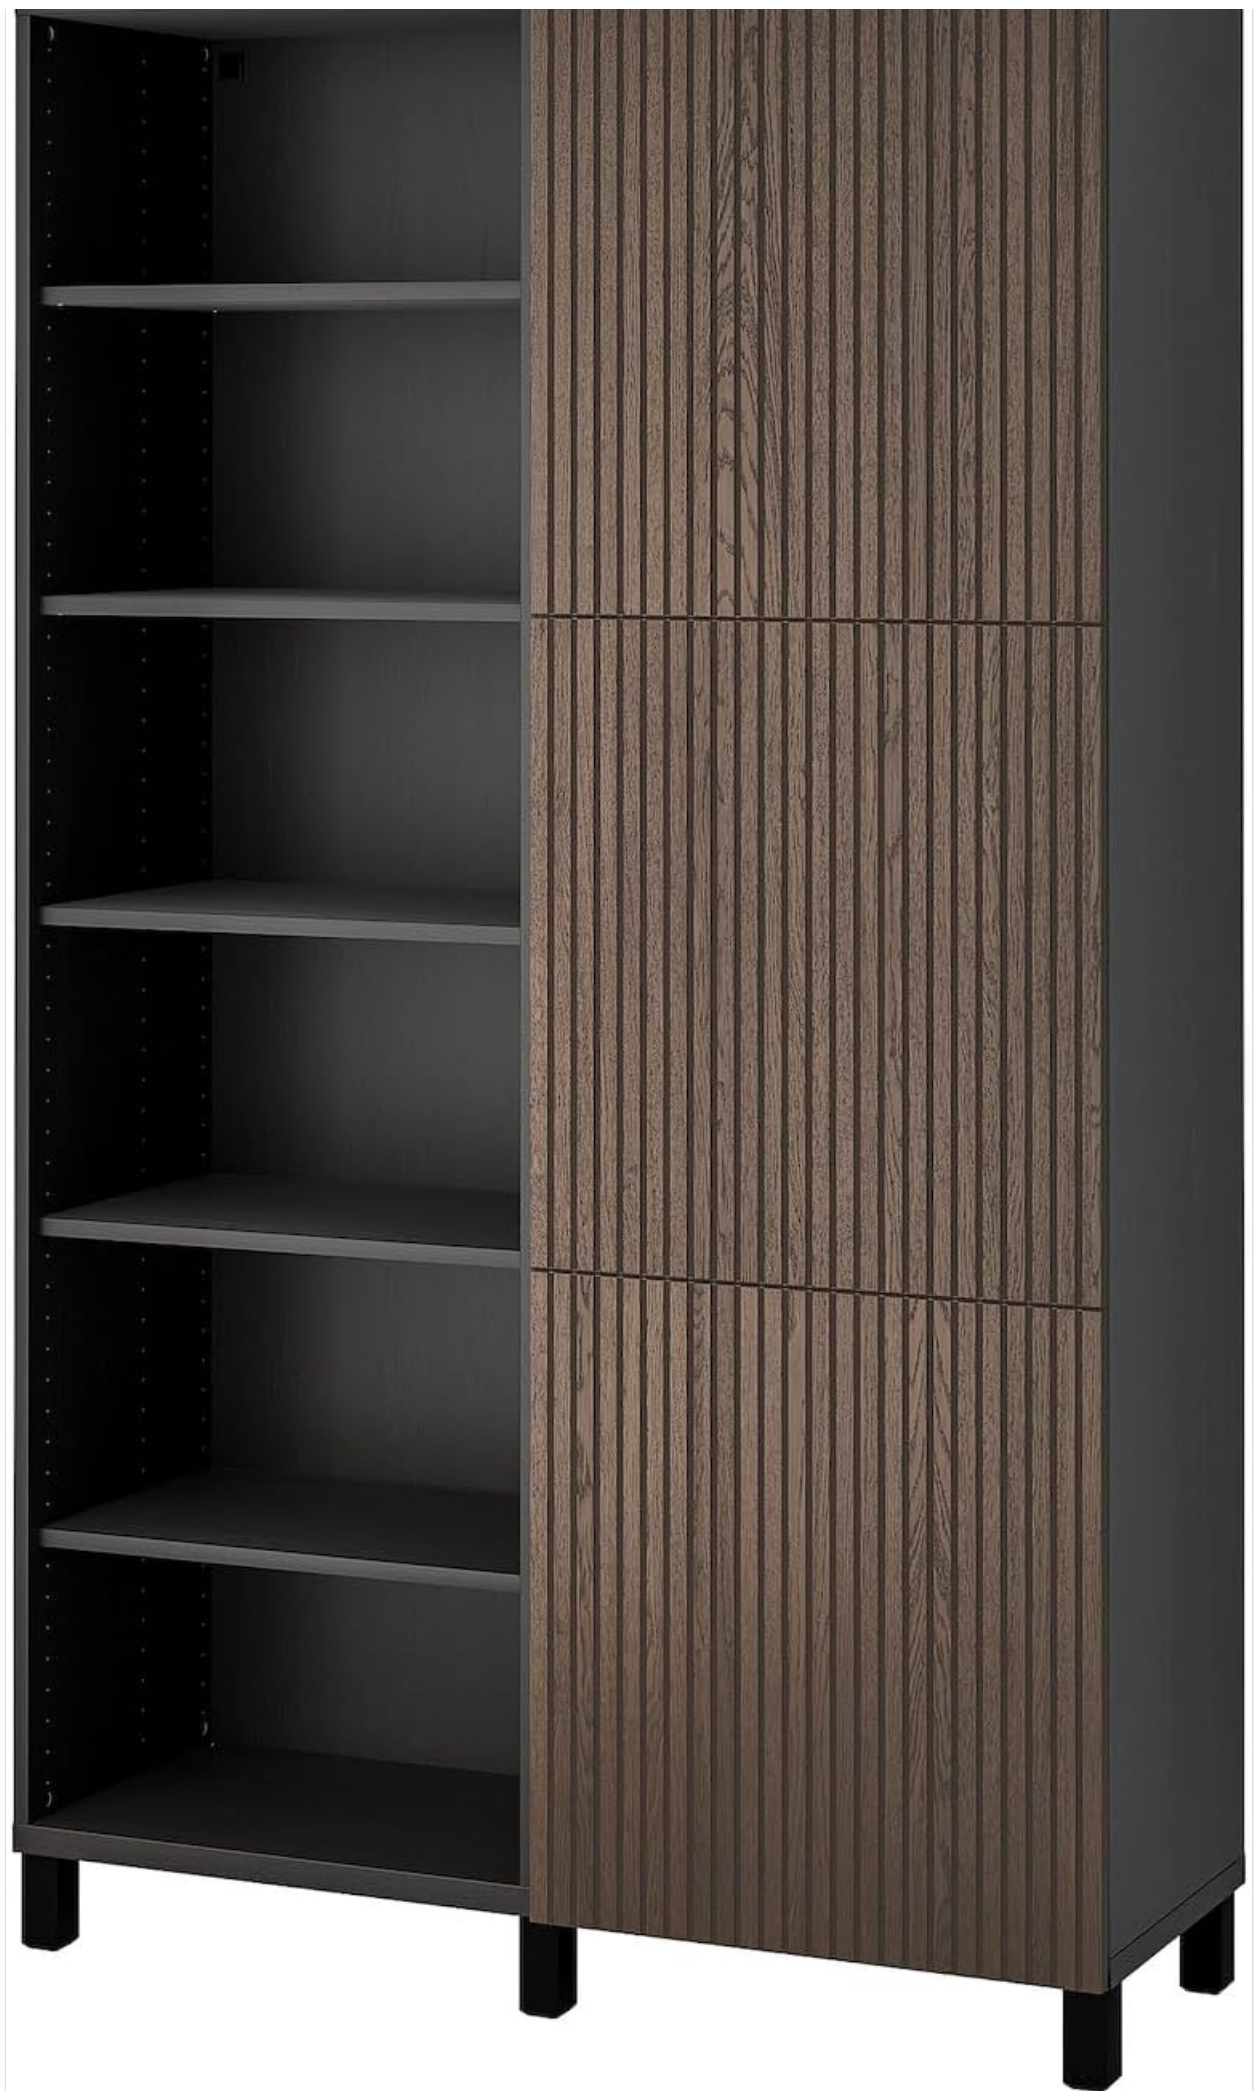


Figure 2: BJORKOVIKEN Bookcase with one section open and the other closed, showcasing the combination of open and closed storage.



Figure 3: BJORKOVIKEN Bookcase fully closed, demonstrating its sleek appearance when doors are shut.



Figure 4: BJORKOVIKEN Bookcase with doors partially open, showing how items can be stored and accessed.

6. MAINTENANCE

Proper maintenance will extend the life and appearance of your bookcase.

- **Cleaning:** Wipe the surfaces with a damp cloth. Wipe dry with a clean cloth. Avoid using abrasive cleaners or harsh chemicals.
- **Fittings:** Periodically check all assembly fittings and wall-mounting hardware. Re-tighten if they become loose to ensure stability and safety.
- **Environmental Care:** The product is made from materials that are environmentally responsible, including MDF and particleboard with recycled paper filling.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Bookcase feels wobbly or unstable.	Loose assembly fittings or improper wall mounting.	Ensure all screws and connections are tightened. Verify that the bookcase is securely anchored to the wall with appropriate hardware.
Doors do not align properly.	Hinges are not adjusted correctly.	Use the adjustable hinges to align the doors horizontally and vertically until they are even.
Doors do not close smoothly (if soft-closing).	Hinges may need adjustment or are obstructed.	Check for any obstructions. Ensure hinges are properly installed and adjusted.

8. SPECIFICATIONS

Model: 194.216.99

Brand: Ikea

Dimensions (W x D x H): 120 cm x 42 cm x 202 cm (47 ¼" x 16 ½" x 79 ½")

Max. Load per Shelf: 20 kg

Materials:

- Panel: MDF and particleboard with paper honeycomb filling (100% recycled paper), Paper foil, Plastic edging
- Back panel: MDF, Paper foil, Plastic foil
- Doors: MDF, Oak veneer, Stained, Clear acrylic lacquer
- Metal parts: Steel, Nickel plated
- Plastic parts: Acetal plastic
- Legs: Solid wood, Acrylic paint

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Ikea website. For customer support, assembly assistance, or to report missing/damaged parts, please contact Ikea customer service through their official channels.

You can find contact information and frequently asked questions on the [Ikea official website](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DYJMTD9M>

More documents and user manuals: <https://manuals.plus/>