

[Manuals.plus](#) /

> [CUTEBEE](#) /

> CUTEBEE Book Nook Kit - Mrs. Hunt Bakery Instruction Manual

CUTEBEE CQB-CWGB401

CUTEBEE Book Nook Kit - Mrs. Hunt Bakery Instruction Manual

Model: CQB-CWGB401

INTRODUCTION

This instruction manual provides detailed guidance for assembling your CUTEBEE Mrs. Hunt Bakery Book Nook Kit. This DIY miniature house kit allows you to create a detailed, illuminated bakery scene, perfect for display in your home or as a thoughtful project.



Image: The fully assembled Mrs. Hunt Bakery Book Nook Kit, showcasing its detailed exterior and warm LED lighting.

SAFETY WARNINGS

WARNING:

- Not suitable for children under 14 years of age.

- To be used only under adult supervision.
- Contains small parts that may pose a choking hazard.
- Exercise caution with sharp tools during assembly.

SETUP

Required Tools (Not Included)

Due to customs restrictions, the following tools are not included in the kit and must be prepared by the user:

- Tweezers
- Adhesive (glue)
- Scissors
- 2 x AAA Batteries (for LED lighting)

Assembly Overview

The assembly process involves splicing, gluing, cutting, and pasting various wooden and paper components. Each kit is crafted with precision using laser cutting technology for a millimetre-perfect fit. Clear, illustrated instructions are provided within the kit to guide you through each step.

Expected assembly time is approximately 5 to 8 hours, making it an ideal project for beginners in model building. Patience and attention to detail are key for a successful outcome.



Stress Relief



Develop Patience



Logical thinking



Stimulate Imagination

Image: A user's hands carefully assembling a small component of the kit, with the detailed instruction manual open in the background.

Mrs. Hunt Bakery

Product Time

4-6 Hours

Weight About

0.98kg/2.17lb

Assembly Difficulty



Image: Visual representation of the product's dimensions (19.2cm height, 24.6cm width, 13.5cm depth) and an estimated assembly time of 4-6 hours with a 3-star difficulty rating.

OPERATING LED LIGHTING

The CUTEBEE Book Nook Kit includes LED lighting to illuminate your miniature bakery scene. To activate the lights, ensure that 2 AAA batteries (not included) are correctly installed in the designated battery compartment, typically located at the back or base of the model. Follow the polarity markings (+/-) inside the compartment.

Once batteries are installed, locate the small switch to turn the LED lights on or off. The lighting adds a warm, atmospheric glow to the detailed interior of the bakery.

Join the morning ritual where crisp aromas dance with sunlight, crafting moments of simple joy.



Image: A close-up of the bakery's interior, showing miniature bread, pastries, and jars, all softly lit by the integrated LED lights.

MAINTENANCE

To ensure the longevity and appearance of your CUTEBEE Book Nook Kit, regular maintenance is recommended:

- **Dusting:** Gently dust the model regularly with a soft, dry cloth or a soft brush to prevent dust accumulation.
- **Dust Cover:** The kit includes an acrylic dust cover. Ensure this cover is properly placed over the finished model to protect it from dust and environmental elements.
- **Battery Replacement:** If the LED lights dim or stop working, replace the AAA batteries. Always dispose of used batteries responsibly.
- **Storage:** Store the model in a dry environment, away from direct sunlight and extreme temperatures, to prevent warping or fading of materials.

TROUBLESHOOTING

Here are some common issues and their solutions:

Problem	Possible Cause / Solution
LED lights do not turn on.	<ul style="list-style-type: none"> ◦ Check if batteries are installed correctly (polarity). ◦ Ensure batteries are fresh and not depleted. ◦ Verify the power switch is in the "ON" position. ◦ Inspect wiring for any disconnections (if accessible and safe).
Parts do not fit together.	<ul style="list-style-type: none"> ◦ Refer to the detailed instruction manual to ensure correct part identification and orientation. ◦ Some parts may require gentle sanding or trimming for a perfect fit. ◦ Ensure no excess glue is obstructing the fit.
Missing or damaged parts.	<ul style="list-style-type: none"> ◦ Carefully check all packaging materials. ◦ Contact CUTEBEE customer support for assistance (see "Warranty and Support" section).

SPECIFICATIONS

Feature	Detail
Model Number	CQB-CWGB401
Product Dimensions (L x W x H)	17 x 13 x 17 cm (approx. 6.7 x 5.1 x 6.7 inches)
Weight	990 grams (approx. 2.18 lbs)
Recommended Age	14 years and up
Educational Value	Craftsmanship skill development
Assembly Required	Yes
Batteries Required	Yes (2 x AAA)
Batteries Included	No
Main Material	Wood

WARRANTY AND SUPPORT

CUTEBEE stands behind the quality of its products. If you encounter any issues with your Book Nook Kit, such as missing or defective parts, please contact the seller or CUTEBEE customer support directly. Please have your purchase details and model number (CQB-CWGB401) ready when contacting support for faster assistance.

For further information or to explore other CUTEBEE products, please visit the official CUTEBEE store on Amazon or their website.

[Visit the CUTEBEE Store](#)

