

[Manuals.plus](#) /

› [HSHa](#) /

› HSHa Cordless Portable Power Washer Instruction Manual

HSHa B0DYJV2SNY

HSHa Cordless Portable Power Washer Instruction Manual

Model: B0DYJV2SNY

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your HSHa Cordless Portable Power Washer. Please read this manual thoroughly before using the product and retain it for future reference.

SAFETY INFORMATION

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury.

- Ensure the power washer is fully charged before use.
- Do not point the spray nozzle at people or animals.
- Wear appropriate safety gear, including eye protection.
- Keep children and pets away from the operating area.
- Do not operate the power washer in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Disconnect the battery before performing any maintenance or cleaning.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1x Pressure Washer unit
- 2x 3000mAh Batteries
- 1x Fast Charger
- 1x 10-inch Extender
- 1x 16.4ft Hose
- 1x Foam Spraying Nozzle
- 2x Quick Connectors

- 1x 300ml Foam Pot
- 1x Water Filter
- 1x User Manual

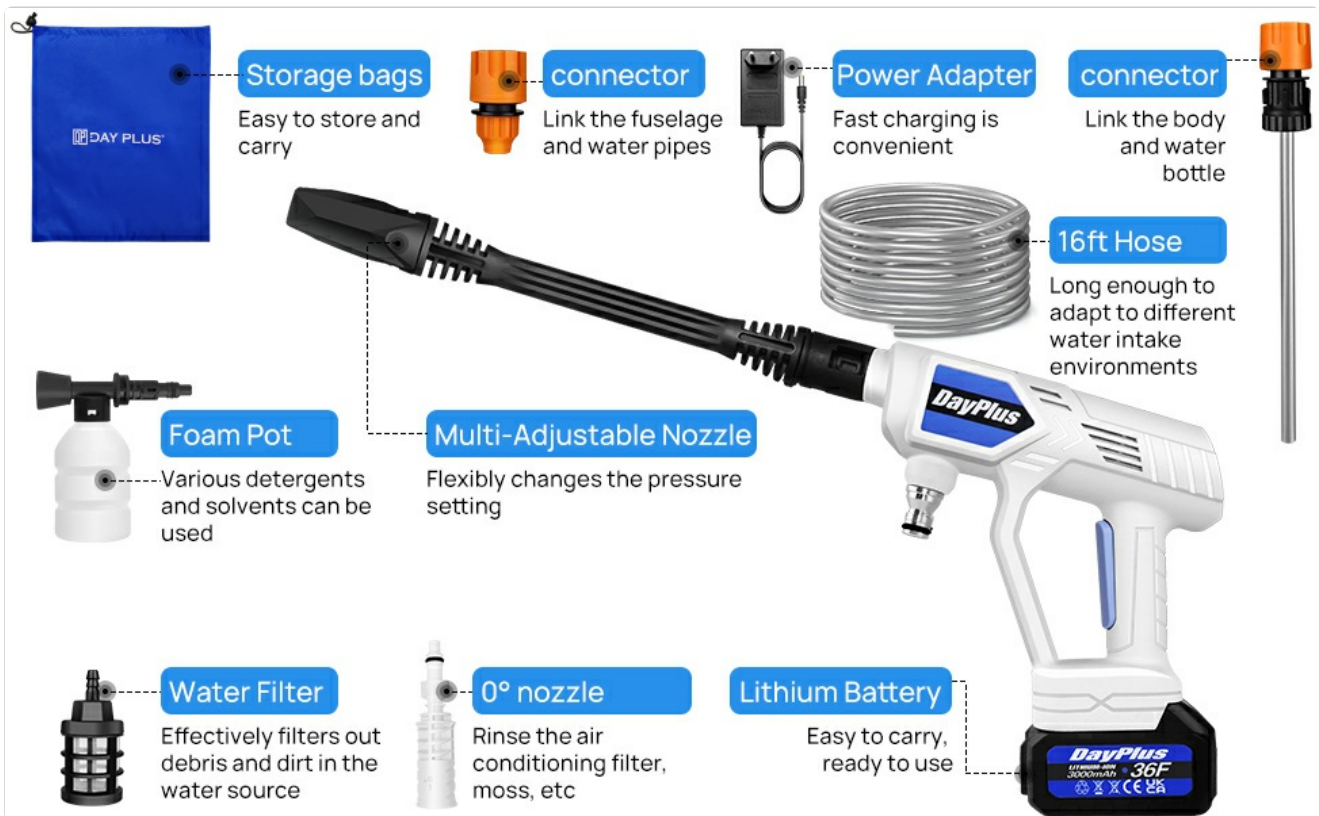 


Image: All components included in the HSHa Cordless Portable Power Washer kit.

PRODUCT OVERVIEW

The HSHa Cordless Portable Power Washer features a powerful motor and versatile spray options for various cleaning tasks. Its portable design and battery power allow for use in locations without direct power access.



Image: The HSHa Cordless Portable Power Washer with battery.

Key Features:

- **Powerful Motor:** 652 PSI pressure, 270 L/H flow rate with a pure copper motor for efficiency.
- **Adjustable Nozzle:** 0-180° adjustable spray patterns including linear high-pressure, fan-shaped, 0° water spray, and foam injection.
- **Long Battery Life:** Two 3000mAh batteries provide up to 45 minutes of continuous use.
- **Multiple Water Supply Methods:** Can draw water from buckets, pools, rivers, or connect to a water bottle.

CHOISISSEZ LE MOTEUR HAUTE PUISSANCE



Image: Internal view of the pure copper motor, emphasizing its power and efficiency.

 
SETUP INSTRUCTIONS

1. Install the Nozzle:

Align the duckbill nozzle with the front of the power washer. Press it in and rotate it until it locks securely. Removal is the reverse process.

For foam kettle or zero-degree nozzle, the installation method is similar.

Different Water Outlet Modes

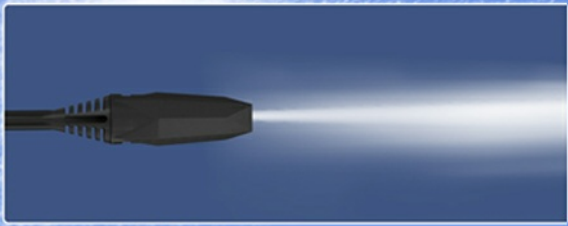

1

LINEAR HIGH-PRESSURE INJECTION



2

FAN-SHAPED JET



3

O° WATER SPRAY



4

FOAM WATERING CAN

Image: Different water outlet modes available with the adjustable nozzle.

2. Connect the Hose and Water Filter:

Attach the water filter to one end of the 16.4ft hose. Connect the other end of the hose to the quick connector, then attach the quick connector to the water inlet port on the power washer unit. Ensure all connections are secure to prevent leaks.



Image: The water filter effectively removes impurities from the water source.

Your browser does not support the video tag.

Video: Demonstrates the installation of the duckbill nozzle, foam kettle, zero nozzle, and hose connections.

3. **Install the Battery:**

Align the battery with the slot at the base of the power washer handle and slide it in until it clicks into place. To remove, press the release button and pull the battery out.

LONGER BATTERY LIFE, LONGER STANDBY



Image: Proper installation of the lithium-ion battery into the power washer.

4. Choose a Water Source:

The power washer can draw water from various sources:

- **Portable Bucket:** Place the filtered end of the hose into a bucket of water.
- **Water Bottle:** Attach a standard water bottle directly to the unit using the appropriate connector.
- **Natural Sources:** The self-priming function allows drawing water from lakes or rivers.



Image: Various water extraction methods for flexible use.

OPERATING INSTRUCTIONS

1. Power On/Off and Gear Adjustment:

Press the power button to turn the unit on. The power washer features three adjustable gears to control water pressure. Press the gear button to cycle through the settings (1, 2, 3) to match your cleaning needs.

2. Adjusting the Spray Nozzle:

Rotate the nozzle to select the desired spray pattern: linear high-pressure injection for stubborn stains, fan-shaped jet for general cleaning, 0° water spray for precise cleaning in gaps, or attach the foam pot for foam application.

3. Cleaning Applications:

The HSHa power washer is suitable for a variety of tasks:

- **Car Washing:** Use the foam pot for soap application, then rinse with a fan-shaped or linear jet.
- **Home and Outdoor Cleaning:** Clean exterior walls, windows, driveways, and patios.
- **Gardening:** Use a gentle spray for watering plants and flowers.
- **Pet Bathing:** A soft spray setting can be used for bathing pets.

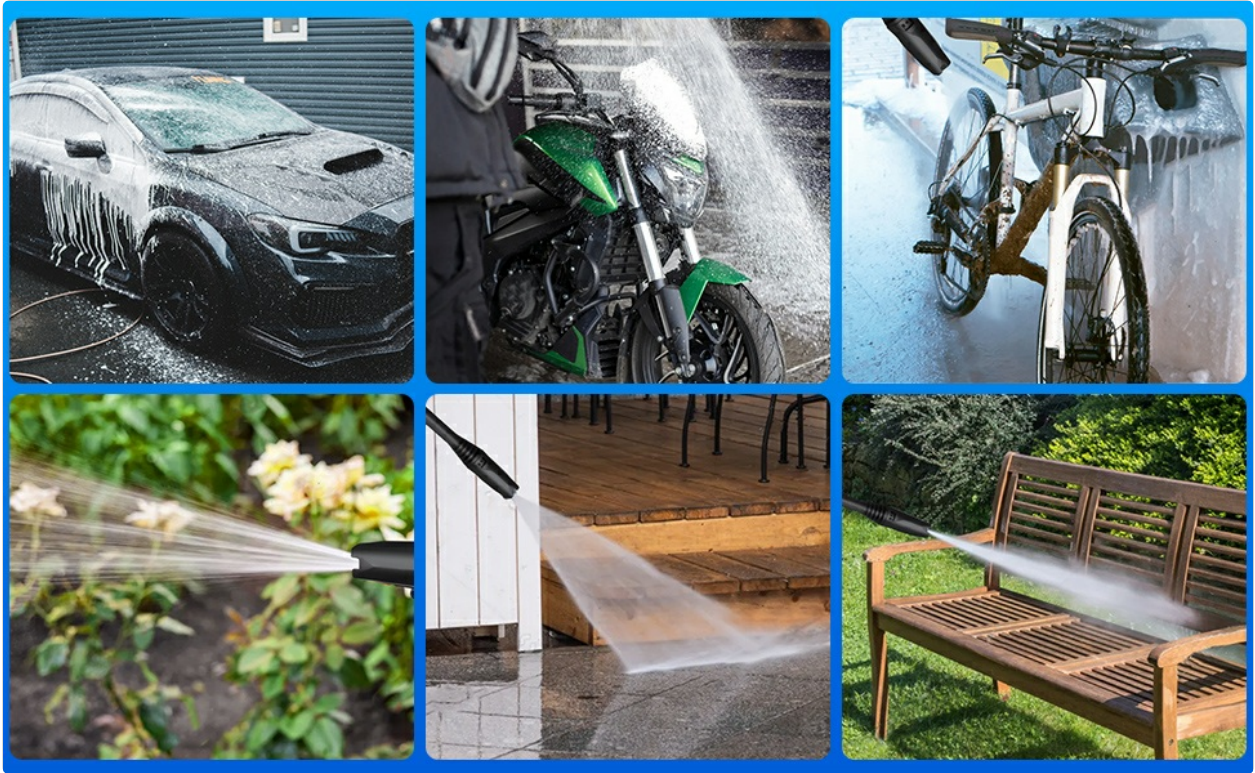 


Image: Examples of multi-purpose cleaning applications.

Your browser does not support the video tag.

Video: Demonstrates the power washer in action, including adjusting gears, cleaning a car with foam, cleaning windows, and watering plants.

MAINTENANCE

- **Cleaning the Unit:** After each use, rinse the power washer and accessories with clean water. Wipe down the exterior with a damp cloth.
- **Water Filter:** Regularly check and clean the water filter to ensure optimal performance and prevent clogging.
- **Battery Care:** Store batteries in a cool, dry place. Do not expose them to extreme temperatures. Charge batteries fully before long-term storage.
- **Storage:** Store the power washer and all accessories in a dry, protected area, away from direct sunlight and freezing temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No water spray or weak pressure	<ul style="list-style-type: none">◦ Low battery charge◦ Clogged water filter◦ Air in the pump◦ Improperly connected hose	<ul style="list-style-type: none">◦ Charge the battery◦ Clean the water filter◦ Run the unit without the nozzle until water flows steadily◦ Ensure all hose connections are tight

Problem	Possible Cause	Solution
Unit does not turn on	<ul style="list-style-type: none">Battery not installed correctlyBattery is dead	<ul style="list-style-type: none">Reinstall battery securelyCharge the battery
Water leaks from connections	<ul style="list-style-type: none">Loose connectionsDamaged O-rings	<ul style="list-style-type: none">Tighten all connectionsReplace damaged O-rings

SPECIFICATIONS

Feature	Detail
Brand	HSHa
Model Number	Cordless Pressure Washer (B0DYJV2SNY)
Power Source	Battery Powered (21V)
Maximum Pressure	652 PSI
Hose Length	5 Meters (16.4 ft)
Battery Capacity	2x 3000mAh
Working Time	Up to 45 minutes per charge
Product Dimensions (L x W x H)	4.5" x 2.9" x 11.4"

WARRANTY AND SUPPORT

Your HSHa Cordless Portable Power Washer comes with a worry-free 12-month warranty. For any questions or assistance, please contact our 24-hour friendly customer service. Customer satisfaction is our ultimate priority.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DYJV2SNY>

More documents and user manuals: <https://manuals.plus/>