

## Legami BKL0003

# Legami Front Bike Light with Bell (Model BKL0003)

## Instruction Manual

### 1. INTRODUCTION

Thank you for choosing the Legami Front Bike Light with Bell. This device is designed to enhance your cycling safety and experience with its bright light, audible bell, and durable, waterproof design. This manual provides essential information for the proper setup, operation, and maintenance of your bike light. Please read it thoroughly before use.

### 2. PRODUCT OVERVIEW

The Legami Front Bike Light with Bell features a distinctive tiger motif and is equipped with multiple functionalities for cyclists.

- **Integrated Light and Bell:** Combines a powerful front light with a clear, audible bell.
- **Multiple Light Modes:** Offers 3 distinct light modes for varying visibility needs.
- **Multiple Sound Modes:** Provides 5 different bell sounds for effective warning.
- **Rechargeable Battery:** Built-in battery rechargeable via Type-C cable.
- **Waterproof Design:** Resistant to dust and water splashes, suitable for various weather conditions.
- **Adjustable Strap:** Ensures compatibility with various handlebar sizes.



*Image 2.1: Front view of the Legami Bike Light with the light illuminated.*

### 3. WHAT'S IN THE BOX

---

Please check the package contents upon unboxing:

- 1 x Legami Front Bike Light with Bell (Model BKL0003)
- 1 x Type-C Charging Cable



*Image 3.1: Packaging of the Legami Front Bike Light with Bell, showing product features.*

## **4. SETUP**

### **4.1 Initial Charging**

1. Before first use, fully charge the device. Locate the Type-C charging port, usually covered by a silicone flap for water resistance.
2. Connect the provided Type-C cable to the bike light and plug the other end into a standard USB power adapter (not included) or a computer USB port.
3. The charging indicator light will show the charging status (e.g., red for charging, green for fully charged).
4. Once fully charged, disconnect the cable and ensure the silicone flap is securely closed to maintain water resistance.

### **4.2 Mounting on Handlebar**

1. Identify a suitable position on your bicycle handlebar, ensuring the light beam is unobstructed and the bell button is easily accessible.

2. Wrap the adjustable silicone strap around the handlebar.
3. Hook the strap securely onto the designated latch on the light unit. Ensure the light is firmly attached and does not wobble.
4. Adjust the angle of the light to illuminate the path ahead without blinding oncoming traffic.





*Image 4.1: The Legami Bike Light securely mounted on a bicycle handlebar.*

## 5. OPERATING INSTRUCTIONS

---



*Image 5.1: Top view of the bike light, highlighting the power button (top) and bell button (bottom).*

### 5.1 Power On/Off

- To turn the light **ON**, press and hold the power button (located on the top of the unit, marked with a power symbol) for approximately 2 seconds.
- To turn the light **OFF**, press and hold the power button again for approximately 2 seconds.

### 5.2 Light Modes

Once the light is on, short press the power button to cycle through the 3 available light modes:



- 1. **Mode 1:** Steady Bright Light
- 2. **Mode 2:** Low Beam Light
- 3. **Mode 3:** Flashing Light

### 5.3 Bell Operation and Sound Modes

- To sound the bell, short press the bell button (located on the top of the unit, marked with a bell symbol).
- To change the bell sound, press and hold the bell button for approximately 2 seconds. The bell will cycle through its 5 distinct sound modes. Release the button when you hear your desired sound. The selected sound will be saved for future use.

## 6. CHARGING

The Legami Front Bike Light is equipped with a rechargeable battery. Follow these steps to charge your device:

- 1. Locate the Type-C charging port on the device. It is typically covered by a protective silicone flap.
- 2. Gently open the silicone flap to expose the charging port.
- 3. Insert the Type-C end of the provided charging cable into the device's port.
- 4. Connect the USB-A end of the charging cable to a compatible USB power source (e.g., wall adapter, power bank, computer USB port).
- 5. A charging indicator light will illuminate (e.g., red) to confirm that the device is charging.
- 6. Once fully charged, the indicator light will change color (e.g., green) or turn off.
- 7. Disconnect the charging cable and securely close the silicone flap to ensure the device remains waterproof.

**Note:** Do not use damaged charging cables or adapters. Ensure the charging port is dry before charging to prevent damage.

## 7. MAINTENANCE

- **Cleaning:** Wipe the device with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the bike light in a cool, dry place when not in use. Avoid extreme temperatures.
- **Water Resistance:** The device is resistant to dust and water splashes. Do not submerge it in water. Ensure the charging port cover is always securely closed when not charging.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

## 8. TROUBLESHOOTING

| Problem                 | Possible Cause       | Solution                 |
|-------------------------|----------------------|--------------------------|
| Light does not turn on. | Battery is depleted. | Charge the device fully. |
| Light is dim.           | Low battery.         | Recharge the device.     |

| Problem              | Possible Cause                                    | Solution                                                            |
|----------------------|---------------------------------------------------|---------------------------------------------------------------------|
| Bell does not sound. | Bell button not pressed correctly or battery low. | Ensure a firm press. Recharge if necessary.                         |
| Device not charging. | Cable or adapter fault; port obstruction.         | Try a different Type-C cable or USB adapter. Check port for debris. |

If you encounter issues not listed here, please contact Legami customer support.

## 9. SPECIFICATIONS

| Feature                | Detail                                          |
|------------------------|-------------------------------------------------|
| Model Number           | BKL0003                                         |
| Brand                  | Legami                                          |
| Material               | Acrylonitrile Butadiene Styrene (ABS), Silicone |
| Power Source           | Battery Powered (Rechargeable)                  |
| Charging Port          | Type-C                                          |
| Light Modes            | 3                                               |
| Sound Modes            | 5                                               |
| Water Resistance Level | Waterproof (Splash Resistant)                   |
| Mounting Type          | Handlebar Mount (Adjustable Strap)              |
| Item Weight            | 0.08 Kilograms                                  |

## 10. SAFETY INFORMATION

- Always ensure the light is securely mounted before riding.
- Do not look directly into the light beam to avoid temporary vision impairment.
- Keep the device away from children.
- Do not attempt to disassemble or modify the device. This will void the warranty and may cause damage or injury.
- Dispose of the product and its battery responsibly according to local regulations.
- Ensure the charging port cover is sealed when not charging to maintain water resistance.

## 11. WARRANTY AND SUPPORT

Legami products are designed with quality and durability in mind. For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official Legami website. Please have your model number (BKL0003) and proof of purchase ready when contacting support.

