



Manuals.plus /

› Dekala /

› Dekala ChronoSense Alarm Clock User Manual

Dekala SR01

Dekala ChronoSense Alarm Clock User Manual

Model: SR01
Brand: Dekala

1. INTRODUCTION AND OVERVIEW

The Dekala ChronoSense Alarm Clock is a versatile device designed to enhance your daily routine with its advanced features and user-friendly interface. It combines the functionality of an alarm clock with environmental monitoring and customizable display options, providing a comprehensive solution for your bedroom or office.

Key functionalities include a 2.8" IPS full-color screen with auto-dimming, programmable alarms, a selection of sleep sounds, and real-time temperature and humidity readings.

2. KEY FEATURES

- **Artistic Smart Display:** 2.8" IPS full-color screen with auto-dimming, displaying vivid clock themes and calming sleep animations.
- **Programmable Alarms:** Four customizable alarms for weekdays, weekends, or 7-day programming. Features distinct tones and adjustable volume up to 98dB with gradual increase.
- **Sleep Sounds & Visual Scenes:** 10 calming sleep sounds (e.g., White Noise, nature ambiences) and animated visual scenes to aid sleep.
- **Environmental Monitoring:** Built-in $\pm 0.2^{\circ}\text{C}$ precision thermometer and hygrometer to monitor room temperature and humidity.
- **Hourly Chime:** Option for gentle hourly reminders.
- **Effortless Setup:** Intuitive 3-button control for easy setup and navigation.
- **Setting Saving:** Retains settings during power outages (requires AC power for operation).

ALL-IN-ONE

Everything You Need, In One Clock



Color Display



Loud 98dB Alarms



Relaxing Sleep Aid



Fun Custom Themes



Climate Monitor



Hourly Chime



Effortless Setup



Adaptive Brightness

Figure 2.1: Overview of the Dekala ChronoSense Alarm Clock's comprehensive features.

More Than a Clock—It's Visual Art

Vivid IPS Display with 6 Fun, Customizable Themes



Figure 2.2: The clock's vivid IPS display with multiple customizable themes.

3. SETUP

The Dekala ChronoSense Alarm Clock is designed for easy setup with its intuitive 3-button control system. No extensive manual reading is typically required for basic functions.

3.1 Power Connection

The device requires AC power to operate. Connect the supplied USB cable to the clock and plug the wall adapter into a standard electrical outlet. The clock will power on automatically.

3.2 Initial Configuration

Upon first power-up, the clock will guide you through initial settings:

1. **Language Selection:** Choose your preferred language (e.g., English).
2. **Volume Adjustment:** Gently turn the knob to set your desired volume level.
3. **Region and Time Zone:** Select your region and time zone to ensure accurate timekeeping.
4. **Set Time:** Manually set the current time.

5. **Home Screen Style:** Choose your preferred home screen display style.



Figure 3.1: The intuitive 3-button control for effortless setup.

4. OPERATING INSTRUCTIONS

4.1 Setting Alarms

The clock supports up to four customized alarms. You can program them for specific days (weekdays, weekends, or 7-day programmable) and choose from various tones and animations.

- Navigate to the Alarm settings using the control buttons.
- Select an alarm slot (Alarm 1-4).
- Set the desired alarm time.
- Choose the days of the week for the alarm to be active.
- Select an alarm tone from the available options. The volume will gradually increase to 98dB for heavy sleepers.
- Choose an alarm animation for visual cues.



Figure 4.1: Customize your wake-up experience with various alarm settings.

4.2 Sleep Aid and White Noise

To assist with falling asleep, the clock offers 10 calming sleep sounds and visual scenes.

- Access the Sleep Aid settings.
- Select from sounds like White Noise, nature ambiences, or gentle melodies.
- Choose a visual scene to accompany the sound.
- The screen will auto-dim to a night-friendly brightness.

Drift Off Peacefully

Gentle sounds and calming visuals-
all with one tap.

 **Sleep Sounds**

 **Visual Scenes**

 **Sleep Timer**



Figure 4.2: Utilize sleep sounds and visual scenes for a peaceful night.

4.3 Display Themes and Hourly Chime

Personalize your clock's appearance with various dynamic animated themes (e.g., Ninja, Spaceman, Knight). You can also enable an hourly chime for gentle reminders throughout the day.

Gentle Hourly Reminders, Tailored to Your Rhythm.

Pleasant bird chirps or classic chimes every hour-never intrusive.



Figure 4.3: The clock can provide gentle hourly reminders.

4.4 Temperature and Humidity Display

The clock continuously monitors and displays the room's temperature and humidity, helping you optimize your environment for comfort.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Dekala ChronoSense Alarm Clock, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the screen and body of the clock. Avoid abrasive cleaners or solvents that could damage the finish or display.
- **Placement:** Place the clock on a stable, flat surface away from direct sunlight, excessive heat, or moisture.
- **Power:** Always use the original USB cable and wall adapter provided with the device.

6. TROUBLESHOOTING

If you encounter any issues with your Dekala ChronoSense Alarm Clock, please refer to the following common troubleshooting steps:

- **No Power/Display:** Ensure the USB cable is securely connected to both the clock and the power adapter, and that the adapter is plugged into a working electrical outlet.
- **Alarm Not Sounding:** Check that the alarm is enabled in the settings and that the volume is not set to zero. Verify the alarm time and days are correctly programmed.
- **Incorrect Time/Date:** Re-enter the time, date, and time zone settings through the clock's menu.
- **Screen Unresponsive:** Unplug the device from power for 30 seconds, then plug it back in to perform a soft reset.

For persistent issues not resolved by these steps, please contact Dekala customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Dekala
Model Number	SR01
Color	Silver
Display Type	Digital (2.8" IPS Full-Color Screen)
Product Dimensions	4.5"W x 4.5"H
Item Weight	10.9 ounces
Power Source	Corded Electric
Special Features	Temperature Humidity Display, 4 Loud Alarms, Auto Dimmable, Calendar, Hourly Chime, Dynamic Animated Display, Adjustable Volume, Snooze Function
Batteries	1 C battery required (included, non-replaceable)

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Dekala Store online. The manufacturer is Dekala.

You can visit the Dekala Store at <https://www.amazon.com/stores/Dekala/page/9825D8C4-321E-45C5-8BC7-FC33BEF604F6>