

- Manuals.plus /
- > [Ikea](#) /
 - > Console, Light Brown-White, 157x88 cm User Manual

Ikea Console, Light Brown-White, 157x88 cm

Ikea Console User Manual

Model: Light Brown-White, 157x88 cm

1. INTRODUCTION

This manual provides essential information for the assembly, operation, maintenance, and troubleshooting of your new Ikea Console. Please read these instructions carefully before beginning assembly or use to ensure safe and proper functionality.



Figure 1.1: Front view of the Ikea Console, showcasing its light brown top and white body with two cabinet doors and three central drawers.



Figure 1.2: The Ikea Console integrated into a room setting, demonstrating its aesthetic appeal and functional presence.

2. SETUP AND ASSEMBLY

The Ikea Console requires assembly. Follow the included step-by-step instructions provided in the packaging. Ensure all components are present before starting. It is recommended to assemble the console on a soft, clean surface to prevent scratches.

2.1 Tools Required

- Screwdriver (Phillips head and/or flathead, depending on hardware)
- Hammer (for dowels, if applicable)
- Measuring tape (for placement)

- Level (to ensure stability)

2.2 Assembly Steps

1. Unpack all components and verify against the parts list.
2. Attach the side panels to the base and top panels using the provided hardware.
3. Install the drawer slides and assemble the drawers. Insert drawers into their designated slots.
4. Attach the door hinges to the cabinet doors and then to the console frame. Adjust hinges for proper door alignment.
5. Secure the back panel to the console frame.
6. Attach the legs or feet to the bottom of the console.
7. Place the console in its desired location and ensure it is level and stable.

Important: For safety, it is highly recommended to secure the console to a wall using the anti-tip hardware provided, especially if children are present in the household. This prevents accidental tipping.

3. OPERATING INSTRUCTIONS

The Ikea Console is designed for storage and display. Its two cabinet doors and three central drawers provide versatile storage options.



Figure 3.1: Interior view of the console, illustrating the shelving behind the cabinet doors suitable for various items.

3.1 Using Doors and Drawers

- **Doors:** Gently pull the knob to open the cabinet doors. Push firmly to close until the magnetic catch engages.
- **Drawers:** Pull the knob to open the drawers. Push gently to close until fully seated. Avoid forcing drawers open or closed.

3.2 Weight Capacity

Distribute weight evenly across shelves and within drawers. Avoid placing excessively heavy items on the console top or shelves to prevent damage or instability. While specific weight limits are not provided, typical console usage suggests light to medium loads for decorative items, books, or dinnerware.

4. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your Ikea Console.

4.1 Cleaning

- Wipe clean with a damp cloth and a mild cleaner.
- Dry immediately with a clean cloth.
- Avoid abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.

4.2 General Care

- Periodically check and tighten all assembly fittings to ensure stability.
- Protect surfaces from direct sunlight and excessive heat to prevent fading or warping.
- Use coasters or protective pads under hot or wet items placed on the console top.

5. TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
Console is wobbly or unstable.	Loose fittings; uneven floor.	Tighten all screws and bolts. Use shims under legs if the floor is uneven. Ensure anti-tip hardware is properly installed.
Drawers do not slide smoothly.	Misaligned drawer slides; debris in tracks; overloaded drawer.	Check drawer slide alignment and adjust if necessary. Clean tracks. Reduce drawer contents.
Cabinet doors do not close properly.	Misaligned hinges; loose hinge screws.	Adjust hinge screws to align doors. Tighten all hinge screws.
Scratches or minor damage to finish.	Impact or abrasion.	For minor scratches, use a furniture repair pen or touch-up paint matching the finish.

If you encounter issues not listed here or require further assistance, please contact Ikea customer support.

6. SPECIFICATIONS

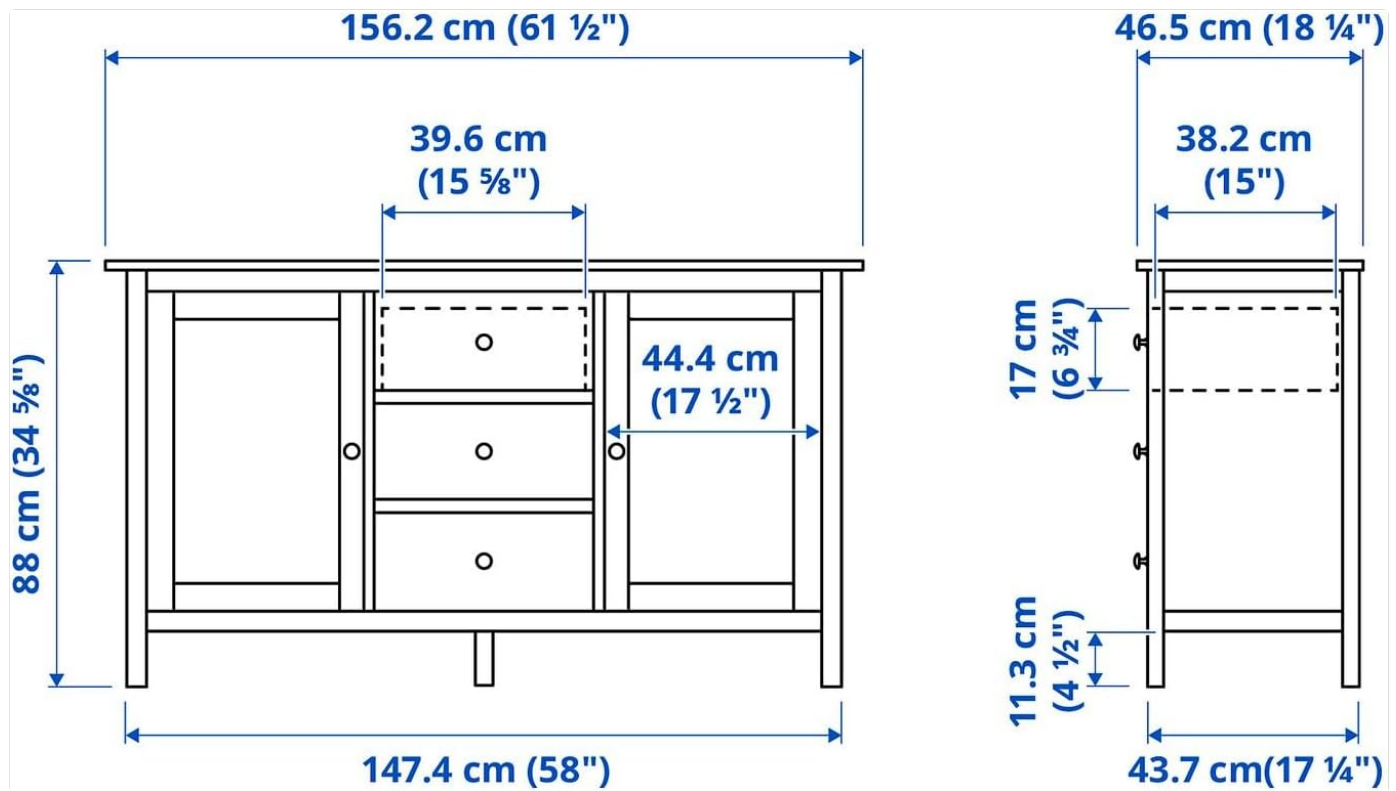


Figure 6.1: Detailed dimensions of the Ikea Console.

Product Specifications

Attribute	Detail
Brand	Ikea
Model Name	Console, Light Brown-White
Overall Dimensions (Approx.)	Width: 156.2 cm (61 1/2") Height: 88 cm (34 5/8") Depth: 46.5 cm (18 1/4")
Drawer Dimensions (Approx.)	Width: 39.6 cm (15 5/8") Height: 17 cm (6 3/4") Depth: 38.2 cm (15")
Included Components	Console frame, doors, drawers, hardware, assembly instructions.
Size	Standard
Product Weight (as per source data)	500 Grams <i>(Note: This weight may refer to a specific component or be a data entry error, as a full console typically weighs significantly more.)</i>

7. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or customer support, please refer to the purchase documentation or visit the official Ikea website. Keep your proof of purchase for any warranty claims.

For specific inquiries or to report missing parts, please contact Ikea customer service directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DYJYKYGF>

More documents and user manuals: <https://manuals.plus/>