

[Manuals.plus](#) /

> [YEEHAO](#) /

> YEEHAO Kids Camera User Manual

## YEEHAO DHC-A-DC501L-0Pink

# YEEHAO Kids Camera User Manual

Model: DHC-A-DC501L-0Pink

## INTRODUCTION

---

This user manual provides essential information for the safe and effective operation of your YEEHAO Kids Camera. Designed for young users, this camera offers a fun and creative way to explore photography and videography.

The YEEHAO Kids Camera features an upgraded intuitive interface, dual lenses for selfies and 1080P video recording, and comes with a pre-installed 32GB TF card. Its durable, shockproof design with a soft silicone case and safety lanyard ensures it can withstand typical child's play.

## WHAT'S IN THE BOX

---

- 1 x Kids Camera
- 1 x Protective Case
- 1 x 32GB TF Card
- 1 x USB Charge Cable
- 1 x Lanyard
- 1 x User Manual

## SETUP

---

### Charging the Camera

Before first use, fully charge the camera's built-in rechargeable battery.

- Connect the included USB charge cable to the camera's charging port.
- Connect the other end of the USB cable to a compatible USB power source (e.g., computer USB port, wall charger, power bank).
- The charging indicator light will illuminate. Once fully charged, the light may change color or turn off.

# Rechargeable Battery & USB Transfer



Upload Photo to  
Computer



Wall charger



Power Bank



Image: The YEEHAO Kids Camera can be charged via the included USB cable using a computer, power bank, or wall charger.

## Inserting the TF Card

The camera comes with a 32GB TF card pre-installed. If you need to re-insert or replace it:

- Locate the TF card slot on the camera.
- Gently push the TF card into the slot until it clicks into place. Ensure the correct orientation.

## Attaching the Lanyard

Attach the safety breakaway lanyard to the designated loops on the camera to prevent accidental drops and for easy carrying.

## OPERATING INSTRUCTIONS

### Power On/Off

- To power on, press and hold the power button (usually marked with a power symbol) until the screen illuminates.

- To power off, press and hold the power button again until the screen turns off.

## Basic Functions

The camera features an intuitive interface with easy-to-use buttons.

- **Navigation Buttons:** Use the directional buttons (up, down, left, right) to navigate through menus and options.
- **OK/Shutter Button:** Press the OK button to confirm selections or to take a photo/start recording a video.
- **Mode Button:** Press the mode button to switch between different functions such as photo mode, video mode, playback, music, and games.



Image: Front view of the YEEHAO Kids Camera, highlighting its compact and child-friendly design.

## Taking Photos

- Switch to photo mode using the mode button.
- Frame your shot using the screen.

- Press the shutter/OK button to capture the photo.



Image: Rear view of the YEEHAO Kids Camera, displaying the screen and button layout for easy navigation.

## Recording Videos

- Switch to video mode using the mode button.
- Press the shutter/OK button to start recording.
- Press the shutter/OK button again to stop recording.



Image: The camera's 1080P HD video recording feature, suitable for capturing clear moments.

### Selfie Function

The camera is equipped with dual lenses, allowing for easy selfies.

- In photo or video mode, use the designated button (refer to on-screen prompts or manual for specific button) to switch between front and rear cameras.

### Photo Frames and Filters

Enhance creativity with multiple funny photo frames and filters.

- In photo mode, navigate through the options to select different frames or filters before taking a picture.

# Multiple Funny Frames & Filters



Image: Examples of the multiple funny frames and filters available on the YEEHAO Kids Camera to add creative effects to photos.

## Playback

- Switch to playback mode to view captured photos and videos.
- Use the navigation buttons to scroll through your media.

## Built-in Games

The camera includes five built-in games for entertainment.

- Navigate to the games section using the mode button.
- Select a game using the navigation and OK buttons.

## Music Playback

Enjoy your favorite songs on the go.

- Transfer music files to the TF card (ensure compatible format).

- Navigate to the music playback section to select and play songs.

## MAINTENANCE

---

### Cleaning

- Use a soft, dry cloth to clean the camera body and screen.
- Do not use liquid cleaners or abrasive materials.

### Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- Ensure the camera is powered off before storing.

### Battery Care

- Charge the battery regularly, even if not in use, to maintain battery health.
- Avoid fully discharging the battery frequently.

## TROUBLESHOOTING

---

### Camera Not Turning On

- Check if the battery is charged. Connect the camera to a power source and allow it to charge for at least 30 minutes before attempting to power on again.
- Ensure the power button is pressed and held sufficiently.

### Cannot Take Photos/Record Videos

- Check if the TF card is properly inserted.
- Verify that there is sufficient space on the TF card. Delete unnecessary files if needed.
- Ensure the camera is in the correct mode (photo or video).

### Screen Freezing

The YEEHAO Kids Camera features an upgraded intuitive interface designed to minimize freezing issues. If a freeze occurs, try restarting the camera by holding the power button until it turns off, then power it back on.

### Connecting to Computer

- Use the provided USB cable to connect the camera to your computer.
- The camera should appear as a removable disk drive. If not, try a different USB port or restart both the camera and computer.

## SPECIFICATIONS

---

Feature	Detail
Model Name	DHC-A-DC501L-0Pink
Brand	YEEHAO
Maximum Webcam Image Resolution	32 MP

Optical Zoom	0.1
Image Stabilization	Digital
Supported File Format	AVI
Photo Sensor Technology	CMOS
Aspect Ratio	4:3
Item Weight	6.4 ounces
Package Dimensions	4.92 x 3.58 x 3.23 inches
Batteries	1 9V batteries required. (included)
Date First Available	March 24, 2025

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation included with your product or visit the official YEEHAO website.

You can also contact the seller directly through the Amazon platform for assistance.

Seller: [YEEHAO](#)