

- [Manuals.plus](#) /
- › [Peanuts](#) /
 - › Peanuts PNPJCLK01-MFN Ambient Light Projection Alarm Clock User Manual

Peanuts PNPJCLK01-MFN

**Peanuts PNPJCLK01-MFN Ambient Light Projection Alarm
Clock User Manual**

Model: PNPJCLK01-MFN

1. PRODUCT OVERVIEW

The Peanuts Ambient Light Projection Alarm Clock (Model: PNPJCLK01-MFN) is a USB-powered device designed to display time and project a soft, ambient light featuring Snoopy. It includes a multi-alarm function to assist with daily scheduling.



Figure 1: Front view of the Peanuts Ambient Light Projection Alarm Clock, showing the digital time display and the projected Snoopy image.

Key Features:

- **Digital Time Display:** Clear LED display for current time.
- **Ambient Projection Light:** Projects Snoopy images onto a surface.
- **Multi-Alarm Function:** Allows setting multiple alarms.
- **USB-Powered:** Operates via a standard USB power source.
- **Compact Design:** Suitable for various spaces like bedrooms or study rooms.

2. SETUP INSTRUCTIONS

2.1 Unpacking

Carefully remove the alarm clock and all accessories from the packaging. Ensure all components are present:

- Peanuts Ambient Light Projection Alarm Clock
- USB Power Cable

- User Manual (this document)

2.2 Power Connection

1. Locate the USB power port on the back of the alarm clock.
2. Insert the small end of the provided USB power cable into the clock's USB port.
3. Plug the larger end of the USB power cable into a compatible USB power adapter (not included) or a powered USB port.
4. The clock display will illuminate, indicating power is connected.

Note: This device is USB-powered and does not use batteries for operation or power backup. In case of a power outage, the time and alarm settings will need to be reset.

3. OPERATING INSTRUCTIONS

3.1 Setting the Time

1. Press and hold the **SET** button (location may vary, typically on the back or bottom) until the hour digits begin to flash.
2. Use the **UP** and **DOWN** buttons (or similar labeled buttons) to adjust the hour.
3. Press **SET** again to move to the minute digits.
4. Use the **UP** and **DOWN** buttons to adjust the minutes.
5. Press **SET** one more time to confirm the time and exit setting mode.

3.2 Setting Alarms

The clock supports multiple alarms. Refer to the specific button labels on your device for "Alarm 1", "Alarm 2", etc.

1. Press the **ALARM** button (or **ALARM 1**) once to display the current alarm time.
2. Press and hold the **ALARM** button until the alarm hour digits flash.
3. Use the **UP** and **DOWN** buttons to set the desired alarm hour.
4. Press **ALARM** again to move to the alarm minute digits.
5. Use the **UP** and **DOWN** buttons to set the desired alarm minutes.
6. Press **ALARM** one more time to confirm and activate the alarm. An alarm icon should appear on the display.
7. To set additional alarms, repeat the process using the corresponding alarm buttons if available.
8. To deactivate an alarm, press the **ALARM** button repeatedly until the alarm icon disappears.

3.3 Using the Projection Light

The projection light can be activated to display Snoopy images on a ceiling or wall.

1. Press the **PROJECTION** button (or similar, e.g., **LIGHT**) to turn the projection on or off.
2. Adjust the angle of the projector lens (if adjustable) to optimize the image clarity and position on your desired surface.
3. For best visibility, ensure the room is dark.



Figure 2: The alarm clock projecting a Snoopy image onto a wall in a dimly lit room.

3.4 Snooze Function

When an alarm sounds:

- Press the **SNOOZE** button (usually a large button on top) to temporarily silence the alarm. The alarm will sound again after a few minutes (default snooze time).
- To turn off the alarm completely, press any other button on the clock.

4. MAINTENANCE

4.1 Cleaning

- Ensure the device is unplugged from the power source before cleaning.
- Wipe the exterior of the clock with a soft, dry, or slightly damp cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the surface.
- Avoid getting moisture into any openings.

4.2 Storage

When not in use for extended periods, store the clock in a cool, dry place, away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is off.	No power or loose connection.	Ensure the USB cable is securely plugged into both the clock and a powered USB adapter/port. Check if the power outlet is functional.
Projection image is dim or unclear.	Room is too bright; incorrect projection distance/angle.	Use the projection feature in a darker room. Adjust the clock's position or the projector lens angle for optimal clarity.
Alarm does not sound.	Alarm not set or deactivated; power interruption.	Verify that the alarm is set and the alarm icon is visible on the display. If power was interrupted, reset the time and alarm.
Time needs frequent resetting.	Frequent power interruptions.	This clock does not have battery backup. Time will need to be reset after any power loss. Consider connecting to a more stable power source if possible.

6. SPECIFICATIONS

Feature	Detail
Brand	Peanuts
Model Number	PNPROJCLK01-MFN
Display Type	Digital
Power Source	Corded Electric (USB)
Product Dimensions	4"W x 3.5"H
Material Type	Plastic
Alarm Clock Function	Yes
Special Feature	Projection Clock

Feature	Detail
Batteries Included	No

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the manufacturer, Southern Telecom, directly. Keep your proof of purchase for warranty claims.
Manufacturer: Southern Telecom

© 2024 Peanuts Worldwide LLC. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question