

Nikon P1100

Nikon COOLPIX P1100 Digital Camera Instruction Manual

Model: P1100

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Nikon COOLPIX P1100 Digital Camera. Please read it thoroughly before using the camera and keep it handy for future reference. The Nikon COOLPIX P1100 is a compact digital camera featuring an extraordinary 125x optical zoom, a 16MP backside-illuminated CMOS sensor, and 4K UHD video recording capabilities. It is designed for capturing distant subjects with remarkable detail, making it suitable for wildlife, sports, and landscape photography.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Nikon COOLPIX P1100 Digital Camera
- Nikon EN-EL20a Rechargeable Battery (7.2V 1110mAh)
- Nikon UC-E24 USB Cable
- Nikon AN-DC3 Camera Strap (Black)
- Nikon 77mm Snap-On Lens Cap
- Nikon HB-CP1 Lens Hood
- Photography Software
- 2 x 64GB Extreme PRO UHS-I SDXC Memory Card
- 3 Piece 77mm Filter Kit
- Padded Camera Bag
- 2 x Nikon EN-EL20 Replacement Battery
- External Charger

- Flexible Tripod
- Deluxe Cleaning Kit
- HDMI Micro Cable
- Camera Hand Strap
- Memory Card Wallet
- Memory Card Reader
- Cap Keeper

3. SETUP

3.1. Charging the Battery

1. Insert the Nikon EN-EL20a rechargeable battery into the external charger.
2. Connect the external charger to a power outlet. The charging indicator will illuminate.
3. Once charging is complete, the indicator will change or turn off (refer to charger instructions for specific behavior).
4. Remove the charged battery from the charger.

3.2. Inserting the Battery and Memory Card

1. Open the battery/memory card cover on the bottom of the camera.
2. Insert the charged battery into the battery compartment, ensuring correct orientation.
3. Insert the 64GB Extreme PRO UHS-I SDXC Memory Card into the memory card slot until it clicks into place.
4. Close the battery/memory card cover securely.



Figure 3.2.1: Bottom view of the Nikon COOLPIX P1100, illustrating the battery and memory card compartment, along with the tripod mount.

3.3. Attaching the Lens Hood and Lens Cap

1. Align the Nikon HB-CP1 Lens Hood with the front of the lens and twist gently until it locks into place.
2. Attach the Nikon 77mm Snap-On Lens Cap to protect the lens when not in use.

4. OPERATING THE CAMERA

4.1. Powering On/Off

Press the **ON/OFF** button located on the top of the camera to power it on or off.



Figure 4.1.1: Top view of the Nikon COOLPIX P1100, highlighting the mode dial and the ON/OFF button.

4.2. Basic Photography

1. **Select a Shooting Mode:** Rotate the mode dial to choose from various shooting modes such as Automatic, Program, Shutter-priority, Aperture-priority, Manual, Scene, and more.
2. **Frame Your Shot:** Use either the 3.2-inch vari-angle LCD screen or the 2.36M-dot electronic viewfinder to compose your image. The vari-angle LCD allows for flexible shooting angles.

3. **Zoom:** Use the zoom control lever around the shutter button to adjust the optical zoom (24-3000mm equivalent). For extended reach, Dynamic Fine digital zoom can extend up to 6000mm.
4. **Focus:** The camera features autofocus with Optical Image Stabilization (Dual Detect Optical Vibration Reduction) to minimize shake.
5. **Capture:** Press the shutter button fully to take a picture.



Figure 4.2.1: Rear view of the Nikon COOLPIX P1100, displaying the vari-angle LCD screen and various control buttons for navigation and settings.

4.3. Video Recording

The P1100 supports 4K UHD video recording at 30fps. To record video:

1. Select a video mode or press the dedicated movie-record button.
2. Frame your subject and adjust zoom as needed.
3. Press the movie-record button to start and stop recording.

4.4. Connectivity (Wi-Fi and Bluetooth)

The camera features built-in Wi-Fi and Bluetooth for seamless sharing and remote control. Refer to the camera's on-screen menu for pairing instructions with your smart device using the Nikon SnapBridge app.

5. MAINTENANCE

5.1. Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens, use a lens brush to remove dust, then gently wipe with a lens cleaning cloth and lens cleaning solution. Avoid touching the lens surface with your fingers.
- Clean the LCD screen with a soft, dry cloth.

5.2. Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging the battery frequently to prolong its lifespan.
- Charge batteries using only the provided or approved chargers.

5.3. Storage

When storing the camera for extended periods, remove the battery and memory card. Store the camera in a dry, well-ventilated area, preferably in a camera bag to protect it from dust and moisture.

6. TROUBLESHOOTING

6.1. Camera Does Not Turn On

- Ensure the battery is fully charged and correctly inserted.
- Check if the battery terminals are clean.

6.2. Images Are Blurry

- Check focus settings (autofocus or manual focus).
- Ensure Dual Detect Optical Vibration Reduction is active, especially at high zoom levels.
- Use a tripod or stable surface for very high zoom shots.

6.3. Memory Card Error

- Ensure the memory card is inserted correctly.
- Try formatting the memory card (note: this will erase all data).
- Test with a different, compatible memory card.

7. SPECIFICATIONS

Feature	Specification
Model Number	26541_EDIG_3
Photo Sensor Resolution	16 MP
Photo Sensor Technology	BSI CMOS
Optical Zoom	125x

Maximum Focal Length	3000 Millimeters
Minimum Focal Length	24 Millimeters
Image Stabilization	Optical (Dual Detect Optical Vibration Reduction)
Video Resolution	2160p (4K UHD at 30fps)
ISO Range	100-6400
Screen Size	3.2 Inches (Vari-angle LCD)
Viewfinder	Electronic (2.36M-dot)
Wireless Technology	Bluetooth, Wi-Fi
Supported File Format	RAW, MP4
Item Weight	2 Pounds

8. WARRANTY AND SUPPORT





For warranty information, technical support, and service inquiries, please refer to the official Nikon website or contact Nikon customer service directly. Keep your proof of purchase for warranty claims.

Official Nikon Website: www.nikonusa.com

© 2025 Nikon. All rights reserved.

Related Documents - P1100

<p>Nikon</p> <p>APPAREIL PHOTO NUMÉRIQUE COOLPIX P1100</p> <p>Guide de référence</p> <div data-bbox="135 1744 288 1798"> <ul style="list-style-type: none"> • Cliquez sur document pour télécharger ou ouvrir d'autres appareils photo. • Pour afficher comment utiliser l'appareil photo, consultez l'onglet « Aide ». • Cliquez sur « Pour votre sécurité » (page 10). • Cliquez sur le lien « Document » en haut de la page pour accéder à l'ensemble des documents. </div>	<p>Guide de référence Nikon COOLPIX P1100</p> <p>Ce guide de référence complet pour l'appareil photo numérique Nikon COOLPIX P1100 détaille l'installation, les modes de prise de vue, la lecture, l'enregistrement vidéo, les fonctions du menu, les accessoires et le dépannage.</p>
<p>Nikon COOLPIX DIGITAL CAMERA</p>	<p>Nikon COOLPIX A900 Digital Camera Specifications</p> <p>Detailed technical specifications for the Nikon COOLPIX A900 compact digital camera, including sensor, lens, display, connectivity, power, and dimensions.</p>

	<p>Nikon COOLPIX P1100 User's Manual and Getting Started Guide</p> <p>Comprehensive user's manual for the Nikon COOLPIX P1100 digital camera, covering setup, basic operations, charging, care, troubleshooting, and warranty information.</p>
	<p>The New Photomicrography: Using Digital Cameras with Microscopes</p> <p>An article by Peter Evennett discussing the principles and practicalities of using digital cameras, specifically Nikon Coolpix models, for photomicrography, including adapter solutions, chromatic correction, and resolution considerations.</p>
	<p>Nikon Transfer 2 Reference Manual - Photo Transfer Software Guide</p> <p>Comprehensive guide to Nikon Transfer 2, version 2.21, a software for efficiently transferring photos from Nikon cameras and memory cards to your computer. Learn about its features, interface, and troubleshooting.</p>
	<p>Nikon COOLPIX 8700 Digital Camera: Features, Specifications, and Overview</p> <p>Explore the Nikon COOLPIX 8700, an 8.0-megapixel digital camera featuring an 8x Zoom-Nikkor ED lens, advanced shooting modes, and robust build. Discover its key features, specifications, and included accessories.</p>