

DESLOC C100

DESLOC C100 Keyless Entry Smart Deadbolt Lock User Manual

Model: C100 | Brand: DESLOC

1. PRODUCT OVERVIEW

The DESLOC C100 is a keyless entry smart deadbolt lock designed for enhanced home security and convenience. It features a keypad for PIN entry, a LockVue display for visual operation, and mechanical key access. The lock is built with durable materials and includes various security and convenience features.





Figure 1: DESLOC C100 Keyless Entry Smart Deadbolt Lock (Silver)

2. SETUP AND INSTALLATION

Installing the DESLOC C100 deadbolt lock is designed to be a straightforward process, typically requiring only a screwdriver. The lock features automatic door swing detection to simplify setup.

2.1 Tools Required

- Phillips head screwdriver

2.2 Installation Steps

1. Remove your existing deadbolt lock from the door.
2. Insert the new deadbolt latch into the door edge and secure it with screws. Ensure the correct orientation as indicated in the instructions.
3. Connect the cable from the exterior keypad unit to the interior unit.

4. Align and attach the exterior keypad unit and the interior unit to the door, ensuring the spindle passes through the deadbolt mechanism.
5. Secure the units with the provided mounting screws.
6. Install 4 AA batteries into the interior unit.

Smart Access for Guests

Create 4 sets of temporary passcodes at once—perfect for friends, sitters, or deliveries.

1. Add Admin
 2. Add User
 3. Del User
 4. Lock Settings
1. Add User FP
 2. Add User PIN
 3. Add Temp PIN
- 4 temp passwords generated, each valid once. Confidential!
- PIN1. 73840276
PIN2. 01284692
PIN3. 74266924
PIN4. 28947601



Figure 2: Quick DIY Installation steps including auto-sensing detection, adhesive installation, accessory labeling, and extended cable connection.

For a visual guide on the installation process, please refer to the official video:

Video 1: How to Install DESLOC C100. This video demonstrates the step-by-step installation of the DESLOC C100 lock.

2.3 Door Compatibility

The DESLOC C100 is designed to fit a variety of door configurations. Please check the following dimensions for compatibility:

- Door Thickness: 1-3/8" to 2" (35 to 50mm)
- Hole Diameter: 2-1/8" (54mm)
- Backset: 2-3/8" or 2-3/4" (60 or 70mm)

Keep Your Code Private

Tap random digits before or after your correct password digits—so no one can guess your code by watching.

45 612347 89
 Correct Password
 Random Digits



Figure 3: Door compatibility diagram showing various measurements and compatible door types (both right and left doors).

3. OPERATING INSTRUCTIONS

The DESLOC C100 offers multiple ways to operate, including PIN codes, mechanical keys, and smart app control.

3.1 Visualized Operation

The LockVue Display provides an intuitive on-device interface for managing users and configuring settings.

Visualized Operation

Manage users, set temporary passcodes, and configure settings effortlessly with an intuitive on-device interface.



0.96" LockVue™
Display



Intuitive
User Management



100
Unique PINs



Figure 4: LockVue Display showing menu options for Add Admin, Add User, Del User, and Lock Settings.

3.2 PIN Code Management

The lock supports up to 100 permanent PIN codes and temporary one-time PINs for guests.



Figure 5: Flexible Passcode Access, illustrating the ability to add up to 100 codes for various users like family, renters, or guests.

3.2.1 Changing Initial PIN

It is recommended to change the initial administrator PIN (default is 123456) immediately after installation for security. The new PIN should be 6-8 digits.

Video 2: Change Initial PIN DESLOC C100. This video guides you through changing the default PIN.

3.2.2 Adding Admin and User PINs

You can add new administrator and regular user PINs through the lock's menu.

Video 3: Add Admin and User PIN DESLOC C100. This video demonstrates how to add new admin and user PINs.

3.2.3 Adding and Deleting Temporary PINs

Generate temporary PINs for visitors that expire after first use. You can also delete these temporary PINs.

Video 4: Add and Delete Temp PIN DESLOC C100. This video shows how to create and remove temporary access codes.

3.2.4 User Information and Deletion

Manage user information and delete existing users as needed.

Video 5: User Information and Delete User DESLOC C100. This video explains how to view and delete user data.

3.3 Auto-Lock and Passage Mode

Configure the lock to automatically secure itself after a set time (5-120 seconds) or enable Passage Mode to keep the door unlocked for easy access.

Easy Visible Setup & Operation

Manage users, set temporary passcodes, and configure settings effortlessly with an intuitive on-device interface—no guesswork, no surprises.



Figure 6: Auto-Lock feature ensures the door locks automatically after a set period (5-120 seconds).

Video 6: Open Direction, Passage Mode and Auto Lock. This video demonstrates how to set door opening direction, enable Passage Mode, and configure Auto Lock.

3.4 Anti-Peeping PIN Protection

Enhance security by entering random digits before or after your correct PIN. The total length of the entered digits must not exceed 16.

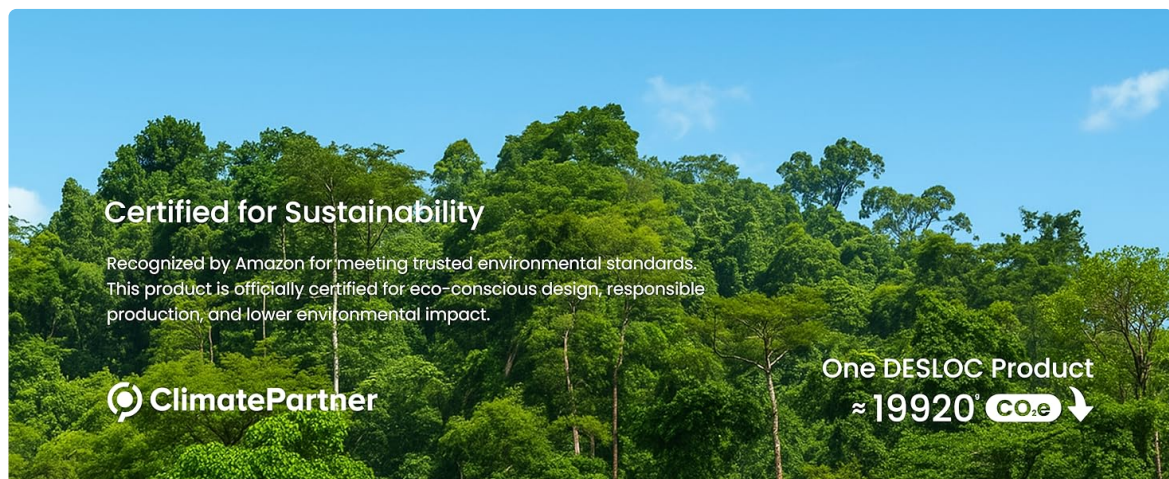


Figure 7: Anti-Peeping feature allows adding random digits before or after your correct password to prevent others from guessing your code.

3.5 Sound Setup

Adjust the sound settings of your lock, including turning sounds on or off.

Video 7: Sound Setup DESLOC C100. This video demonstrates how to configure the sound settings of the lock.

4. MAINTENANCE

4.1 Battery Life and Replacement

The DESLOC C100 is powered by 4 AA batteries, offering up to 12 months of battery life. The lock provides proactive low-battery warnings. When replacing batteries, ensure correct polarity.

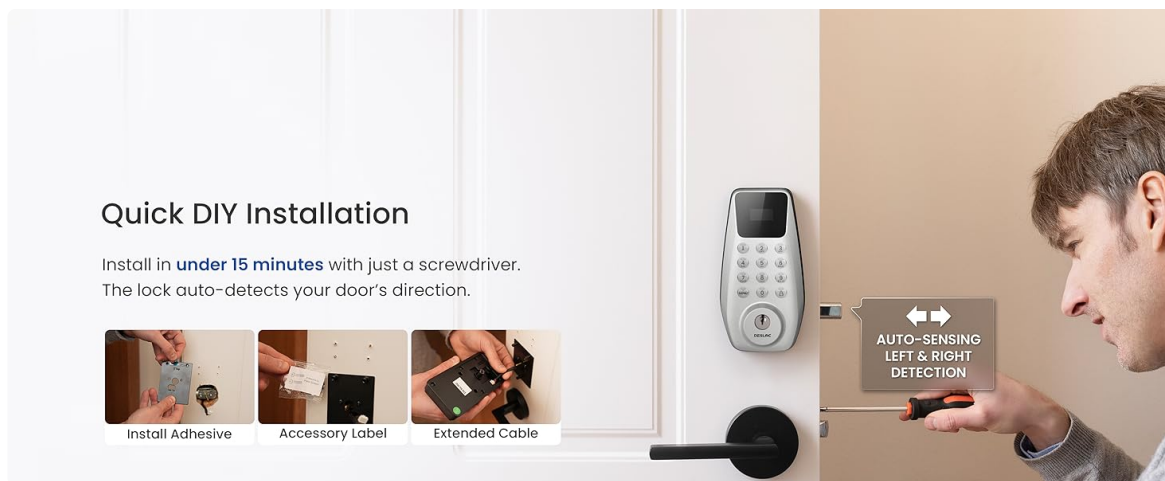


Figure 8: The lock offers up to 12 months of battery life with 4 AA batteries (not included).

4.2 Emergency Power

In case the batteries run out, an emergency Type-C port allows you to use a power bank to temporarily restore power and unlock the door.

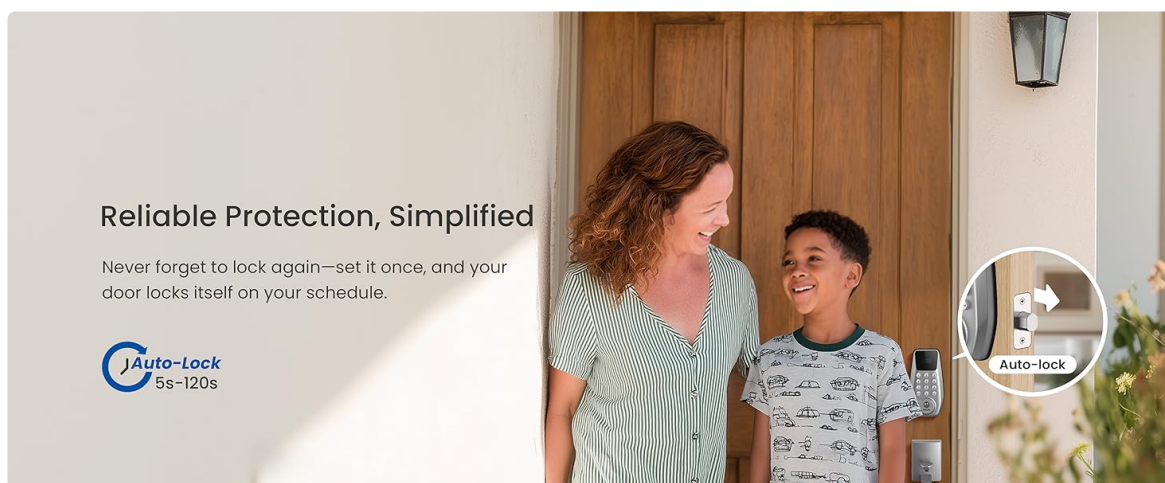


Figure 9: Emergency Type-C port for temporary power when batteries are depleted.

5. TROUBLESHOOTING

5.1 Factory Reset

If you encounter persistent issues or need to clear all user data, you can perform a factory reset. This will restore the lock to its default settings.

Video 8: Factory Reset DESLOC C100. This video demonstrates the steps to perform a factory reset on your lock.

6. SPECIFICATIONS

Feature	Detail
Brand	DESLOC

Model Name	C100 Smart Lock with LockVue
Lock Type	Keypad Deadbolt Door Lock
Material	Aluminum
Special Feature	0.96" LockVue Display, 12-Month Battery Life, Automatic Detection, BHMA Grade 3 Certified, IP54 Waterproof
Item Dimensions L x W x H	8.11 x 5.91 x 3.98 inches
Item Weight	2.11 pounds
Batteries Required	Yes (4 AA batteries)
Control Method	Touch
Included Components	Exterior Lock, Interior lock, Mounting Plate, Strike Plate, Deadbolt, Mechanical Key, Screws

6.1 Durability and Security

Flexible Passcode Access

Add up to 100 Codes—ideal for families, renters, or short-term guests.




Figure 10: BHMA Grade 3 certification ensures professional-level security, including 240h Salt Spray Test, 100,000 Cycle Tests, and 3000N Impact Test.

We Provide Peace of Mind, Always

Comes with 2 backup keys—just in case, you're never locked out.

2 keys included



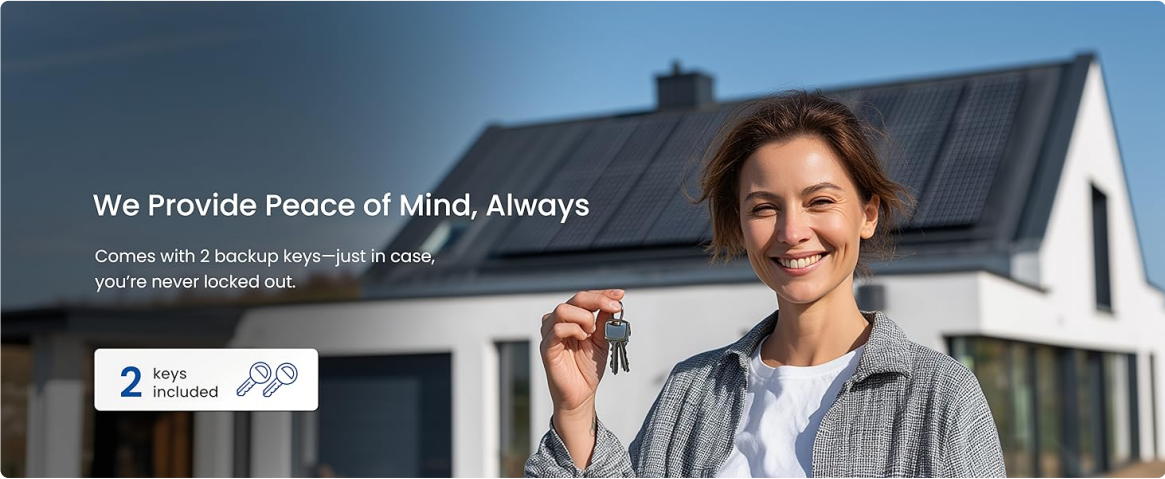 


Figure 11: IP54 weather resistance ensures reliable performance in extreme conditions, with tests for waterproof, dustproof, high heat, low temperature, and salt spray.

7. WARRANTY AND SUPPORT

7.1 Product Warranty

DESLOC backs your purchase with a 1-year warranty from the date of purchase.

7.2 Customer Support



For any assistance, please reach out to DESLOC customer support:





- **Customer Hotline:** Available Monday-Friday, 9am-5pm EST
- **Email Support:** Available 24/7



Figure 12: Dedicated customer service team available for 24/7 assistance.

Related Documents - C100

<div><p>User Manual</p><p>C100 Keypad Digital Deadbolt Manuel de l'utilisateur Manual de l'utilisateur</p><p>DESLOC</p></div>	<p>DESLOC C100 Keypad Digital Deadbolt User Manual</p> <p>User manual for the DESLOC C100 Keypad Digital Deadbolt, providing product introduction, installation instructions, function descriptions, and precautions.</p>
<div><p>Standalone Function Instruction</p><p>C100 Plus Series Keypad Digital Deadbolt with Wi-Fi</p><p>DESLOC</p></div>	<p>DESLOC C100 Plus Series Keypad Digital Deadbolt with Wi-Fi: Standalone Function Instructions</p> <p>This document provides standalone function instructions for the DESLOC C100 Plus Series Keypad Digital Deadbolt with Wi-Fi. It covers quick start guide, changing initial PIN, adding and deleting users, and lock settings.</p>

<p>User Manual C110 Smart Fingerprint Deadbolt Manuel de l'utilisateur Manual de Usuario</p>  <p>DESLOC™</p>	<p>DESLOC C110 Smart Fingerprint Deadbolt User Manual</p> <p>Comprehensive user manual for the DESLOC C110 Smart Fingerprint Deadbolt, covering installation, functions, and precautions. Available in English, French, and Spanish.</p>
<p>Standalone Function Instruction C100 Plus Series Keypad Digital Deadbolt with Wi-Fi</p>  <p>DESLOC™</p>	<p>DESLOC C100 Plus Series Keypad Digital Deadbolt with Wi-Fi: Standalone Function Instruction</p> <p>This document provides standalone function instructions for the DESLOC C100 Plus Series Keypad Digital Deadbolt with Wi-Fi. It covers quick start guide, changing initial PIN, factory reset, adding users and administrators, managing temporary PINs, deleting users, lock settings including passage mode and auto-lock, sound settings, and important cautions.</p>
<p>User Manual C100 Keypad Digital Deadbolt Manuel de l'utilisateur Manual de Usuario</p>  <p>DESLOC™</p>	<p>DESLOC C100 Keypad Digital Deadbolt User Manual and Installation Guide</p> <p>Comprehensive user manual for the DESLOC C100 Keypad Digital Deadbolt, covering product introduction, technical specifications, installation instructions, and function descriptions.</p>
<p>User Manual C100 Plus Series Keypad Digital Deadbolt with Wi-Fi Manuel de l'utilisateur Manual de Usuario</p>  <p>DESLOC™</p>	<p>DESLOC C100 Plus Series Keypad Digital Deadbolt with Wi-Fi User Manual</p> <p>User manual for the DESLOC C100 Plus Series Keypad Digital Deadbolt with Wi-Fi, covering product parts, installation instructions, function descriptions, and warnings.</p>