

[Manuals.plus](#) /

› [BuTure VAC](#) /

› BuTure VAC VC50 Blue Battery User Manual

BuTure VAC VC50 blue

User Manual: Battery for Cordless Vacuum Cleaner

Brand: BuTure VAC | **Model:** VC50 Blue

1. INTRODUCTION

Thank you for choosing the BuTure VAC VC50 Blue replacement battery. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new battery. Please read it thoroughly before first use and keep it for future reference.



This image shows the BuTure VAC VC50 Blue replacement battery. It features a blue casing with a black display panel showing battery

charge indicators and mode buttons. The white connector part is visible on the right.

2. SAFETY INFORMATION

To prevent damage to the battery or injury to yourself or others, please observe the following safety precautions:

- Use only with the specified BuTure VAC VC50 Blue cordless vacuum cleaner.
- Do not disassemble, open, or shred the battery pack.
- Do not expose the battery to heat or fire. Avoid storage in direct sunlight.
- Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.
- Do not subject battery packs to mechanical shock.
- In the event of a battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Keep battery packs clean and dry.
- Do not use any charger other than that specifically provided for use with the equipment.
- Observe the plus (+) and minus (-) marks on the battery and equipment and ensure correct use.
- Dispose of the battery properly according to local regulations. Do not dispose of with household waste.

3. SETUP AND INSTALLATION

Follow these steps to install and prepare your new battery:

1. **Unpack:** Carefully remove the battery from its packaging. Inspect for any visible damage.
2. **Initial Charge:** Before first use, fully charge the battery. Connect the vacuum cleaner (with the battery installed) to its original charger and plug it into a power outlet. The battery indicator on the vacuum will show charging status.
3. **Installation:**
 - Ensure the vacuum cleaner is turned off and unplugged.
 - Locate the battery compartment on your BuTure VAC VC50 Blue cordless vacuum cleaner.
 - Align the battery with the compartment and slide it in until it clicks securely into place. Ensure a firm connection.

4. OPERATING THE BATTERY

The battery powers your BuTure VAC VC50 Blue cordless vacuum cleaner. Here's how to understand its operation:

- **Powering On/Off:** The battery is activated when installed correctly in the vacuum cleaner and the vacuum is turned on.
- **Battery Indicator:** The display on the battery (or vacuum cleaner, depending on model) will show the current charge level. Typically, multiple bars indicate a full charge, and fewer bars indicate a lower charge.
- **Charging:** When the battery level is low, connect the vacuum cleaner to its charger. The indicator will show charging progress. A full charge typically takes several hours.
- **Run Time:** The run time will vary based on the vacuum's power setting (e.g., ECO mode vs. MAX mode) and the type of cleaning.

5. MAINTENANCE

Proper maintenance will extend the life of your battery:

- **Regular Charging:** Do not let the battery completely drain before recharging. For optimal life, recharge it after each significant use.
- **Storage:** If storing the battery for an extended period (more than one month), charge it to approximately 50-60% and store it in a cool, dry place away from direct sunlight and extreme temperatures. Recharge it every 3-6 months to prevent deep discharge.
- **Cleaning:** Keep the battery contacts clean and free of dust or debris. Use a dry cloth to wipe them if necessary.
- **Temperature:** Avoid operating or charging the battery in extreme hot or cold environments. Optimal operating temperature is typically between 0°C and 40°C (32°F and 104°F).

6. TROUBLESHOOTING

If you encounter issues with your battery, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Battery not charging.	Charger not connected properly; faulty charger; battery too hot/cold; battery defect.	Ensure charger is securely connected to both the vacuum/battery and the power outlet. Try a different outlet. Allow battery to reach room temperature. If problem persists, contact support.
Battery not holding a charge / Short run time.	Battery not fully charged; battery degradation; vacuum cleaner issue.	Ensure battery is fully charged before use. If the battery is old, its capacity may have diminished. Test the vacuum with another battery if possible to rule out vacuum issues. (Note: Some users have reported issues with charge retention, ensure proper charging and storage practices are followed.)
Battery indicator not working.	Loose connection; internal fault.	Re-seat the battery firmly in the vacuum. If the issue continues, contact customer support.

If these solutions do not resolve your issue, please contact BuTure VAC customer support for further assistance.

7. SPECIFICATIONS

Feature	Detail
Model Name	VC50 blue
Brand	BuTure VAC
Battery Cell Composition	Lithium Ion
Voltage	100-240 Volts (Charger input, battery output voltage not specified but implied by vacuum model)
Number of Batteries	1 Nonstandard Battery (included)
Included Components	Battery

Feature	Detail
Product Dimensions	1 x 1 x 1 inches
Item Weight	15.3 ounces
Manufacturer	BuTure VAC

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your original BuTure VAC VC50 Blue cordless vacuum cleaner or visit the official BuTure VAC website. You can also contact their customer service directly for assistance with your battery.

BuTure VAC Store Link: [Visit the BuTure VAC Store on Amazon](#)

© 2024 BuTure VAC. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question