

IBELL YO2400

IBELL YO2400 High Pressure Washer User Manual

Model: YO2400 | Brand: IBELL

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your IBELL YO2400 High Pressure Washer. Please read this manual thoroughly before using the appliance and retain it for future reference.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions to reduce the risk of fire, electric shock, and personal injury. This appliance is designed for outdoor use and should not be used indoors.

- **Electrical Safety:** Ensure the power supply matches the voltage specified on the product label. Do not operate the pressure washer with a damaged cord or plug. Use only extension cords rated for outdoor use and appropriate for the appliance's power rating.
- **Water Connection:** Connect the pressure washer to a cold water supply only. Do not use contaminated water. Ensure all connections are secure to prevent leaks.
- **Personal Safety:** Wear appropriate personal protective equipment (PPE) such as safety glasses, hearing protection, and protective clothing. Never direct the spray at people, pets, or electrical equipment.
- **Operation:** Keep the work area clear of obstructions. Do not operate the pressure washer while standing in water. Always hold the spray gun firmly with both hands during operation.
- **Maintenance:** Disconnect the power supply before performing any maintenance or cleaning. Only use manufacturer-approved replacement parts.

3. PACKAGE CONTENTS

Verify that all items are present in the package before assembly. If any parts are missing or damaged, contact customer support.

- IBELL YO2400 High Pressure Washer Unit
- 3m Inlet Pipe

- 8m Outlet Hose
- Spray Gun
- Extension Rod
- Inlet Filter
- Tap Connector
- Bucket Filter
- Foam Bottle

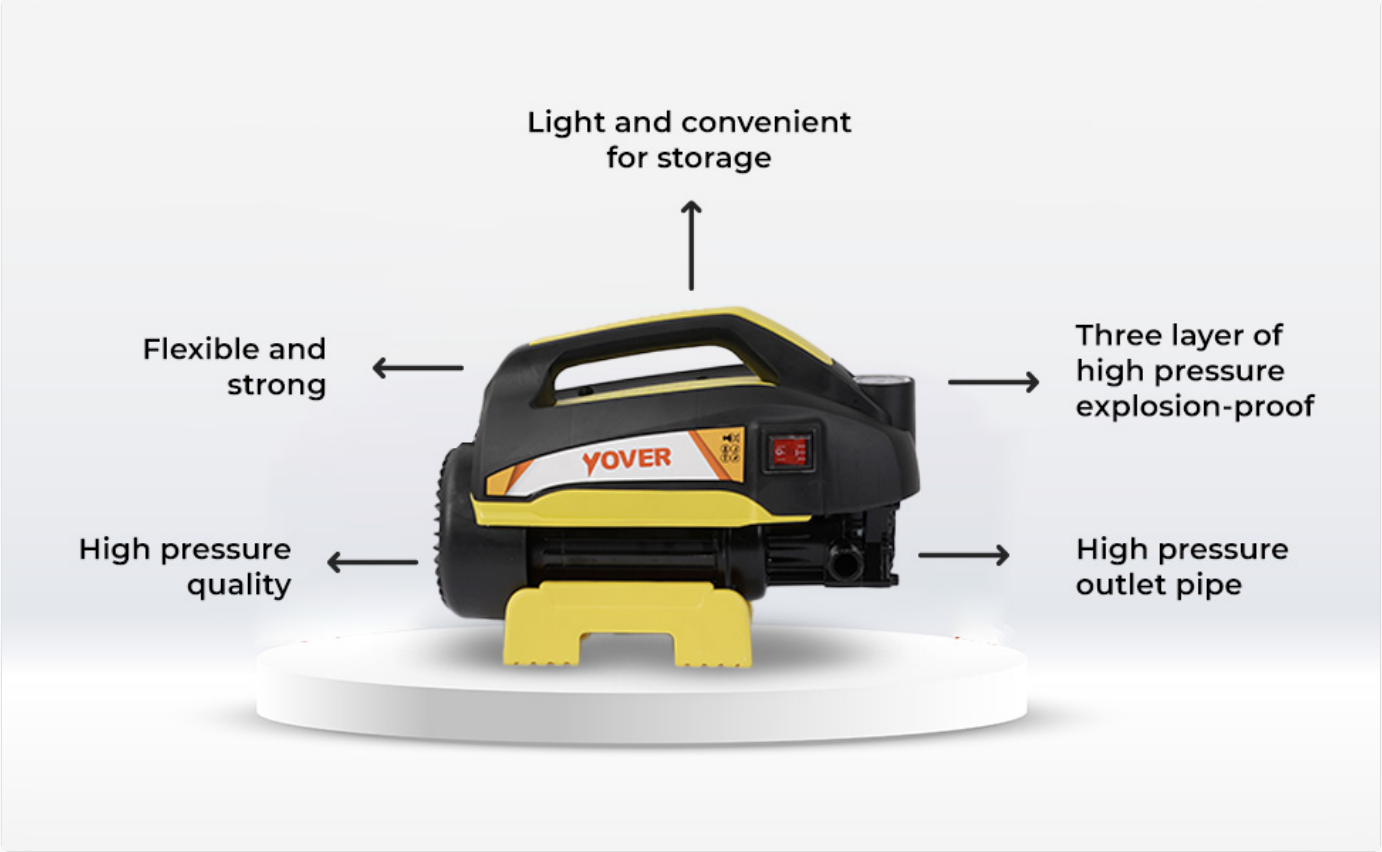


Image: All components included with the IBELL YO2400 High Pressure Washer, such as the main unit, hoses, spray gun, and various connectors.

4. SPECIFICATIONS

Feature	Specification
Brand	IBELL
Model Number	YO2400
Power Source	Corded Electric
Motor Power	2400W Induction Motor
Maximum Pressure	170 Bar
Maximum Flow Rate	11 Liters Per Minute
Hose Length	8 Metres
Item Weight	7 Kilograms

Product Dimensions (L x W x H)

30L x 30W x 30H Centimeters



Image: Overview of the IBELL YO2400 High Pressure Washer highlighting its core specifications.

HOW TO INSTALL



1. Attach inlet pipe to tap connector

or
Connect bucket filter if needed



2. Attach inlet pipe to inlet connector



3. Screw inlet filter onto main unit



4. Attach inlet connector to inlet filter



5. Push and screw the outlet hose pipe with the outlet connector



6. Turn ON machine without connecting hose pipe to gun to release air.



7. Attach outlet hose pipe to spray gun.



8. Connect spray gun extension rod to spray gun.



9. Attach nozzle to spraygun extension rod.



Connect : Water inlet quick connection link method



Wrong : There is a gap in the middle

Image: Dimensional drawing of the pressure washer unit.

5. SETUP AND ASSEMBLY

Follow these steps to correctly assemble and set up your IBELL YO2400 High Pressure Washer:

- 1. Connect Inlet Pipe:** Attach the 3m inlet pipe to the tap connector. If needed, connect the bucket filter to the inlet pipe.
- 2. Attach Inlet Connector:** Attach the inlet pipe to the inlet connector on the main unit.
- 3. Screw Inlet Filter:** Screw the inlet filter onto the main unit's inlet.
- 4. Connect Outlet Hose:** Push and screw the 8m outlet hose pipe with the outlet connector on the main unit.
- 5. Assemble Spray Gun:** Connect the extension rod to the spray gun, then attach the nozzle to the extension rod.
- 6. Connect Outlet Hose to Spray Gun:** Attach the other end of the 8m outlet hose pipe to the spray gun.
- 7. Purge Air:** Before turning on the machine, turn on the water supply and press the spray gun trigger to release any trapped air from the system until a steady stream of water emerges.

ACCESSORIES

- ♦ High pressure hose 8m
- ♦ Inlet Filter
- ♦ Foam Bottle
- ♦ 5m cable length
- ♦ 3m Inlet hose
- ♦ Inlet water connector
- ♦ Extension rode
- ♦ Spray Gun & Nozzle
- ♦ Tap connector



Image: Visual instructions for connecting the various parts of the pressure washer.

Your browser does not support the video tag.

Video: A short demonstration of the simple installation process for the IBELL YO2400 High Pressure Washer, showing how to connect the inlet pipe, outlet hose, and spray gun components.

6. OPERATION

Once assembled and connected to a water and power supply, your pressure washer is ready for use.

- **Power On:** Ensure the water supply is fully open, then switch on the pressure washer using the ON/OFF switch.
- **Adjust Nozzle:** The spray gun features an adjustable nozzle. Rotate the nozzle to change the spray pattern from a concentrated jet to a wide fan spray, depending on the cleaning task.
- **Apply Detergent (Optional):** Fill the foam bottle with appropriate pressure washer detergent. Attach the foam bottle to the spray gun to apply foam.
- **Cleaning:** Hold the spray gun firmly and direct the spray at the surface to be cleaned. Maintain a safe distance to avoid damaging the surface.
- **Power Off:** After use, turn off the pressure washer, then turn off the water supply. Squeeze the spray gun trigger to release any remaining pressure in the system before disconnecting hoses.

2400 Watts Motor & 170 Bar Pressure Water Flowing : 11 L / Min

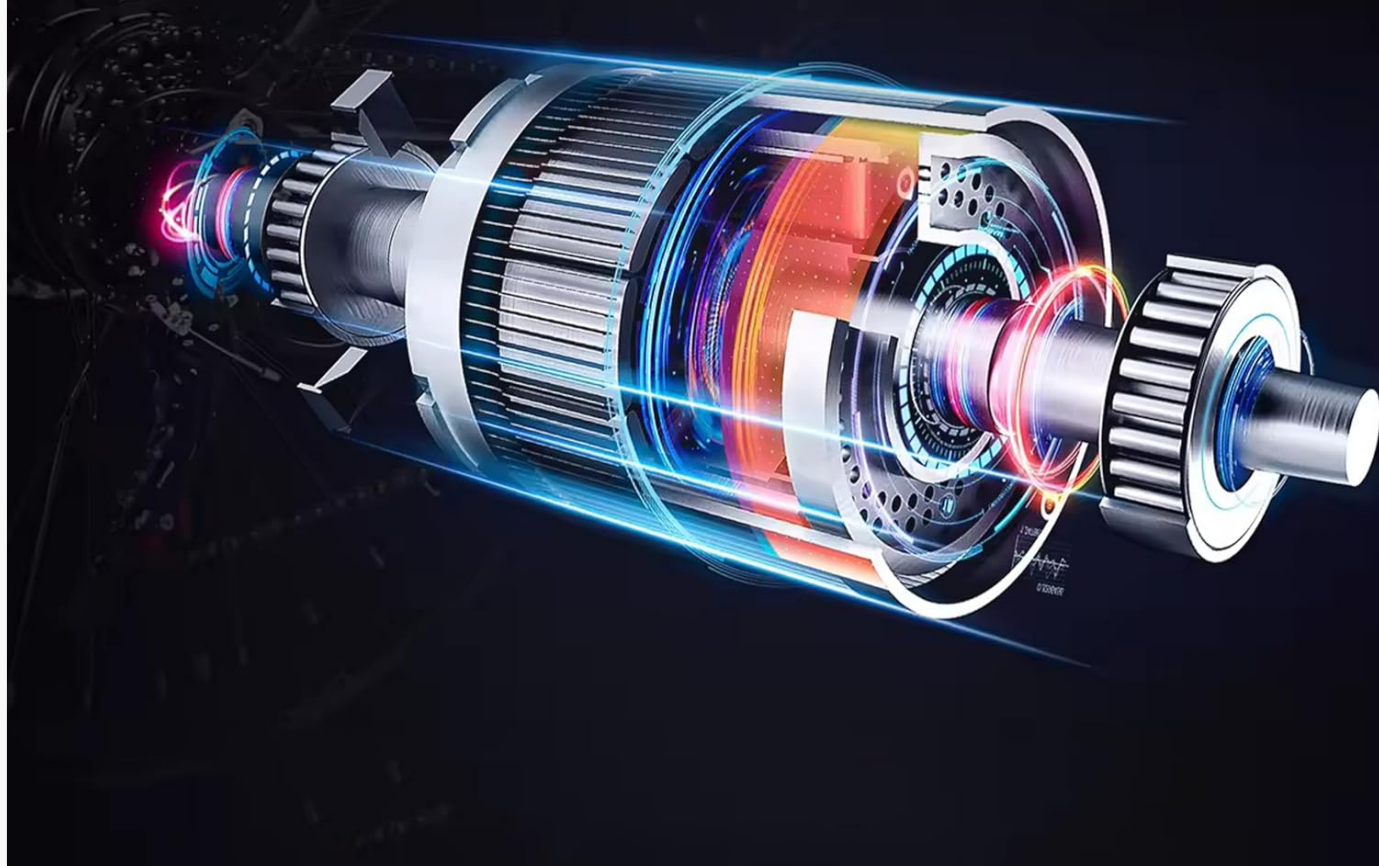


Image: The pressure washer in action, cleaning a vehicle.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your pressure washer.

- **Clean Filters:** Regularly check and clean the inlet filter and bucket filter to prevent debris from entering the pump.
- **Inspect Hoses and Connections:** Before each use, inspect hoses for kinks, cuts, or damage. Ensure all connections are tight.
- **Nozzle Cleaning:** If the nozzle becomes clogged, use the included nozzle cleaning tool (if applicable) or a thin wire to clear any obstructions.
- **Storage:** Store the pressure washer in a dry, frost-free environment. Drain all water from the pump and hoses before storing to prevent freezing damage.

8. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Motor does not start	No power supply, faulty switch, thermal overload activated	Check power connection, reset circuit breaker, allow motor to cool down
Low pressure	Insufficient water supply, clogged nozzle, air in pump, worn seals	Ensure full water flow, clean nozzle, purge air from system, contact service for seal replacement
Water leaks	Loose connections, damaged O-rings or seals	Tighten all connections, inspect and replace damaged O-rings/seals
Pulsating pressure	Air in pump, restricted water flow, clogged nozzle	Purge air, check water supply, clean nozzle

9. WARRANTY AND SUPPORT

Your IBELL YO2400 High Pressure Washer comes with a comprehensive warranty and dedicated customer support.

- **Warranty:** The product includes a 1-year warranty (6 months standard + 6 months additional warranty upon registration). Registration must be completed within 30 days from the date of purchase.
- **Support:** For any queries, technical assistance, or warranty claims, please contact IBELL customer service.

Importer/Packer Contact Information:

Matrix Store, XX/556, Sub Jail Road, Aluva, Kerala - 683101

Customer Service Support:

+91 98956 00055



Keep Your Trust in Aftercare Purchase.

Customer service support

 **+91 98956 00055**

To avail the full warranty, product registration must be completed within 30 days from the date of purchase.

Image: Customer support details for IBELL products.

© 2026 IBELL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question