

[Manuals.plus](#) /

› [SUNLIFER](#) /

› SUNLIFER Charcoal BBQ Grill User Manual (Model: Charcoal BBQ Grill)

SUNLIFER Charcoal BBQ Grill

SUNLIFER Charcoal BBQ Grill User Manual

Brand: SUNLIFER

Model: Charcoal BBQ Grill

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your SUNLIFER Charcoal BBQ Grill. Designed for outdoor cooking, this spacious barrel barbecue grill offers both grilling and smoking capabilities, complete with a side front table for convenience. Please read this manual thoroughly before assembly and operation to ensure proper usage and longevity of your grill.

SETUP AND ASSEMBLY

Before beginning assembly, ensure all parts are present and undamaged. Refer to the included parts list for verification. Assembly typically requires two people.

Unpacking and Inspection

- Carefully remove all components from the packaging.
- Inspect each part for any signs of damage. Contact customer support immediately if any parts are missing or damaged.
- Keep packaging materials until assembly is complete and the grill is confirmed to be in working order.

Choosing a Location

- Place the grill on a stable, level, non-combustible surface.
- Ensure adequate clearance from combustible materials (e.g., walls, fences, trees). Maintain a minimum distance of 10 feet from any structure.
- The grill is designed for outdoor use only. Do not operate indoors or in enclosed spaces.
- Consider wind direction to prevent smoke from blowing into living areas.



Figure 1: Grill dimensions and versatile storage solutions, including foldable front table and side shelf.

Mobility and Storage

The grill features two wheels and a sturdy handle for easy relocation. The foldable front table, side shelf, and bottom rack provide convenient storage for condiments, charcoal, and tools. When moving the grill, ensure the lid is securely closed and the ash pan is empty.

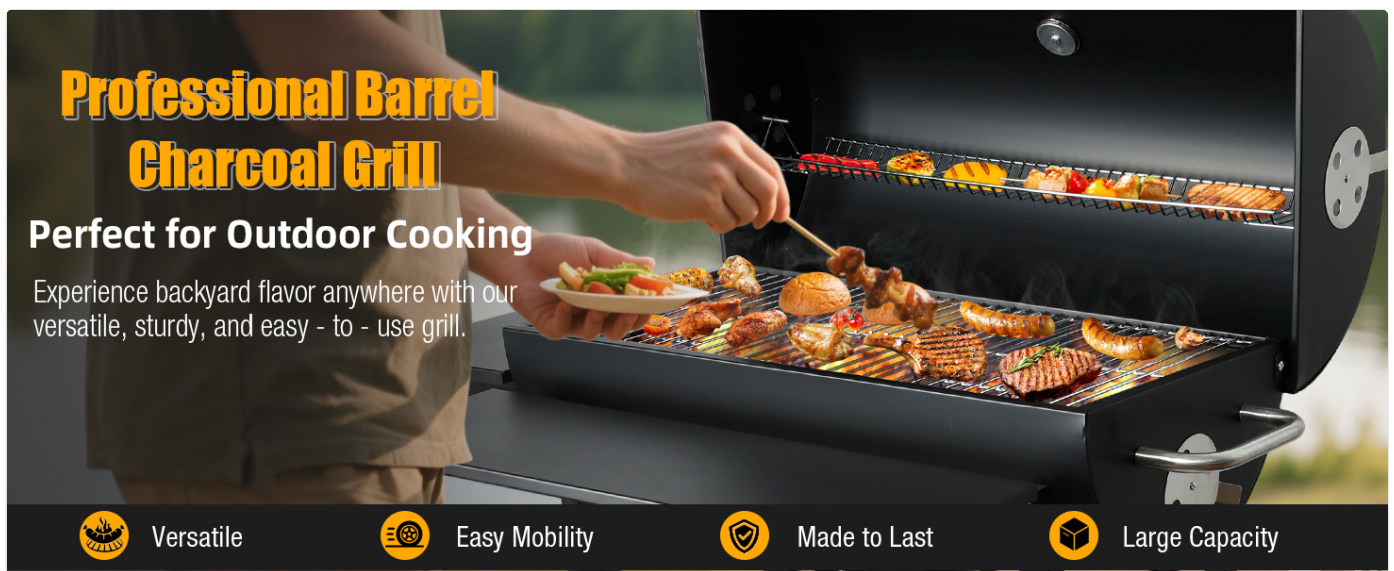


Figure 2: Demonstrates the grill's easy mobility with its integrated wheels and handle.

OPERATING INSTRUCTIONS

Charcoal Loading and Ignition

- Open the main cooking grill lid.
- Place charcoal on the main cooking grate. The lift-up grate allows for easy charcoal refills during cooking.
- Ignite the charcoal using appropriate fire starters. Allow charcoal to ash over before placing food on the grill.



Figure 3: The center-lift charcoal access grate facilitates easy refueling without removing the entire cooking rack.

Heat Control and Smoking

- Utilize the 4 adjustable air vents and the integrated thermometer to manage airflow and temperature.
- For smoking, add a foil water pan to the charcoal grill. The lid design and airflow system support effective smoking.
- The warming rack above the main grill keeps cooked food warm.



Figure 4: Adjustable chimney and multiple vents provide precise control over smoke and airflow.

Cooking Surface

The grill offers 589.32 sq. in. of total cooking space. The main cooking grill is suitable for direct grilling, while the warming rack can be used for indirect cooking or keeping food warm.



Figure 5: The grill provides ample cooking surface for various foods.

MAINTENANCE AND CARE

Ash Management

- The grill features an easy-clean ash holder for convenient ash removal.
- Regularly empty the ash holder to maintain optimal airflow and prevent buildup.
- Ensure the grill is completely cool before attempting to remove ash.



Figure 6: The removable ash pan simplifies the cleaning process.

Cleaning the Grates

- After each use, once the grill has cooled, clean the cooking grates with a grill brush to remove food residue.
- For stubborn residue, soak grates in warm, soapy water before scrubbing.

Exterior Care

- Wipe down the exterior surfaces with a damp cloth and mild detergent.
- Avoid abrasive cleaners that could damage the finish.
- Store the grill in a dry, covered area when not in use to protect it from weather elements.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Difficulty igniting charcoal	Insufficient airflow; damp charcoal; improper fire starter use.	Ensure air vents are open. Use dry charcoal. Follow fire starter instructions carefully.
Temperature too low/high	Air vents not adjusted correctly; too much/too little charcoal.	Adjust air vents to control heat. Add or remove charcoal as needed.
Excessive smoke	Improper wood chip usage; insufficient airflow.	Use appropriate amount of wood chips. Ensure proper ventilation through air vents.
Food sticking to grates	Grates not properly cleaned or oiled.	Clean grates thoroughly before use. Lightly oil grates before placing food.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	SUNLIFER
Model Name	Charcoal BBQ Grill
Product Dimensions (D x W x H)	26.1"D x 41.73"W x 37.55"H
Fuel Type	Charcoal
Cooking Surface Area	590 Square Inches
Material Type	Large Steel Grill (Frame: Alloy Steel, Handle: Stainless Steel)
Special Features	Adjustable Air Vent, Dual Function Grill & Smoker Combo, Easy Mobility (Wheels), Foldable Side Tables, Easy-Clean Ash Holder
Item Weight	19.14 Kilograms
Color	Black
Included Components	Lid, Thermometer, User Manual

WARRANTY INFORMATION

For detailed warranty information regarding your SUNLIFER Charcoal BBQ Grill, please refer to the warranty card included with your product packaging. This typically covers manufacturing defects for a specified period from the date of purchase. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, operation, or maintenance, or need to report a product issue, please contact SUNLIFER customer support. Contact details can typically be found on the product packaging or the official SUNLIFER website.

For further information, you may visit the official [SUNLIFER Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question