

## ProCase PC-08366193

# ProCase Joy-Con Grips for Nintendo Switch 2 (Model PC-08366193) Instruction Manual

Enhance your gaming experience with improved comfort and control.

## INTRODUCTION

This manual provides instructions for the ProCase Joy-Con Grips, designed specifically for the Nintendo Switch 2 (2025 Released). These grips are engineered to offer enhanced comfort, improved control, and protection for your Joy-Con controllers during gameplay.



*Image: ProCase Joy-Con Grips for Nintendo Switch 2.*

## COMPATIBILITY

The ProCase Joy-Con Grips are exclusively designed for the **Nintendo Switch 2 (2025 Released)**. They are not compatible with the original Nintendo Switch (2017) or the Nintendo Switch Lite (2019) models due to differences in controller dimensions.

# Compatibility



**Nintendo Switch 2 2025**



**Nintendo Switch 2017**



**Nintendo Switch Lite 2019**

*Image: Compatibility chart for ProCase Joy-Con Grips.*

## SETUP INSTRUCTIONS

1. **Identify Left and Right Grips:** The grips are designed for specific Joy-Con controllers. Ensure you have the correct grip for the left and right Joy-Con.
2. **Align Joy-Con:** Carefully align your Nintendo Switch 2 Joy-Con controller with the corresponding grip. The Joy-Con should slide smoothly into the grip's slot.
3. **Insert Joy-Con:** Gently slide the Joy-Con down into the grip until it clicks securely into place. Ensure it is fully seated and stable.
4. **Verify Fit:** Once inserted, confirm that the Joy-Con is firmly held within the grip and that all buttons, including the SL and SR buttons, are accessible and functional.
5. **Removal:** To remove the Joy-Con, locate the quick-release cutout on the back of the grip. Gently push the Joy-Con upwards from this cutout while holding the grip firmly.



*Image: Joy-Con insertion and grip dimensions.*

## OPERATING INSTRUCTIONS

The ProCase Joy-Con Grips are designed to enhance your gaming experience through ergonomic comfort and improved control.

- **Ergonomic Design:** The grips feature a curved back and an ergonomic shape that fits comfortably in hands of all sizes, reducing fatigue during extended gaming sessions.
- **Responsive Trigger Buttons:** The integrated trigger buttons are designed to easily activate the Joy-Con's SL and SR buttons, providing a responsive and lag-free gaming experience.
- **Secure and Shockproof:** The durable plastic construction provides robust protection against bumps, scratches, and dirt, while the secure fit prevents accidental disconnections.
- **Anti-Slip Pads:** Equipped with anti-slip rubber pads, the grips offer a firm and stable hold, preventing accidental drops and improving overall control.

# Seamless Control, Endless Comfort

Ideal for hands of all sizes, staying comfy for hours



*Image: Illustration of seamless control and comfort with the grips.*





*Image: Shockproof and secure grip features.*



*Image: Detailed features of the ProCase Joy-Con Grip.*

## MAINTENANCE

- **Cleaning:** To clean the grips, use a soft, dry cloth. For stubborn dirt, a slightly damp cloth with mild soap can be used, followed by thorough drying. Avoid abrasive cleaners or solvents.
- **Storage:** Store the grips in a cool, dry place away from direct sunlight and extreme temperatures to prevent material degradation.
- **Inspection:** Periodically inspect the grips for any signs of wear or damage. Discontinue use if significant damage is observed.

## TROUBLESHOOTING

- **Joy-Con does not fit:** Ensure you are using the grips with a Nintendo Switch 2 (2025 Released) Joy-Con. These grips are not compatible with older Switch models. Verify the Joy-Con is oriented correctly before insertion.
- **Buttons are unresponsive:** Check that the Joy-Con is fully seated and clicked into place within the grip. Ensure no debris is obstructing the trigger mechanisms. Remove and re-insert the Joy-Con to confirm proper alignment.
- **Grip feels loose:** If the grip feels loose after insertion, remove the Joy-Con and re-insert it, ensuring

it clicks firmly into place. If the issue persists, inspect the grip for any physical damage.

SPECIFICATIONS



Feature	Detail
Model Number	PC-08366193
Compatibility	Nintendo Switch 2 (2025 Released) Joy-Cons
Package Dimensions	6.26 x 4.17 x 3.46 inches
Item Weight	7 ounces
Material	Durable Plastic
Features	Ergonomic Design, Responsive Trigger Buttons, Anti-Slip Pads, Shockproof Protection, Quick Release Cutout

WARRANTY AND SUPPORT





ProCase products are manufactured with quality and customer satisfaction in mind. For warranty information, technical support, or any inquiries regarding your Joy-Con Grips, please refer to the contact information provided with your purchase or visit the official ProCase website. Please retain your proof of purchase for warranty claims.

© 2025 ProCase. All rights reserved.

Related Documents - PC-08366193

	<p><a href="#">ProCase Wireless Keyboard User Guide - Setup, Features, and Troubleshooting</a></p> <p>Comprehensive user guide for the ProCase Wireless Keyboard (Model K960), detailing setup, pairing, usage, troubleshooting, product specifications, LED indicators, and charging instructions.</p>
	<p><a href="#">ProCase EM-5007B Hearing Protector Declaration of Conformity</a></p> <p>Official Declaration of Conformity for ProCase EM-5007B Ear-Muffs, confirming compliance with EU PPE Regulation 2016/425 and harmonized standard EN 352-1. Issued by Guangdong J&amp;Y Industrial Co., Ltd.</p>

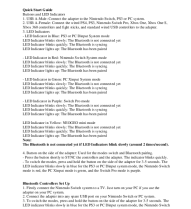

	<p><a href="#">Mayflash Magic NS Controller Adapter Quick Start Guide</a></p> <p>A comprehensive quick start guide for the Mayflash Magic NS Wireless Bluetooth Controller USB Adapter, detailing setup for Nintendo Switch, PC, and PS3 with various controllers, LED indicators, mode switching, and software updates.</p>
	<p><a href="#">Mayflash MAGIC-NS Lite USB Wireless Adapter User Manual</a></p> <p>Comprehensive user manual for the Mayflash MAGIC-NS Lite USB Wireless Adapter, covering setup, system and controller compatibility, mode switching, advanced features like vibration and dead zone adjustment, firmware updates, and troubleshooting.</p>
	<p><a href="#">Mayflash MAGIC-NS Wireless Controller Adapter User Manual</a></p> <p>User manual for the Mayflash MAGIC-NS Wireless Controller Adapter, detailing setup and usage for various gaming consoles including Nintendo Switch, PS3, PC, NEOGEO mini, and PS Classic. Covers wired and wireless controller connections, button mapping, and software updates.</p>
	<p><a href="#">MAYFLASH MAGIC-NS Lite USB Wireless Adapter User Manual</a></p> <p>User manual for the MAYFLASH MAGIC-NS Lite, a USB wireless adapter that enables connection of various Bluetooth controllers to Nintendo Switch, PC, PlayStation 3, macOS, and other systems. Includes setup, compatibility, mode switching, vibration, and dead zone adjustments.</p>