



[Manuals.plus](#) /

› [Joomer](#) /

› Joomer Christmas Net Lights SSL0360-N-29V User Manual

Joomer SSL0360-N-29V

Joomer Christmas Net Lights User Manual

Model: SSL0360-N-29V

1. INTRODUCTION

Thank you for choosing Joomer Christmas Net Lights. This product is designed to provide decorative illumination for outdoor and indoor spaces, featuring 360 LED lights arranged in a 12 ft x 5 ft mesh. The lights offer multiple lighting modes and a timer function for convenient operation. Please read this manual thoroughly before installation and use to ensure proper function and safety.



Image 1.1: Joomer Christmas Net Lights installed on a bush.

2. SAFETY INSTRUCTIONS

- Always unplug the lights from the power source before installation, maintenance, or when not in use.
- Ensure the power adapter is protected from direct water exposure, even though the lights themselves are waterproof.
- Do not attempt to repair or modify the product. Contact customer support for assistance.
- Avoid placing the lights near heat sources or flammable materials.
- Do not secure the wiring with staples or nails, as this can damage the insulation.
- Keep out of reach of children and pets.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Net Mesh String Lights (12 ft x 5 ft, 360 LED)
- 1 x US Adapter
- 1 x User Manual

4. SETUP INSTRUCTIONS

1. **Unpack the Lights:** Carefully remove the net lights from their packaging. Unroll the mesh and lay it flat

to untangle any wires.

2. **Positioning:** Place the net lights over the desired area, such as bushes, shrubs, or walls. The green wire design helps the lights blend seamlessly with foliage.
3. **Connect to Power:** Plug the US adapter into a suitable outdoor-rated power outlet. Ensure the connection is secure.



Image 4.1: Green wire net lights blend with natural foliage, while clear wire is more visible.



Image 4.2: The UL Listed plug features a misplug-proof design for safety.

5. OPERATING INSTRUCTIONS

The Joomer Christmas Net Lights feature a control button on the adapter for managing lighting modes and the timer function.

5.1. Changing Lighting Modes

Short press the button on the adapter to cycle through the 8 available lighting modes. The built-in memory chip will save your last selected mode, so you do not need to reset it daily.

5.2. Activating the Timer Function

To activate the timer, long press the button on the adapter for 3 seconds. A green light on the adapter will illuminate, indicating that the timer is active. Once activated, the lights will stay ON for 6 hours and then turn OFF for 18 hours, repeating this cycle automatically.

To deactivate the timer, long press the button again for 3 seconds until the green light turns off.



8 Lighting Modes + Timer Function (6hrs On, 18hrs Off)

- | | | |
|---------------|-----------------|-----------------|
| ① Combination | ④ Slo-glo | ⑦ Twinkle/Flash |
| ② In waves | ⑤ Chasing/Flash | ⑧ Steady on |
| ③ Sequential | ⑥ Slow fade | |



► Press here

Short press to Choose Modes

Long press 3s until the green lights on, that means timer activated

Image 5.1: Control button for selecting lighting modes and activating the timer.

6. LIGHTING MODES

The net lights offer 8 distinct lighting modes:

1. Combination
2. In Wave
3. Sequential
4. Slo-Glo
5. Chasing/Flash
6. Slow Fade
7. Twinkle/Flash
8. Steady On

7. CONNECTING MULTIPLE SETS

These net lights are designed for end-to-end connection, allowing you to cover larger areas. You can connect up to 3 sets of Joomer Christmas Net Lights together using the integrated connectors.



Image 7.1: End-to-end connection allows linking up to 3 sets.

8. WATERPROOFING

The net lights and their plug are designed to be waterproof (IP4X rated), making them suitable for outdoor use in various weather conditions. However, it is recommended to protect the power adapter from direct exposure to heavy rain or standing water to ensure longevity.



Image 8.1: The lights are waterproof for outdoor use, but protect the adapter.

9. MAINTENANCE

- **Cleaning:** Gently wipe the lights with a soft, dry cloth if they become dirty. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, carefully coil the net lights and store them in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the wires and bulbs for any damage. Discontinue use if any damage is found.

10. TROUBLESHOOTING

- **Lights not turning on:**
 - Ensure the power adapter is securely plugged into a working outlet.
 - Check if the power outlet is receiving power.
 - Verify that the connection between the lights and the adapter is secure.

- **Timer not working as expected:**

- Ensure the timer function is activated (green light on the adapter should be ON). Long press the button for 3 seconds to activate/deactivate.
- If using an external timer, ensure it does not conflict with the built-in timer.

- **Some lights are out:**

- LED lights are generally durable. If a few individual LEDs are out, the rest of the string should continue to function.
- If a large section is out, check for any visible damage to the wiring.

11. SPECIFICATIONS

Feature	Specification
Model Number	SSL0360-N-29V
Dimensions	12 ft x 5 ft (Net Mesh)
Number of LEDs	360
Light Color	Warm White
Wire Color	Green
Power Source	Corded Electric
Wattage	6 watts
Ingress Protection (IP) Rating	IP4X (Waterproof)
Control Method	Touch button on adapter
Connectable	Up to 3 sets

12. WARRANTY AND SUPPORT

Joomer offers a one-year warranty on these Christmas net lights. This includes a 12-month money-back guarantee. For any questions, concerns, or support needs, please contact Joomer customer service. Online responses are typically provided within 24 hours.

13. PRODUCT VIDEO

Your browser does not support the video tag.

Video 13.1: Official Joomer video demonstrating the net lights, including mode changes, timer function, and connection capabilities.

