

[Manuals.plus](#) /

› [WAMPAT](#) /

› WAMPAT TV Stand Cabinets for 110+ Inch TVs, Natural Oak User Manual

WAMPAT TV Stand Cabinets

WAMPAT TV Stand Cabinets for 110+ Inch TVs, Natural Oak User Manual

Model: TV Stand Cabinets

Brand: WAMPAT

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your WAMPAT TV Stand Cabinets. Please read this manual thoroughly before assembly and use to ensure proper function and safety.

SAFETY INFORMATION

To prevent serious injury or death from furniture tip-over, this product must be permanently attached to the wall with the anti-tip kit provided. Always ensure the TV stand is placed on a level and stable surface. Do not allow children to climb on or play with the TV stand.

Anti-tipping Furniture Straps

Protect your kids and pets

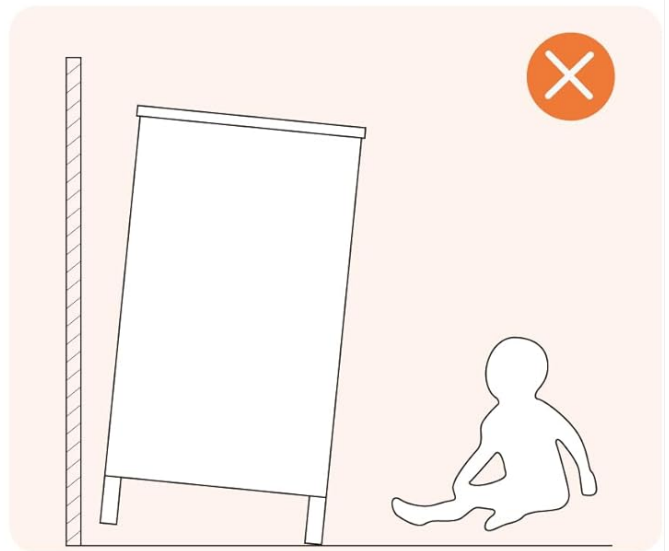
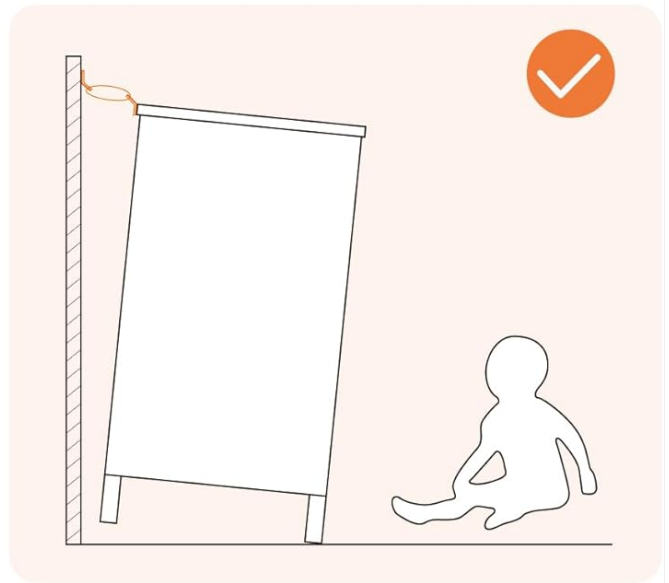
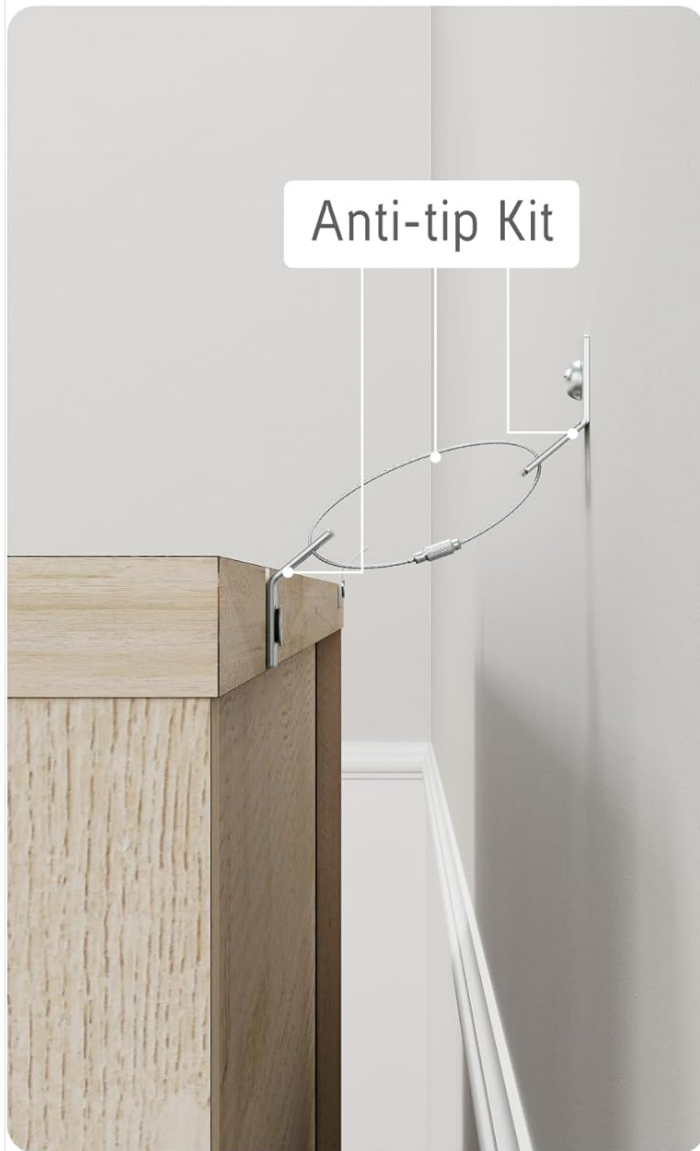


Image: Illustration demonstrating the installation of anti-tipping furniture straps to secure the TV stand to a wall, preventing accidental tip-overs. The diagram shows a secured cabinet and an unsecured cabinet tipping over.

PACKAGE CONTENTS

Before beginning assembly, verify that all parts are present and undamaged. This product is shipped in two packages.

- 6-drawer Dresser
- Set of 2 Cabinets
- Anti-tip Kits
- Assembly Manual
- Hardware Packs

Display Personality



Comes with 2 Packages

Image: A detailed diagram illustrating the dimensions of the TV stand's components, including the two side cabinets and the central six-drawer dresser. It also indicates that the product comes in two packages.

SETUP AND ASSEMBLY

The WAMPAT TV Stand Cabinets require assembly. Please follow the clear instructions provided in the included assembly manual. Each screw, pin, and panel is coded for easy identification and assembly progress.

1. Unpack all components and verify against the parts list in the assembly manual.
2. Identify all hardware using the provided codes.
3. Assemble the main frame of the 6-drawer dresser according to the manual's diagrams.
4. Assemble the two side cabinets, ensuring all panels are securely fastened.
5. Attach the solid wood legs to all three units.
6. Install the drawers and cabinet doors. Refer to the 'Troubleshooting' section for door adjustment if needed.
7. Secure the entire unit to the wall using the anti-tip kit as described in the 'Safety Information' section.

For optimal stability and to prevent scratches, each leg is equipped with non-slip pads.



Image: A composite image highlighting key construction details: smooth metal drawer slides for easy operation, a curved edge tabletop for safety and aesthetics, and sturdy solid wood legs providing stable support for the TV stand.

OPERATING INSTRUCTIONS

Your WAMPAT TV Stand is designed for versatile storage and display. It features a spacious tabletop, two side cabinets with six storage compartments, and a middle wide dresser with six sliding drawers.

- **Cabinet Use:** Open and close cabinet doors using the gold-coated knobs. The internal shelves can be used to store media, electronics, or other items.
- **Drawer Use:** The six sliding drawers provide ample storage. Note that for anti-tip safety, drawers can be pulled out approximately 7.48 inches (19 cm) at most.
- **TV Placement:** The tabletop is designed to accommodate flat-screen TVs up to 110+ inches wide. Ensure the TV's base is centered and stable on the stand.



Image: An overhead view of the dresser section of the TV stand with several drawers open, revealing neatly folded clothing and other items, demonstrating the storage capacity.



Smooth Metal Drawer Slides



Curved Edge Tabletop



Sturdy Wood Legs

Image: The side cabinets of the TV stand with doors open, showcasing various dishes, bowls, and kitchenware stored on the internal shelves, highlighting the versatile storage options.

MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Dusting:** Regularly dust the surfaces to prevent buildup.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary.
- **Avoid Moisture:** Protect the wood finish from excessive moisture and direct sunlight to prevent warping or fading.

TROUBLESHOOTING

This section addresses common issues you might encounter with your TV stand's cabinet doors.

Issue 1: Cabinet doors do not close correctly or are horizontally misaligned.

If the two doors cannot close properly or are misaligned horizontally:

1. Locate Screw A on the hinge (typically the screw closest to the cabinet frame).
2. To adjust the door's position to the left or right horizontally, turn Screw A counterclockwise or clockwise.
3. Once the door is correctly aligned and closes smoothly, tighten Screw A to secure the door in place.

Issue 2: The door is tilted, or the gap between two doors is uneven.

If the door appears tilted or the vertical gap between two doors is inconsistent:

1. Locate Screw A on both the top and bottom hinges.
2. Turn both Screw A counterclockwise or clockwise on each hinge to make the door properly aligned with an even gap. Adjust incrementally until desired alignment is achieved.

Issue 3: The gap between the two doors is too large.

If there is an excessive gap between the two cabinet doors when closed:

1. Locate Screw A on each hinge.
2. Turn Screw A counterclockwise or clockwise on each hinge so the doors can move to the middle position, thereby reducing the gap. Adjust both hinges equally for best results.

Issue 4: The hinges fall apart.

If a hinge detaches or becomes loose from the door or cabinet frame:

1. Push the hinges back into their correct position, ensuring they are properly seated.
2. Tighten Screw B (the screw that secures the hinge plate to the cabinet frame) to prevent the door from falling down.

SPECIFICATIONS

Brand	WAMPAT
Model	TV Stand Cabinets
Color	Natural Oak
Material	Engineered Wood
Special Feature	Anti-Tipping, Space Saving
Mounting Type	Floor Mount
Room Type	Bedroom, Home Office, Living Room, Playroom
Door Style	Flat Panel
Included Components	6-drawer Dresser, Anti-tip Kits, Assembly Manual, Hardware Packs, Set of 2 Cabinets
Finish Type	Wood
Shape	Rectangular
Number of Shelves	3

Number of Pieces	3
Base Type	Legs
Assembly Required	Yes
Number of Compartments	6
Item Weight	246 pounds
Product Dimensions (L x W x H)	118 x 15.4 x 32.4 inches



Image: A wide shot of the WAMPAT TV stand in a living room, featuring a large television mounted on the wall above it. The stand is adorned with decorative items, showcasing its aesthetic appeal and functionality.



Image: The WAMPAT TV stand repurposed as a sideboard in a dining or kitchen area, displaying a coffee machine, bottles, and glasses, demonstrating its versatility beyond just a TV console.



Image: The WAMPAT TV stand in a modern living room, positioned beneath a large wall-mounted television. The stand is decorated with vases and books, illustrating its role as a central entertainment and display unit.

WARRANTY AND SUPPORT

For any questions, concerns, or assistance with your WAMPAT TV Stand, please contact customer support. Refer to your purchase documentation for specific warranty details and contact information.

You may also visit the official WAMPAT store for additional product information and support: [WAMPAT Store](#)



© 2025 WAMPAT. All rights reserved.

This manual is for informational purposes only. WAMPAT reserves the right to make changes to products without prior notice.