

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Next](#) /

› [Next YE-65GFSG8-QLED 65-inch UHD 4K Google QLED TV User Manual](#)

Next YE-65GFSG8-QLED

Next YE-65GFSG8-QLED 65-inch UHD 4K Google QLED TV User Manual

Model: YE-65GFSG8-QLED

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Next YE-65GFSG8-QLED 65-inch UHD 4K Google QLED TV. Please read this manual thoroughly before using the television and retain it for future reference. Your new television combines QLED display technology with the Google TV operating system, offering a high-quality viewing experience and smart features.

2. IMPORTANT SAFETY INFORMATION

Always follow these basic safety precautions when operating your television:

- **Power Source:** Ensure the TV is connected to a power supply within the specified voltage range.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the TV for proper airflow.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on the TV.
- **Cleaning:** Unplug the TV from the power outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Placement:** Place the TV on a stable, level surface. Avoid placing it in direct sunlight or near heat sources.
- **Lightning:** During lightning storms or when unused for long periods, unplug the TV from the power outlet and disconnect the antenna.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are present in your TV package:

- Next YE-65GFSG8-QLED 65-inch UHD 4K Google QLED TV
- Remote Control
- Power Cable

- TV Stand (2 pieces) and Screws
- User Manual (this document)
- Quick Start Guide

4. SETUP

4.1 Physical Installation

You can install your TV on a stand or mount it on a wall. Ensure the TV is placed on a stable surface or securely mounted.



Image: TV Dimensions. This image illustrates the physical dimensions of the 65-inch television, including its width, height, and diagonal screen size of 164 cm (65 inches).

Stand Installation:

1. Carefully place the TV face-down on a soft, flat surface to prevent screen damage.
2. Attach the two stand pieces to the designated slots on the bottom of the TV.
3. Secure the stands with the provided screws.

4. Carefully lift the TV to its upright position on a stable surface.

Wall Mounting:

For wall mounting, use a VESA-compatible wall mount kit (sold separately) that matches the TV's VESA pattern. Follow the instructions provided with your wall mount kit. It is recommended to have professional assistance for wall mounting.

4.2 Connecting Peripherals

Connect your external devices to the appropriate ports on the back of your TV.



Image: Rear Panel Connections. This image displays the various input and output ports located on the back of the television, including HDMI, USB, DVB-S, DVB-T, CI Module, Mini AV-IN, Optical Out, and Ethernet.

- **HDMI (ARC):** Connect Blu-ray players, game consoles, or other HDMI devices. HDMI 1 supports Audio Return Channel (ARC).
- **USB (2x):** Connect USB storage devices for media playback.
- **DVB-S / DVB-T:** Connect satellite (DVB-S) or terrestrial (DVB-T) antenna cables.
- **CI Module:** Insert a Common Interface (CI) module for encrypted digital channels.
- **Mini AV-IN:** Connect older devices using an AV adapter cable.

- **Optical Out:** Connect to an external audio system for digital audio output.
- **Ethernet:** Connect an Ethernet cable for a wired internet connection.
- **Power:** Connect the power cable to the TV and then to a wall outlet.

4.3 Initial Power On and First-Time Setup

1. After connecting all cables, plug the power cord into an electrical outlet.
2. Press the power button on the remote control or on the TV.
3. The TV will guide you through the initial setup process, which includes:
 - Language selection
 - Connecting to Wi-Fi or Ethernet
 - Signing in with your Google Account (required for Google TV features)
 - Accepting terms and conditions
 - Channel scanning (for DVB-S/T)
4. Follow the on-screen instructions to complete the setup.

5. OPERATING YOUR TV

5.1 Remote Control Functions

The remote control allows you to navigate the TV's features. Familiarize yourself with its buttons:

- **Power:** Turns the TV on or off.
- **Google Assistant:** Activates voice commands.
- **Navigation Pad (Up/Down/Left/Right/OK):** Navigates menus and selects options.
- **Back:** Returns to the previous screen.
- **Home:** Accesses the Google TV home screen.
- **Volume +/-:** Adjusts the volume level.
- **Channel +/-:** Changes TV channels.
- **Input:** Selects input sources (HDMI, AV, etc.).
- **App Buttons:** Direct access to popular streaming applications.

5.2 Navigating Google TV Interface

Google TV organizes your entertainment with a personalized home screen. Content from your apps is brought together and organized for easy discovery.



Image: Google TV Interface. This image shows the main Google TV home screen with various streaming app icons and content recommendations, demonstrating the user interface.

- **Home Screen:** Displays personalized recommendations, installed apps, and quick access to content.
- **For You Tab:** Provides tailored content suggestions based on your viewing habits.
- **Live Tab:** Accesses live TV channels from integrated services.
- **Apps Tab:** Shows all installed applications. You can download more from the Google Play Store.
- **Library Tab:** Accesses your purchased or rented content from Google Play.

5.3 Picture and Sound Settings

To adjust picture and sound settings:

1. Press the **Settings** button (usually a gear icon) on your remote.
2. Navigate to **Display & Sound**.
3. **Picture Settings:** Adjust brightness, contrast, color, sharpness, and select picture modes (e.g., Standard, Vivid, etc.).

Movie, Game). Your QLED TV offers enhanced color saturation.

Image: QLED Color Saturation. This image visually demonstrates the high color saturation achieved with QLED technology, showing a vibrant and rich color display.



Image: HDR (High Dynamic Range). This image illustrates the visual impact of HDR, showcasing improved contrast and color detail in a scene when HDR is enabled versus when it is off.

4. **Sound Settings:** Adjust bass, treble, balance, and select sound modes (e.g., Standard, Music, Movie, Speech).

5.4 Network Settings

To connect your TV to the internet:

1. Press the **Settings** button on your remote.
2. Navigate to **Network & Internet**.
3. Select **Wi-Fi** to connect to a wireless network or ensure **Ethernet** is connected for a wired connection.
4. For Wi-Fi, select your network from the list and enter the password.

6. MAINTENANCE

6.1 Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry, lint-free cloth to gently wipe the screen and TV body.
- For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner (ensure it's safe for TV screens). Never spray cleaner directly onto the screen.
- Avoid using abrasive cleaners, waxes, or solvents.

6.2 Software Updates

Your TV may receive software updates to improve performance and add new features. It is recommended to keep your TV's software updated.

1. Ensure your TV is connected to the internet.
2. Press the **Settings** button on your remote.
3. Navigate to **System > About > System update**.
4. Select **Check for update**.
5. Follow the on-screen prompts to download and install any available updates.

7. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No power	Check if the power cord is securely plugged into the TV and the wall outlet. Ensure the outlet is working.
No picture, but sound is present	Check the input source. Ensure the connected device is turned on and functioning correctly.
No sound, but picture is present	Check the volume level and mute status. Verify audio cable connections for external devices. Check TV sound settings.
Remote control not working	Replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot connect to Wi-Fi	Ensure your Wi-Fi router is on and within range. Re-enter the Wi-Fi password carefully. Try restarting the TV and router.
Apps are slow or freezing	Close unused apps. Clear app cache (Settings > Apps > See all apps > [App Name] > Clear cache). Ensure a stable internet connection.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Technical specifications for the Next YE-65GFSG8-QLED 65-inch UHD 4K Google QLED TV:

- **Brand:** Next
- **Model Year:** 2025
- **Resolution:** 4K (3840x2160)
- **Display Technology:** QLED
- **Screen Size:** 65 inches (165 cm)
- **Aspect Ratio:** 16:9
- **Refresh Rate:** 60 Hz
- **Key Features:** Frameless Design
- **Connectivity:** Bluetooth, Ethernet, HDMI (ARC), USB (2x), Wi-Fi
- **Product Dimensions:** 27.8D x 144.6W x 88.9H cm

- **Weight:** 16.3 Kilograms
- **Operating System:** Google TV
- **Included Components:** Remote Control
- **Country of Origin:** Turkey

9. WARRANTY AND SUPPORT

Your Next YE-65GFSG8-QLED TV comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details.

For technical support, service requests, or further assistance, please contact Next customer service. Contact information can typically be found on the manufacturer's website or in the warranty documentation.

- **Online Support:** Visit the official Next website for FAQs, troubleshooting guides, and support contact details.
- **Service Centers:** For hardware issues, locate an authorized service center near you.