

Manuals.plus /

> SKMEI /

> SKMEI Digital Watch Men's, Men's Ultra-thin Digital Sports Watch LED Screen Super Waterproof Watch Men's Casual Stopwatch Alarm Clock Countdown Military Watch - 1888 User Manual

SKMEI 1888

SKMEI Digital Watch Model 1888 User Manual

Comprehensive guide for your SKMEI Digital Sports Watch

1. OVERVIEW

The SKMEI Digital Watch Model 1888 is an ultra-thin digital sports watch designed for men, featuring an LED screen and super waterproof capabilities. It combines style with functionality, offering various features for daily use and sports activities.





Figure 1: Front view of the SKMEI Digital Watch Model 1888, displaying time, date, and pedometer functions.

Key Features:

- **Dual Time Display:** Track time in two different zones simultaneously.
- **Chronograph & Stopwatch:** Precise timing for sports and activities.
- **Alarm Clock:** Set alarms for reminders or wake-up calls.
- **Date & Day of the Week:** Always stay updated with the current date and day.
- **LED Light:** Illuminates the screen for clear visibility in low-light conditions.
- **12/24-Hour Format:** Choose your preferred time display format.
- **Countdown Timer:** Useful for timed tasks.
- **3D Pedometer:** Tracks steps, calories, and distance.
- **Water Resistance:** Rated 5 ATM, suitable for hand washing, rain, and sweating.
- **Durable Construction:** Features a stainless steel strap and ABS case.

Key Features

Display

Digital

Dial Shape

Rectangle

Features

2 Time, Date, EL Light, Week

Strap Material

Stainless Steel

Water Resistance

50 m



Figure 2: Visual representation of key features including digital display, rectangle dial, 2 time, date, EL light, week, stainless steel strap, and 50m water resistance.

2. SETUP

2.1 Unboxing and Initial Inspection

Upon receiving your SKMEI Digital Watch, carefully open the packaging. Inspect the watch for any visible damage or defects. Ensure all components are present.



Figure 3: The SKMEI watch comes in a branded box, ensuring safe delivery and presentation.

2.2 Battery Information

The SKMEI Model 1888 watch uses a CR2025 button cell battery. The watch comes with a pre-installed battery. If the display is dim or not functioning, the battery may need replacement. Refer to the Maintenance section for battery replacement instructions.



Figure 4: Rear view of the watch case, indicating "WATER RESISTANT 3ATM", model "1888", and battery type "CR2025".

3. OPERATING INSTRUCTIONS

Your SKMEI Digital Watch features multiple buttons for various functions. Familiarize yourself with the button layout and their respective operations.

3.1 Button Functions

- **MODE Button (Bottom Left):** Cycles through different modes (Time, Chronograph, Alarm, Countdown, Dual Time, Pedometer).
- **LIGHT Button (Top Left):** Activates the LED backlight for the display.
- **START/STOP Button (Top Right):** Used to start/stop functions in Chronograph, Countdown, and adjust settings.
- **RESET/ADJUST Button (Bottom Right):** Used to reset values or confirm settings in various modes.



Figure 5: The watch display illuminated by the LED backlight, showing clear visibility in low light.

3.2 Setting Time and Date

1. In Time Mode, press and hold the **MODE** button until the seconds start flashing.
2. Press the **START/STOP** button to adjust the flashing value (seconds, hours, minutes, year, month, day).
3. Press the **RESET/ADJUST** button to move to the next setting.
4. Once all settings are adjusted, press the **MODE** button to exit setting mode.

3.3 Using the Chronograph (Stopwatch)

1. Press the **MODE** button repeatedly until you reach Chronograph Mode (indicated by "CHRONO" or similar icon).
2. Press the **START/STOP** button to start the stopwatch.
3. Press the **START/STOP** button again to pause the stopwatch.
4. Press the **RESET/ADJUST** button to reset the stopwatch to zero.

3.4 Setting the Alarm

1. Press the **MODE** button repeatedly until you reach Alarm Mode (indicated by "ALARM" or bell icon).
2. Press and hold the **START/STOP** button until the alarm hour flashes.
3. Use the **RESET/ADJUST** button to adjust the hour.
4. Press the **START/STOP** button to move to the minute setting.
5. Use the **RESET/ADJUST** button to adjust the minutes.
6. Press the **START/STOP** button to exit alarm setting.
7. To turn the alarm ON/OFF, press the **RESET/ADJUST** button in Alarm Mode.

3.5 Using the Pedometer

The watch features a 3D pedometer to track your steps, distance, and calories burned. Ensure the watch is worn securely on your wrist for accurate readings.

1. Press the **MODE** button until you reach Pedometer Mode (indicated by "STEP" or foot icon).
2. The display will show your current step count, distance (KM), and calories (KCAL).
3. The pedometer automatically resets at midnight.



Figure 6: The SKMEI watch worn on a wrist, demonstrating its fit and display visibility during use.

4. MAINTENANCE

4.1 Water Resistance

The SKMEI Digital Watch Model 1888 is water resistant to 5 ATM (50 meters / 165 feet). This means it is suitable for:

- Hand washing
- Rainy days
- Sweating

IMPORTANT: Do NOT press any buttons while the watch is submerged in water. It is NOT suitable for diving, swimming, snorkeling, or any water-related work where the watch would be continuously submerged or subjected to high-pressure water.

4.2 Cleaning Your Watch

To maintain the appearance of your watch, wipe it regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish.

4.3 Battery Replacement

The watch uses a CR2025 button cell battery. When the display becomes dim or the watch stops functioning, it's time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance. If attempting yourself, use a precision screwdriver to open the back case, carefully replace the battery, and ensure the gasket is properly seated before closing the case.

5. TROUBLESHOOTING

- **Watch display is blank or dim:**

This usually indicates a low battery. Replace the CR2025 battery. If the issue persists after battery replacement, contact customer support.

- **Time is inaccurate:**

Re-set the time following the instructions in Section 3.2. If the time continues to drift significantly, the watch module may require service.

- **Buttons are unresponsive:**

Ensure the watch is not in a locked mode (if applicable, though this model typically doesn't have one). If buttons remain unresponsive, there might be an internal issue. Avoid forcing buttons.

- **Water inside the watch:**

If moisture appears inside the watch, immediately stop using it and seek professional service. This indicates a breach in the water resistance seal, likely due to improper handling (e.g., pressing buttons underwater) or damage.

- **Pedometer not counting steps accurately:**

Ensure the watch is worn snugly on your wrist. Loose wearing can affect sensor accuracy. Movement patterns can also influence readings; consistent arm swings are best for step detection.

6. SPECIFICATIONS

Feature	Specification
Model Number	1888
Dial Diameter	39mm / 1.53 inch
Case Thickness	11mm / 0.43 inch
Band Width	20mm / 0.79 inch
Band Length	255mm / 10.04 inch
Wrist Weight	51g / 1.8oz
Watch Case Shape	Rectangular
Buckle Type	Buckle
Strap Material Type	Stainless Steel
Case Material	ABS
Water Resistance	5 ATM (50m / 165ft)
Battery Type	CR2025
Product Dimensions	9.06 x 0.79 x 1.46 inches



Figure 7: Diagram illustrating the dimensions of the SKMEI watch, including case height, strap/lug width, case width, strap material, and case thickness.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

SKMEI products are manufactured with high standards of quality. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or contact the retailer where the watch was purchased. Typically, warranties cover manufacturing defects but do not cover damage caused by misuse, accidents, or unauthorized repairs.

7.2 Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact SKMEI customer support or the authorized dealer from whom you purchased the watch. Provide your model number (1888) and a detailed description of the issue for efficient service.

