

Teka MW FS20 G BK

TEKA MW FS20 G BK Microwave with Grill User Manual

Model: MW FS20 G BK | Brand: Teka

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your TEKA MW FS20 G BK Microwave with Grill. Please read this manual thoroughly before using the appliance and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Do not use corrosive chemicals or vapors in this appliance.
- Ensure the appliance is properly grounded.
- Always use microwave-safe cookware. Metal containers or dishes with metallic trim are not suitable for microwave cooking.
- Never operate the microwave when empty.

SETUP AND INSTALLATION

Follow these steps for proper setup of your microwave oven:

1. **Unpacking:** Carefully remove all packaging materials and accessories. Inspect the oven for any damage such as dents or a broken door. Do not install if damaged.
2. **Placement:** Place the microwave on a flat, stable surface that can support its weight and the heaviest food likely to

be cooked in it. Ensure adequate ventilation space around the appliance (minimum 20 cm above, 10 cm at the rear, and 5 cm on each side).

3. **Power Connection:** Plug the power cord into a standard grounded electrical outlet. Ensure the voltage matches the rating label on the appliance.

4. **Turntable Installation:**

- Place the roller ring inside the oven cavity.
- Place the glass turntable on top of the roller ring, ensuring it sits securely in the center.
- For grill function, place the metal grill rack on the turntable.



Image: Angled view of the TEKA MW FS20 G BK Microwave with Grill, showing its black finish and control panel.

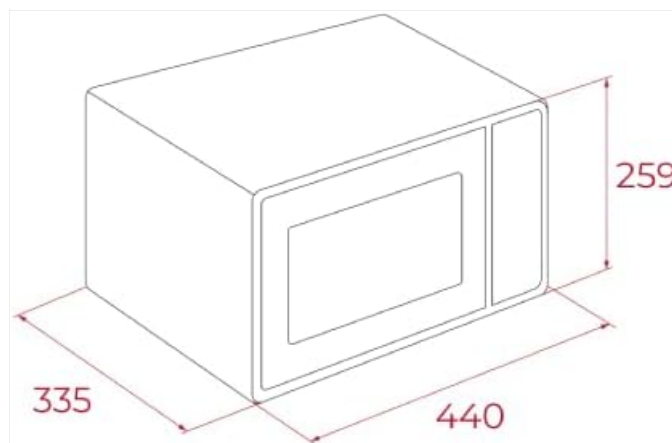


Image: Diagram illustrating the dimensions of the microwave oven in millimeters (width 440, depth 335, height 259).

OPERATING INSTRUCTIONS

Your TEKA MW FS20 G BK microwave features intuitive mechanical controls for easy operation.



Image: Front view of the microwave, highlighting the two mechanical control knobs on the right side.

Control Panel Overview:

- **Upper Knob (Power/Function Selector):** Used to select the desired cooking power level (5 levels available) or the grill function.
- **Lower Knob (Timer/Defrost Selector):** Used to set the cooking time (0-35 minutes) or select defrost by time or weight.

Microwave Cooking:

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Turn the **Upper Knob** to select the desired microwave power level (e.g., High, Medium-High, Medium, Medium-Low, Low).
4. Turn the **Lower Knob** to set the cooking time (up to 35 minutes). The oven will start automatically once the timer is set.
5. When the set time expires, the oven will sound a signal and turn off.

Grill Function:

The 1000W grill allows for browning and crisping of food. Use the included grill rack for best results.

1. Place food on the grill rack, which should be placed on the glass turntable.
2. Close the oven door securely.
3. Turn the **Upper Knob** to the grill symbol.
4. Turn the **Lower Knob** to set the desired grilling time.
5. Monitor food closely to prevent over-browning.

Defrost Function (by Time or Weight):

This function allows for precise defrosting of frozen foods.

1. Place the frozen food in a microwave-safe container on the turntable.
2. Close the oven door securely.
3. Turn the **Upper Knob** to the defrost symbol (often combined with a power level or indicated separately).
4. Turn the **Lower Knob** to select either defrost by time or defrost by weight. Follow the markings on the knob for appropriate settings (e.g., 0.2kg, 0.5kg, 1.0kg for weight, or specific time ranges).
5. Periodically check the food and turn it over if necessary to ensure even defrosting.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Before Cleaning:** Always unplug the appliance from the power outlet.
- **Oven Interior:** Wipe the interior cavity after each use with a damp cloth. For stubborn stains, use a mild detergent. Avoid abrasive cleaners or scouring pads.
- **Oven Exterior:** Clean the exterior surface with a soft, damp cloth. Do not allow water to enter the ventilation openings.
- **Door and Door Seals:** Clean the door, door seals, and adjacent parts carefully with a damp cloth to remove any spills or splatters.
- **Glass Turntable and Roller Ring:** These can be washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Grill Rack:** Wash the grill rack in warm soapy water.

TROUBLESHOOTING

If you encounter any issues with your microwave, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Oven will not start.	Power cord not securely plugged in. Door not closed properly. Fuse blown or circuit breaker tripped.	Ensure power cord is plugged in. Close door firmly. Check household fuse/circuit breaker.
Food not heating.	Incorrect power level or cooking time set. Door not closed properly.	Adjust power level and cooking time. Ensure door is fully closed.
Turntable not rotating.	Turntable or roller ring not correctly positioned. Food too large or heavy.	Reposition turntable and roller ring. Reduce food quantity or size.
Sparks or arcing inside oven.	Metal or foil used in the oven. Food splatters on oven walls.	Remove any metal objects. Clean oven interior thoroughly.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Teka
Model Number	MW FS20 G BK (112280007)

Feature	Detail
Capacity	20 Liters
Microwave Power	700 W
Grill Power	1000 W
Power Levels	5
Timer	0-35 minutes
Special Functions	Defrost by Time and Weight, Turntable
Product Dimensions (W x D x H)	440 mm x 335 mm x 259 mm
Weight	10.8 Kilograms
Color	Black
Components Included	TEKA MW FS20 G 20L Grill Microwave Black, Grill Rack, Glass Turntable, Roller Ring

WARRANTY AND SUPPORT

Your TEKA microwave oven is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical assistance, service, or to inquire about replacement parts, please contact Teka customer support through their official website or the contact information provided in your product documentation.

Online Support: Visit the official Teka website for FAQs and support resources.

© 2025 Teka. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question